Redstone Systems, Inc

REP Series IP Phone

REP1300

User Manual

Document Version: 01

Release Date: 2025-06-16





Directory

Dir	rectory	3
1	Picture	8
2	Table	12
3	Safety Instruction	
4	Overview	14
	4.1 Overview	14
	4.2 Hardware Description	
	4.3 Packing Contents	
5	Desktop Installation	16
	5.1 PoE and the use of external power adapters	16
	5.2 Desktop and wall mounted method	
6	Appendix Table	
	6.1 Appendix I - Icon	
	6.2 Appendix II - Keyboard character query table	
	Appendix III –LED Definition	
7	Introduction to the User	
	7.1.1 REP1300	
	7.2 Using Handset / Hands-free Speaker / Headphone	
	7.3 Idle Screen	
	7.4 Phone Status	
	7.5 Web Management	
	7.6 Network Configurations	
	7.7 SIP Configurations	30
8	Basic Function	
	8.1 Making Phone Calls	
	8.2 Answering Calls	
	8.2.1 Talking	
	8.2.2 Make / Receive Second Call	34
	8.3 End of the Call	35
	8.4 Redial	35
	8.5 Dial-up Query	36
	8.6 Auto-Answering	36
	8.7 Callback	38
	8.8 Mute	38

	8.8.1	Mute the Call	39
	8.8.2	Ringing Mute	39
	8.9 Call	Hold/Resume	39
	8.10 DND)	40
	8.11 Call	Forward	42
	8.12 Call	Transfer	43
	8.12.1	Blind transfer	43
	8.12.2	Semi-Attended transfer	44
	8.12.3	Attended transfer	44
	8.13 Call	Waiting	45
	8.14 Conf	Perence	46
	8.14.1	Local Conference	46
	8.14.2	Network Conference	47
	8.15 Call	Park	47
	8.16 Pick	Up	48
	8.17 Anor	nymous Call	49
	8.17.1	Anonymous Call	49
	8.17.2	Ban Anonymous Call	50
	8.18 Hotli	ine	51
	8.19 Emer	rgency Call	52
9	Advance F	unction	54
	9.1 BLF	(Busy Lamp Field)	54
	9.1.1	Configure the BLF Functionality	54
	9.1.2	Use the BLF Function	55
	9.2 BLF	List	56
	9.3 Reco	ord	57
	9.3.1	Local Record (USB flash disk)	57
	9.3.2	Server Record	57
	9.3.3	SIP INFO Record	58
	9.4 Agen	nt	58
	9.5 Interes	com	60
	9.6 MCA	AST	60
	9.7 SCA	(Shared Call Appearance)	61
		sage	
	9.8.1	SMS	64
	9.8.2	MWI (Message Waiting Indicator)	65
	9.9 SIP I	Hotspot	66
10	Phone Sett	ings	69
-		g	

10.1 Basic	Settings	S	69
10.1.1	Langu	Jage	69
10.1.2	Time	& Date	69
10.1.3	Scree	en	71
10.	1.3.1	Brightness and backlight	71
10.	1.3.2	Screen Saver	72
10.1.4	Ring .		72
10.1.5	Voice	Volume	72
10.1.6	Greet	ing Words	73
10.1.7	Reboo	ot	73
10.2 Phone	Book .		73
10.2.1	Local	Contact	73
10.:	2.1.1	Add / Edit / Delete Contact	74
10.:	2.1.2	Add / Edit / Delete Group	74
10.	2.1.3	Browse and Add / Remove Contacts in Group	75
10.2.2	Blackl	list	75
10.2.3	Cloud	l Phone Book	76
10.	2.3.1	Configure Cloud Phone book	76
10.	2.3.2	Downloading Cloud Phone book	77
10.3 Call L	.og		77
10.4 Funct	ion Key	7	78
10.5 Wi-Fi			80
10.6 Heads	set		80
10.6.1	Wired	l Headset	80
10.6.2	EHS I	Headset	81
10.6.3	Blueto	ooth Headset	81
10.7 Advar	nced		82
10.7.1	Line C	Configurations	82
10.7.2	Netwo	ork Settings	83
10.	7.2.1	Network Settings	83
10.	7.2.2	QoS & VLAN	85
10.	7.2.3	VPN	85
10.	7.2.4	Web Server Type	86
10.7.3	Set Th	he Secret Key	87
10.7.4	Mainte	enance	88
10.7.5	Firmw	vare Upgrade	91
10.7.6	Facto	ry Reset	93
Web Config	guration	ns	94

11

	11.1 Web Page Authentication	94
	11.2 System >> Information	94
	11.3 System >> Account	94
	11.4 System >> Configurations	94
	11.5 System >> Upgrade	95
	11.6 System >> Auto Provision	95
	11.7 System >> Tools	95
	11.8 System >> Reboot Phone	95
12	Network >> Basic	96
	12.1 Network >> Service Port	96
	12.2 Network >> VPN	96
	12.3 Network >> Advanced	97
	12.4 Line >> SIP	97
	12.5 Line >> SIP Hotspot	102
	12.6 Line >> Dial Plan	102
	12.7 Line >> Action Plan	104
	12.8 Line >> Basic Settings	105
	12.9 Phone settings >> Features	105
	12.10 Phone settings >> Media Settings	109
	12.11 Phone settings >> MCAST	110
	12.12 Phone settings >> Action	110
	12.13 Phone settings >> Time/Date	110
	12.14 Phone settings >> Tone	111
	12.15 Phone settings >> Advanced	112
	12.16 Phonebook >> Contact	112
	12.17 Phonebook >> Cloud phonebook	113
	12.18 Phonebook >> Call List	114
	12.19 Phonebook >> Web Dial	114
	12.20 Phonebook >> Advanced	114
	12.21 Call Log	114
	12.22 Function Key >> Function Key	115
	12.23 Function Key >> Side Key	115
	12.24 Function Key >> Softkey	116
	12.25 Function Key >> Advanced	117
	12.26 Application >> Manage Recording	117
	12.27 Security >> Web Filter	117
	12.28 Security >> Trust Certificates	118
	12.29 Security >> Device Certificates	118

	12.30	Security >> Firewall	. 119
	12.31	Device Log >> Device Log	. 120
13	Trou	ble Shooting	. 121
	13.1	Get Device System Information	. 121
	13.2	Reboot Device	. 121
	13.3	Reset Device to Factory Default	. 121
	13.4	Screenshot	. 121
	13.5	Network Packets Capture	. 122
	13.6	Get Log Information	. 123
	13.7	Common Trouble Cases	. 123

1 Picture

Picture 1 - Device installation	17
Picture 2 - Wall-mounted installation	17
Picture 3 - Connecting to the Device	18
Picture 4 - Instruction of Keypad of REP1300	25
Picture 5 - Screen layout/default home screen	27
Picture 6 - Scroll icon	28
Picture 7 - The Phone status	28
Picture 8 - WEB phone status	29
Picture 9 - Landing page	29
Picture 10 - Phone line SIP address and account information	31
Picture 11 - Web SIP registration	31
Picture 12 - Default line	32
Picture 13 - Enable voice channel dialing	32
Picture 14 - Open the voice channel and dial the number	33
Picture 15 - Call number	33
Picture 16 - Answering calls	33
Picture 17 - Talking interface	34
Picture 18 - The second call interface	34
Picture 19 - Two way calling	35
Picture 20 - Redial set	36
Picture 21 - Line 1 enables auto-answering	37
Picture 22 - The line has enabled auto-answering	37
Picture 23 - Web page to start auto-answering	37
Picture 24 - Set the callback key on the phone	38
Picture 25 - Set the callback key on the web page	38
Picture 26 - Mute the call	39
Picture 27 - Ringing mute	39
Picture 28 - Call hold interface	40
Picture 29 - Enable DND	40
Picture 30 - DND setting interface	40
Picture 31 - DND timer	41
Picture 32 - DND Settings	41
Picture 33 - Line DND	41
Picture 34 - Select the line to set up call forwarding	42
Picture 35 - Select call forward type	42
Picture 36 - Enable call forwarding and configure the call forwarding number	43

Picture 37 - Set call forward	43
Picture 38 - Transfer interface	44
Picture 39 - Semi-Attended transfer	44
Picture 40 - Attended transfer	44
Picture 41 - Call waiting setting	45
Picture 42 - Web call waiting setting	45
Picture 43 - Web call waiting tone setting	46
Picture 44 - Local conference setting	46
Picture 45 - Local conference (1)	46
Picture 46 - Local conference (2)	47
Picture 47 - Network conference	47
Picture 48 - Phone set call park	48
Picture 49 - WEB set call park	48
Picture 50 - Phone pick up setting	49
Picture 51 - WEB pick up setting	49
Picture 52 - Enable anonymous call	50
Picture 53 - Enable Anonymous web page call	50
Picture 54 - Anonymous call log	50
Picture 55 - Anonymous calls are not allowed on the phone	51
Picture 56 - Page Settings blocking anonymous call	51
Picture 57 - Phone hotline setting interface	51
Picture 58 - Hotline set up on webpage	52
Picture 59 - Set up an emergency call number	52
Picture 60 - Dial the emergency number	53
Picture 61 - Web page configuration BLF function key	54
Picture 62 - Phone configuration BLF function key	54
Picture 63 - Configure the BLF List functionality	56
Picture 64 - BLF List number display	56
Picture 65 - Local Record	57
Picture 66 - Web server recording	58
Picture 67 - Web SIP info recording	58
Picture 68 - Configure the agent account in normal mode	59
Picture 69 - Configure the proxy account-hotel Guest mode	59
Picture 70 - Agent logon page	60
Picture 71 - Web Intercom configure	60
Picture 72 - Multicast Settings Page	61
Picture 73 - Register BroadSoft account	62
Picture 74 - Set BroadSoft server	62

Picture 75 - Enable SCA	63
Picture 76 - Set Private Hold Function Key	63
Picture 77 - SMS icon	65
Picture 78 - New Voice Message Notification	65
Picture 79 - Voice message interface	66
Picture 80 - Configure voicemail number	66
Picture 81 - Register SIP account	67
Picture 82 - SIP hotspot server configuration	68
Picture 83 - SIP hotspot client configuration	68
Picture 84 - Phone language setting	69
Picture 85 - Language setting on Web page	69
Picture 86 - Set time & date on phone	70
Picture 87 - Set time & date on webpage	70
Picture 88 - Set screen parameters on phone	71
Picture 89 - Page screen Settings	72
Picture 90 - Phone screen saver	72
Picture 91 - Phone book screen	73
Picture 92 - Local Phone book	74
Picture 93 - Add New Contact	74
Picture 94 - Group List	75
Picture 95 - Browsing Contacts in a Group	75
Picture 96 - Add Contacts in a Group	75
Picture 97 - Add Blacklist	76
Picture 98 - Web Blacklist	76
Picture 99 - Cloud phone book list	77
Picture 100 - Downloading Cloud Phone book	77
Picture 101 - Browsing Contacts in Cloud Phone book	77
Picture 102 - Call Log	78
Picture 103 - Filter call record types	78
Picture 104 - DSS LCD key Page Configuration Screen	79
Picture 105 - DSS settings	79
Picture 106 - WIFI settings	80
Picture 107 - Headset function settings	81
Picture 108 - EHS Headset setting	81
Picture 109 - Bluetooth Settings Screen	82
Picture 110 - SIP address and account information	82
Picture 111 - Configure Advanced Line Options	83
Picture 112 - Network mode Settings	83

Picture 113 - DHCP network mode	83
Picture 114 - PPPoE network mode	84
Picture 115 - Static IP network mode	84
Picture 116 - IPv6 Static IP network mode	85
Picture 117 - The phone configures the web server type	87
Picture 118 - Keypad lock password	87
Picture 119 - Set keyboard lock password	87
Picture 120 - Phone keypad lock password input interface	88
Picture 121 - Web keyboard lock password Settings	88
Picture 122 - Page auto provision Settings	88
Picture 123 - Phone auto provision settings	89
Picture 124 - Web page firmware upgrade	91
Picture 125 - Firmware upgrade information display	91
Picture 126 - Firmware upgrade	93
Picture 127 - Service Port Settings	96
Picture 128 - Dial plan settings	102
Picture 129 - Custom setting of dial - up rules	103
Picture 130 - Dial rules table (1)	104
Picture 131 - Dial rules table (2)	104
Picture 132 - Tone settings on the web	112
Picture 133 - Web cloud phone book Settings	114
Picture 134 - Global Key Settings	117
Picture 135 - Web Filter settings	117
Picture 136 - Web Filter Table	118
Picture 137 - Certificate of settings	118
Picture 138 - Device certificate setting	119
Picture 139 - Network firewall Settings	119
Picture 140 - Firewall Input rule table	120
Picture 141 - Delete firewall rules	120
Picture 142 - Screenshot	122
Picture 143 - Web capture	122

2 Table

Table 1 - Hardware Datasheet	1.4
Table 2 - Hardware Interface Description	
Table 3 - Keypad Icons	
Table 4 - Status Prompt and Notification Icons	
Table 5 - DSSKEY Icon	
Table 6 - Look-up Table of Characters	
Table 7 - DSS KEY LED State	
Table 8 - Instruction of Keypad of REP1300	
Table 9 - Talking mode	
Table 10 - BLF Function key subtype parameter list	
Table 11 - Agency mode	
Table 12 - Intercom configure	
Table 13 - MCAST Parameters on Web	
Table 14 - LED Status of SCA	
Table 15 - SIP hotspot Parameters	
Table 16 - Time Settings Parameters	
Table 17 - QoS & VLAN	
Table 18 - Auto Provision	
Table 19 - Firmware upgrade	
Table 20 - Service port	
Table 21 - Line configuration on the web page	
Table 22 - Phone 7 dialing methods	102
Table 23 - Dial - up rule configuration table	
Table 24 - IP camera	104
Table 25 - Set the line global configuration on the web page	105
Table 26 - General function Settings	105
Table 27 - Voice settings	109
Table 28 - Multicast parameters	110
Table 29 - Time&Date settings	110
Table 30 - Function Key configuration	115
Table 31 - Softkey configuration	116
Table 32 - Network Firewall	119
Table 33 - Trouble Cases	123

3 Safety Instruction

Please read the following safety notices before installing or using this unit. They are crucial for the safe and reliable operation of the device.

- Please use the external power supply that is included in the package. Other power supply may cause damage to the phone and affect the behavior or induce noise.
- Before using the external power supply in the package, please check the home power voltage.
 Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it because it may
 cause fire or electric shock.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- This phone is designed for indoor use. Do not install the device in places where there is direct sunlight.
 Also do not put the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposure the phone to high temperature or below 0°C or high humidity.
- Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth
 that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place. You are in a situation that could cause bodily injury.
 Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

4 Overview

4.1 Overview

REP series include high-end enterprise DSS intelligent display color screen phone, which greatly improve enterprise production efficiency with advanced design, high cost performance, paperless office tool. It is not only a desktop phone, but also an elegant article that puts in the sitting room or office.

REP series, Redstone enterprise IP phones, which are the latest generation of IP phone, inheriting many excellent features, such as high-definition voice, headphones and high-performance echo cancellation full duplex speaker, fast / gigabit Ethernet, QoS, encryption transmission, automatic configuration, new system, smooth operation, flat interface settings and many other advantages.

For enterprise users, REP series are the cost-effective office equipment, while realizing environmental protection, they also provide convenient operation. Users can flexibly configure and define the functions of two DSS keys, space saving and cost. It will be an ideal choice for enterprise users and family users who pursue the high quality and high efficiency.

In order to help some interested users better understand the details of the product, this user manual can be used as a reference guide for the use of REP series. This document may not be applicable to the latest version of the software. If you have any questions, you can use the help prompt interface of the device phone, or download and update your user manual from the official website.


4.2 Hardware Description


Hardware info of REP 1300 Phone:

Table 1 - Hardware Datasheet


Hardware	REP1300
Screen	Color-Screen
Sub-Screen	No
Side key	Yes
USB	No
DSSKEY LED	Yes

 4.3 Packing Contents

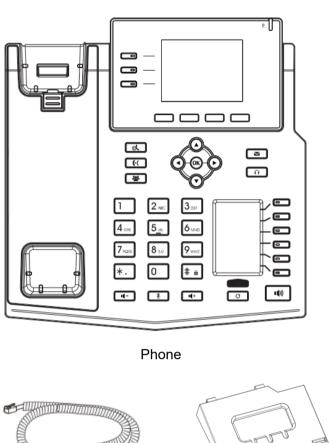



Handset

 




Receiver cable

Stand

 Network cable





Power adapter (Optional)

Hanging bracke (Need another purchase)

5 Desktop Installation

5.1 PoE and the use of external power adapters

The devices support two power supply modes from external power adapter or over Ethernet (PoE) complied switch.


PoE power supply saves the space and cost of providing the device additional power outlet. With a PoE switch, the device can be powered through a single Ethernet cable which is also used for data transmission. By attaching UPS system to PoE switch, the device can keep working at power outage just like traditional PSTN telephone which is powered by the telephone line.

For users who do not have PoE equipment, the traditional power adaptor should be used. If the device is connected to a PoE switch and power adapter at the same time, the power adapter will be used in priority and will switch to PoE power supply once it fails.

Please use the power adapter supplied by Redstone and the PoE switch met the specifications to ensure the device to work properly.


5.2 Desktop and wall mounted method

The device supports two installation modes, desktop and wall mounted. If the phone is on the desktop, please follow the instructions in the picture below to install the phone.

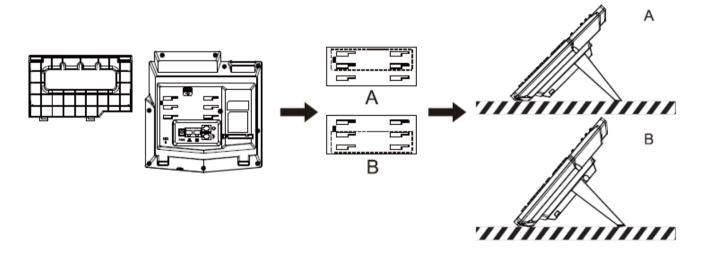


Picture 1 - Device installation

If the phone is mounted on the wall, please follow the instructions below to install it.

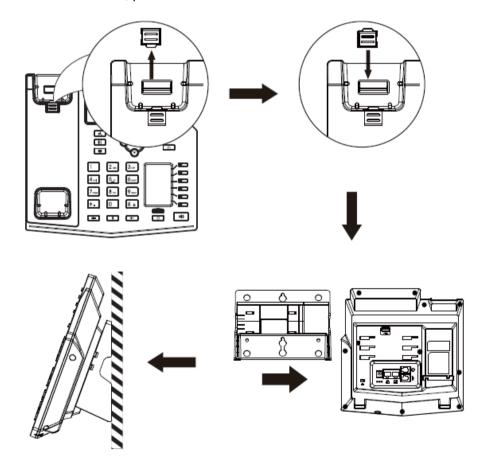

Picture 2 - Wall-mounted installation

Connect the power adapter, network, PC, phone and earphone to the appropriate port as shown in the picture below.

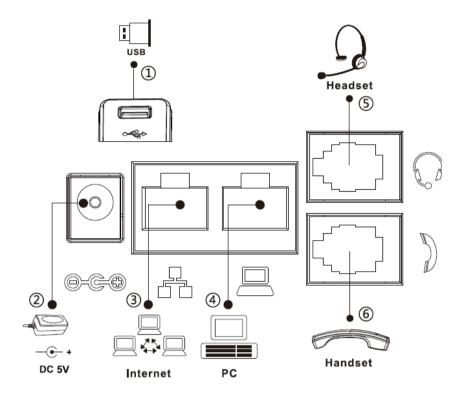

Picture 3 - Connecting to the Device

Table 2 - Hardware Interface Description

Index	Interface	Description	Note
1	USB Port	Connecting USB Disk and USB WIFI Adapter	REP1300 does not support
	USB POIL	Connecting OSB Disk and OSB WIFT Adapter	this port
2	Power Port	Connecting Power Adapter	
3	Network Port	Connecting to LAN or Internet	
4	PC Port	Network Interface for Connecting Computer	
5	Headset Port	Connecting Headset	
6	Receiver Port	Connecting Microphone Receiver	

6 Appendix Table

6.1 Appendix I - Icon

Table 3 - Keypad Icons

Icon	Description	
U	Redial	
m	Phone Book	
□ (3))	Hands-free (HF) speaker	
Æ	Mute Microphone (During Call)	
· (-	Volume down	
4+	Volume up	
ø	Hold	
n	Headset	
Σ	MWI	
垫	Conference	
(-(Transfer	

Table 4 - Status Prompt and Notification Icons


Screen Icon	Description	
>>>>	Call out	
((🛜))	Call in	
	Call Hold	
"	Network Disconnected	
"型	Open VLAN	
10	Open VPN	
*	Keypad Locked	
(+	Call forward calls	

.	Outgoing calls	
4	Incoming calls	
×	Missed calls	
	SMS	
00	New voice message waiting	
OND O	Do-Not-Disturb inactivated on Phone	
(-	Call forward activated	
A	Auto-answering activated	
	Hands-free (HF) Mode	
· ·	Headphone (HP) Mode	
©	Handset (HS) Mode	
<u>¥</u>	Mute Microphone	
ad	The Voice quality of calling	
ô	The Voice encryption of calling	
HD	Speech High Definition	
•	Record	
(, [[] 1,)	SIP Hotspot	
*	Bluetooth	
	Wi-Fi	

USB Insert
USB overload

Table 5 - DSSKEY Icon

DSSKEY Icon	Side key Icon	Description
G	&	BLF/New call
Q	હ	BLF/XFER
&	ود	BLF/AXFER
	***	BLF/Conference
•	e.	BLF/DTMF
Ω	&	Presence
<u> </u>	مه	Voice Message
0	٠	Speed Dial
		Intercom
Ca	<i>6</i> y	Call Park
G	(-	Call Forward
0	Ø	Keyevent
e	Ø	URI
	=	BLF List
	Ħ	MCAST Paging

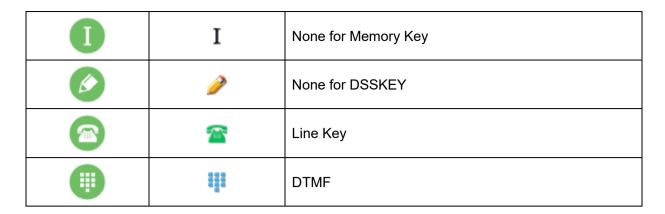

6.2 Appendix II - Keyboard character query table

Table 6 - Look-up Table of Characters

Mode Icon	Text Mode	Key Button	Characters Of Each Press
		1	1
		2	2
		3	3
		4	4
		5	5
123	Numeric	6	6
120	Numenc	7	7
		8	8
		9	9
		0	0
		*	*.+
		#	#
		1	@:;()<>
		2	a b c
		3	d e f
		4	g h i
		5	jkl
l La	Lower Case	6	m n o
abc	Alphabets	7	pqrs
		8	t u v
		9	wxyz
		0	(space)
		*	.,*/+-:_=
		#	# ^!&\$%

		1	@:;()<>
		2	ABC
		3	DEF
		4	GHI
		5	JKL
ADO	Upper Case	6	MNO
ABC	Alphabets	7	PQRS
		8	TUV
		9	WZYX
		0	(space)
		*	.,*/+-:_=
		#	# ^!&\$%
		1	1
		2	2 a b c A B C
		3	3 d e f D E F
		4	4 g h l G H l
		5	5 j k I J K L
0.0	Mixed type input	6	6 m n o M N O
2aB		7	7 p q r s P Q R S
		8	8 t u v T U V
		9	9 w z y x W Z Y X
		0	0
		*	.,*/+-:_=
		#	# ^!&\$%


Appendix III –LED Definition

Table 7 - DSS KEY LED State

Туре	LED Light	State
	Off	Line inactive
	Green On	Line ready (Registered)
	Green Blinking	Ringing
Line Key	Red Blinking	Line is trying to register
	Red Blinking	Line error (Registration failure)
	Red On	Dialing/Line in use (Talking)
	Yellow Blinking	Call holding
	Green On	Subscription number is idle.
BLF	Red On	Subscription number is busy.
DLF	Red On	Subscription number is dialing.
	Off	Subscription number is unavailable.
	Green On	Subscription number is idle.
Presence	Red On	Subscription number is busy.
Presence	Red On	Subscription number is dialing.
	Off	Subscription number is unavailable.
DND	Red On	Enable DND
DND	Off	Disable DND
MWI	Green Blinking	New voice message waiting
IVIVVI	Off	No new voice message

7 Introduction to the User

7.1.1 REP1300

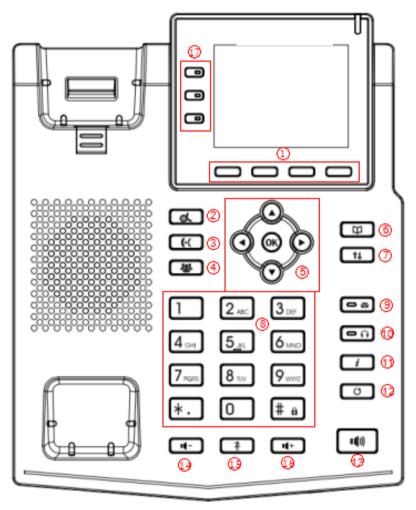

Picture 4 - Instruction of Keypad of REP1300

Table 8 - Instruction of Keypad of REP1300

Number	The keypad names	Instruction
	Soft-menu	These four buttons provide different functions corresponding to the
(1)	Buttons	soft-menu displayed on the screen.
② Hold Key	Hold Koy	Press the "Hold" key during the call, the user can hold the call, and press it
	Hold Key	again to cancel the holding and restore the normal call state.
3	① Transfer Key	Press the "Transfer" button, the user can transfer the current call to other
(3) Transfer Key	Transier Key	numbers.
	Conference	Press the "Conference" button, the user can initiate a three-party
(4)		conference.

(5)	Navigate/OK	The user can press the up/down navigation key to change the line or move the cursor in the screen list. On some Settings and text editing pages, the user can press the left/right navigation key to change options or move the	
	Keys	cursor in the screen list to the left/right. OK key: Default is equivalent to soft button confirmation; user can customize the function.	
6	voice mail	Press the "voice mail" button, and the user enters the interface of SMS and voice mail list.	
7	Headset Key	Users can press this key to open the headset	
8	Standard Telephone Keys	The 12 standard telephone keys provide the same function as standard telephones, but further to the standard function, some keys also provide special function by long-pressing the key, Key # - Long-pressed to lock the phone.	
9	Contact Key	Press the "Contact" key, the user can enter the address book interface and select the contact person to call.	
10	Call Log Key	Press the "Call Log" button and the user can see the incoming/outgoing calls.	
11)	Status key	The user can press this key to view the status information of the device	
12	Redial	Press the Redial key to redial the last number dialed	
13	Hands-free Key	The user can press this key to open the audio channel of the speakerphone.	
0	Volume Down Key	In the standby state, ring and ring configuration interface, press this button to reduce the ring volume; Press this button to lower the volume on the call or volume adjustment screen.	
(3	Mute Key	During a call, the user can press this key to mute the microphone.	
0	Volume Up Key	In the standby state, ring and ring configuration interface, press this button to increase the ring volume; Press this button to increase the volume on the call or volume adjustment screen.	
0	Side Key	Long press the side key to enter the settings interface and set the required functions.	

7.2 Using Handset / Hands-free Speaker / Headphone

■ Using Handset

To talk over handset, user should lift the handset off the device and dial the number, or dial the number first, then lift the handset and the number will be dialed. User can switch audio channel to handset by lifting the handset when audio channel is turned on in speaker or headphone.

■ Using Hands-free Speaker

To talk over hands-free speaker, user should press the hands-free button then dial the number, or dial the number first then press the hands-free button. User can switch audio channel to the speaker from handset by pressing the hands-free button when audio channel is opened in handset.

■ Using Headphone

To use headphone, by default, user should headset button which is defined by DSS key to turn on the headphone. Same as handset and hands-free speaker, user can dial the number before or after the headphone is turned on.

■ Using Line Keys (Defined by DSS Key)

User can use line key to make or answer a call on specific line. If handset has been lifted, the audio channel will be opened in handset. Otherwise, the audio channel will be opened in hands-free speaker or headphone.

7.3 Idle Screen



Picture 5 - Screen layout/default home screen

The image above shows the default standby screen, which is the user interface most of the time.

The upper half of the home screen shows the status of the device, information and data that can be edited (such as voice messages, missed calls, auto answer, do not disturb, lock status, network connection status, etc.).

The lower half of the area are the function menu keys, which are also the first layer of function menu keys, through which users can operate the phone.

Users can restore the phone to the default standby screen interface by picking up and dropping the handle. The left and right part of the area shows default configuration of Side keys, which dynamically display the configuration of SIP information, message, headset, etc., which can be customized by users.

The icon description is described in 6.1 appendix I.

In some screens, there are many items or long text to be displayed which could not fit into the screen. They will be arranged in a list or multiple lines with a scroll bar. If the user sees a scroll bar, he can use up/down navigator buttons to scroll the list. By long-pressed the navigator keys, user can scroll the list or items in a faster speed.



Picture 6 - Scroll icon

7.4 Phone Status

The phone status includes the following information about the phone:

Network Status:

VLAN ID

IPv4 or IPv6 status

IP Address

Network Mode

• The Phone Device Information:

Mac Address

Phone Mode

Hardware Version number

Software Version number

Phone Storage (RAM and ROM)

System Running Time

• SIP Account Information:

SIP Account

SIP Account Status (register / uncommitted / trying / time out)

TR069 Connect Status (Displays only in the phone interface state)

The user can view the phone status through the phone interface and the web interface.

• Phone interface: When the phone is in standby mode, press **[Menu]** >> **[Status]** and select the option to view the corresponding information, as shown in the figure:



Picture 7 - The Phone status

WEB interface: Refer to <u>7.5 Web management</u> to log in the phone page, enter the 【System】 >>
 【Information】 page, and check the phone status, as shown in the figure:



Picture 8 - WEB phone status

7.5 Web Management

Phone can be configured and managed on the web page of the phone. The user needs to enter the IP address of the phone in the browser and open the web page of the phone firstly. The user can check the IP address of the phone by pressing [Menu] >> [Status].



Picture 9 - Landing page

Users must correctly enter the user name and password to log in to the web page. The default user name and password are "admin". For the specific details of the operation page, please refer to page 11 Web configuration.

7.6 Network Configurations

The device relies on IP network connection to provide service. Unlike traditional phone system based on a circuit switched wire technology, IP devices are connected to each other over the network and exchange data in packet basis based on the devices' IP address.

To enable this phone, you must first correctly configure the network configuration. To configure the network, users need to find the phone function menu button [Menu] >> [Advanced Settings] >> [Network] >> [Network].

The default password for advanced Settings is "123".

NOTICE! If user saw a "WAN Disconnected' icon flashing in the middle of screen, it means the network cable was not correctly connected to the device's network port. Please check the cable is connected correctly to the device and to the network switch, router, or modem.

The device supports three types of networks, $\,$ IPv4/IPv6/IPv4&IPv6

There are three common IP configuration modes about IPv4

- Dynamic Host Configuration Protocol (DHCP) This is the automatic configuration mode by getting
 network configurations from a DHCP server. Users don't need to configure any parameters manually. All
 configuration parameters will be getting from DHCP server and applied to the device. This is
 recommended for the most users.
- Static IP Configuration This option allows user to configure each IP parameters manually, including IP Address, Subnet Mask, Default Gateway, and DNS servers. This is usually used in a technical environment of network users.
- PPPoE This option is often used by users who connect the device to a broadband modem or router. To
 establish a PPPoE connection, user should configure username and password provided by the service
 provider.
 - The device is default configured in DHCP mode.
 - There are three common IP configuration modes about IPv6
- DHCP This is the automatic configuration mode by getting network configurations from a DHCP server.
 Users need not to configure any parameters manually. All configuration parameters will be getting from DHCP server and applied to the device. This is recommended for most users.
- Static IP configuration this option allows users to manually configure each IP parameter, including IP address, mask, gateway, and primary and secondary domains. This usually applies to some professional network user environments.

Please see 10.7.2.1 network Settings for detailed configuration and use.

7.7 SIP Configurations

A line must be configured properly to be able to provide telephony service. The line configuration is like a virtualized SIM card on a mobile phone which stores the service provider and the account information used for registration and authentication. When the device is applied with the configuration, it will register the device to the service provider with the server's address and user's authentication as stored in the configurations. The user can conduct line configuration on the interface of the phone or the webpage, and input the corresponding information at the registered address, registered user name, registered password and SIP user and registered port respectively, which are provided by the SIP server administrator.

Phone interface: To manually configure a line, the user can press the line key for a long time, or press the button in the function menu [Menu] >> [Advanced Settings] >> [Accounts] >> [Line n] configuration, click ok to save the configuration.


NOTICE! User must enter correct PIN code to be able to advanced settings to edit line configuration. (The default PIN is 123)

The parameters and screens are listed in below pictures.



Picture 10 - Phone line SIP address and account information

WEB interface: After logging into the phone page, enter [Line] >> [SIP] and select SIP for configuration, click apply to complete registration after configuration, as shown below:

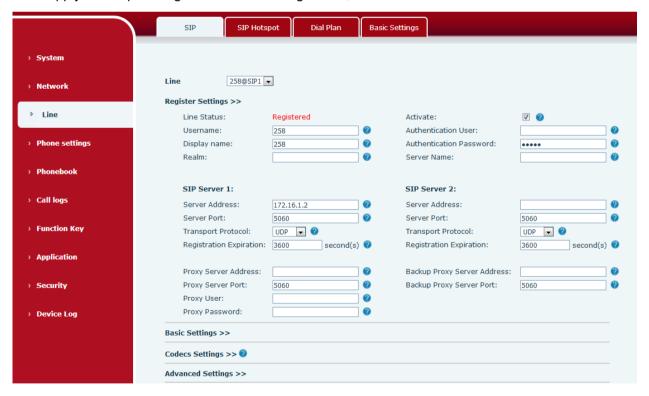

Picture 11 - Web SIP registration

8 Basic Function

8.1 Making Phone Calls

■ Default Line

The device provides twenty line services. If both lines are configured, user can make or receive phone calls on either line. If default line is configured by user, there will be a default line to be used for making outgoing call which is indicated on the top left corner. To change the default line, user can press left/right navigator buttons to switch between two lines. Enable or disable default line, user can press [Menu] >> [Features] >> [General] >> [Default Line] or configure from Web Interface (Web / PHONE / Features / Basic Settings).



Picture 12 - Default line


■ Dialing Methods

User can dial a number by,

- Entering the number directly
- Selecting a phone number from phonebook contacts (Refer to 10.2.1 Local contacts)
- Selecting a phone number from cloud phonebook contacts (Refer to 10.2.3 Cloud Phone Book)
- Selecting a phone number from call logs (Refer to 10.3 Call Log)
- Redialing the last dialed number

Dialing Number then Opening Audio

To make a phone call, user can firstly dial a number by one of the above methods. When the dialed number is completed, user can press [**Dial**] button on the soft-menu, or press hand-free button to turn on the speaker or headphone, or lift the handset to call out with the current line, or user can press line key(Configured by DSS Keys) to call out with specified line.

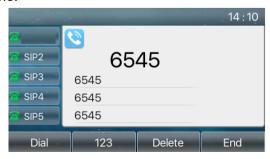

Picture 13 - Enable voice channel dialing

Opening Audio then Dialing the Number


Another alternative is the traditional way to firstly open the audio channel by lifting the handset, then turn on the hands-free speaker or headphone by pressing hands-free button, or line key, and then dial the number with one of the above methods. When completing the number dial, user can press [**Dial**] button or [**OK**] button to call out, or the number can also be dialed out automatically after timeout.



Picture 14 - Open the voice channel and dial the number

■ Cancel Call


While calling the number, user can stop the audio channel by putting back the handset or pressing the hands-free button to drop the call.

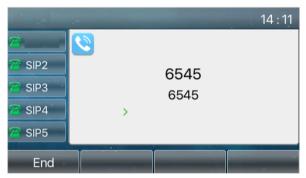

Picture 15 - Call number

8.2 Answering Calls

When there is an incoming call while the device is idle, user will see the following incoming call on the screen.

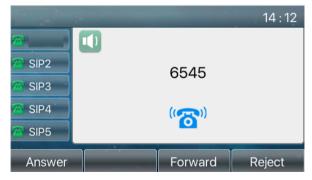

Picture 16 - Answering calls

User can answer the call by lifting the handset, open headphone or speaker phone by pressing the hands-free button, or the [Answer] button. To divert the incoming call, user should press [**Divert**] button. To

reject the incoming call, user should press [Reject] button.

8.2.1 Talking

When the call is connected, user will see a talking mode screen as the following figure.



Picture 17 - Talking interface

Table 9 - Talking mode

Number	Name	Description
1	Default line	The line currently used by the phone.
2	Voice channel	The icon shows the voice channel mode being used.
3	Calls to end	The name or number of the person on the other end of the call.
4	Call duration	The duration of a call after it has been established.
5	Numbers of line	Shows how many calls are present on the current device
6	Speech quality	Displays the current voice quality of the call.
7	HD audio	Call using G.722 voice coding calls when displayed HD voice icon.

8.2.2 Make / Receive Second Call

The device can support up to two concurrent calls. When there is already a call established, user can still answer another incoming call on either lines or make a second call on either lines.

■ Second Incoming Call

When there is another incoming call during talking a phone call, this call will be waiting for user to answer. User will see the call message in the middle of current screen. The device will not be ringing but playing call waiting tone in the audio channel of the current call and the LED will be flashing in green. User can accept or reject the call as same as normal incoming call. When the waiting call is answered, the first call will be held on automatically.




Picture 18 - The second call interface

■ Second Outgoing Call

To make a second call, user may press [Xfer] / [Conf] button to make a new call on the default line or press the line key to make new call on specific line. Then dial the number the same way as making a phone call. Another alternative for making second call is to press DSS Keys or dial out from the configured Keys (BLF/Speed Dial). When the user is making a second call with the above methods, the first call could be held on manually or will be held on automatically at second dial.

Switching between Two Calls

When there are two calls established, user will see a dual calls screen as the following picture.

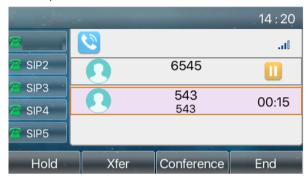

Picture 19 - Two way calling

User can press up/down navigator buttons to switch screen page, and switch call focus by pressing [**Resume**] button.

■ Ending One Call

User may hang up the current talking call by closing the audio channel or press [**End**] button. The device will return to single call mode in holding state.

8.3 End of the Call

After the user finishes the call, the user can put the handle back on the phone, press the hands-free button or Softkey [**End**] key to close the voice channel and end the call.

Note! When the phone is in the reserved state, the user must press the [Resume] key to return to the call state, or put the receiver back and press the hands-free button to end the call.

8.4 Redial

- Redial the last outgoing number:
 - When the phone is in standby mode, press the redial button and the phone will call out the last outgoing number.
- Call out any number with the redial key:
 Enter the number, press the redial key, and the phone will call out the number on the dial.
- Press the redial key to enter the call record:
 Log in the phone page, enter [Phone Settings] >> [Features] >> [Redial Settings], check Redial to enter the call record page, press the redial button when standby to enter the call record page, and press

again to call out the current located number.



Picture 20 - Redial set

8.5 Dial-up Query

The phone is defaulted to turn on the dial-up inquiry function, dial-out, enter two or more numbers. The dial interface will automatically match the call records, contacts in the number list. Use the navigation key and up and down keys to select the number, press the call out key or wait for time out.

8.6 Auto-Answering

User may turn on the auto-answering mode on the device and any incoming call will be automatically answered (not including call waiting). The auto-answering can be enabled on line basis.

The user can start the automatic answer function in the telephone interface or the webpage interface.


• Phone interface:

Press [Menu] >> [Features] >> [Auto Answer] button;

Press the button to select the line, use the left/right navigation key to turn on/off the auto answer option, and set the auto answer time to 5 seconds by default.

After completion, press [OK] key to save;

The icon in the upper right corner of the screen indicates that auto answer is enabled.

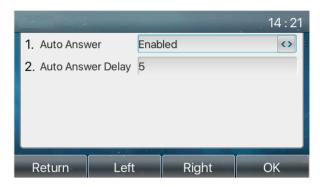


Picture 21 - Line 1 enables auto-answering



Picture 22 - The line has enabled auto-answering

WEB interface:

Log in the phone page, enter [Line] >> [SIP], select [SIP] >> [Basic settings], start auto-answering, and click apply after setting the automatic answering time.

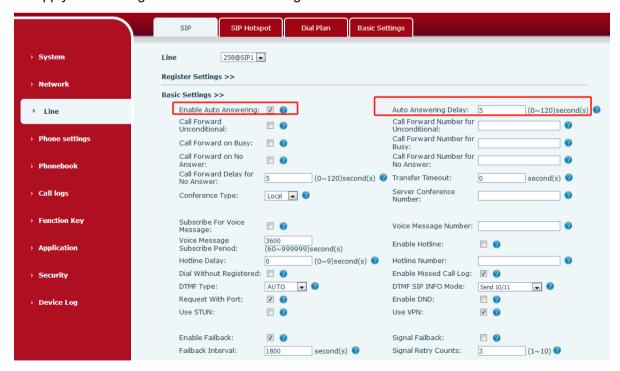

Picture 23 - Web page to start auto-answering


8.7 Callback

The user can dial back the number of the last call. If there is no call history, press the [Callback] button and the phone will say "can't process".

Set the callback key through the phone interface:


Under standby, press [Menu] >> [Basic Settings] >> [Keyboard Settings] >> [Function key] or

[Keyboard Settings] >> [Soft function key] choose to set up the function keys, key type, type
selection function name select callback function, input the callback key name, press [OK] key to save.

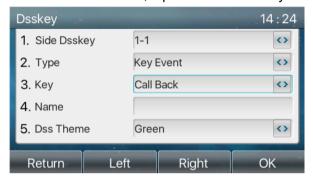

Picture 24 - Set the callback key on the phone

Set the callback key through the web interface:
 Log in the phone page, enter the [Function Key] >> [Side Key] or [Function Key] >> [Function Key]
 page, select the function Key, set the type as the function Key, and set the subtype as the callback, as shown in the figure:

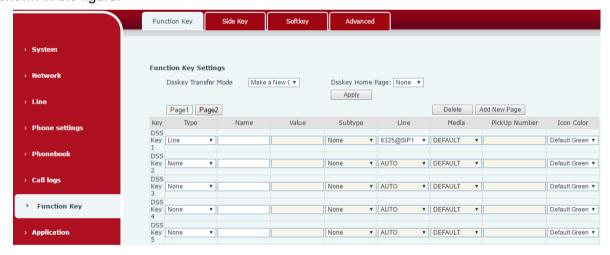

Picture 25 - Set the callback key on the web page


8.8 Mute

You can turn on mute mode during a call and turn off the microphone so that the local voice is not heard. Normally, mute mode is automatically turned off at the end of a call. You can also turn on mute on any screen (such as the free screen) and mute the ringtone automatically when there is an incoming call. Mute mode can be turned on in all call modes (handles, headphones or hands-free).

8.8.1 Mute the Call

• During the conversation, press the mute button on the phone: the mute button on the phone will turn on the red light.

Red mute icon is displayed in the call interface, as shown in the figure:

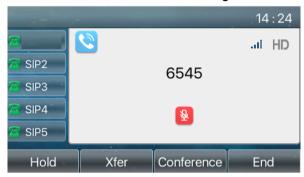

Picture 26 - Mute the call

• Cancel mute: press cancel mute on the phone again. The mute icon is no longer displayed in the call screen. The red light is off by mute button.

8.8.2 Ringing Mute

Mute: press the mute button when the phone is in standby mode:

The top right corner of the phone shows the bell mute icon. Mute button red light is always on, when there is an incoming call, the phone will display the incoming call interface but will not ring.




Picture 27 - Ringing mute

• Cancel ring tone mute: On the standby or incoming call screen, press the mute button again Ψ or volume up Φ cancel ring tone mute, no longer shows mute icon in upper right corner after cancel Φ . The phone mute icon is off.

8.9 Call Hold/Resume

The user can press the **[Hold]** button to maintain the current call, and this button will become the **[Resume]** button, and the user can press the "resume" button to restore the call.

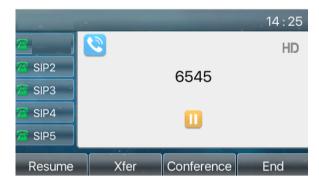

Picture 28 - Call hold interface

8.10 **DND**

User may enable Do-Not-Disturb (DND) feature on the device to reject incoming calls (including call waiting). The DND can be enabled on line basis.

Enable/Disable phone all lines DND, the methods as the following:

- Phone interface: Default standby mode ,
 - 1) Press [DND] button to enter the DND setting interface, select line or phone to enable DND.
 - 2) Press [DND] button to enter the DND setting interface and disable DND.




Picture 29 - Enable DND

If the user wants to enable/disable the uninterrupted function on a specific line, the user can set the uninterrupted function on the page of configuring the line.


- 1) Press [Menu] >> [Features] >> [DND] button, Enter the [DND] to edit the interface.
- 2) Click the left/right navigation button to select the line to adjust the mode and state of "do not disturb", and then press the [**OK**] button to save.

The user will see the DND icon turn red, and the sip-line has enabled the mode of "DND".

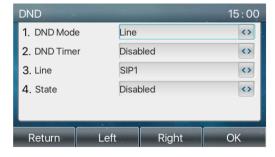

Picture 30 - DND setting interface

The user can also use the DND timer. After the setting, the DND function will automatically turn on and the DND icon will turn red when ringing.

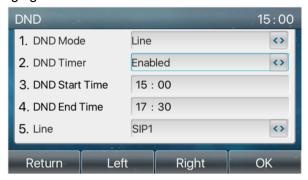


Picture 31 - DND timer

WEB interface: Enter [Phone setting] >> [Features] >> [DND settings], set the DND type (off, phone, line), and DND timing function.



Picture 32 - DND Settings

The user turns on the DND for a specific route on the web page: Enter [Line] >> [SIP], select a [Line] >> [Basic settings], and enable DND.

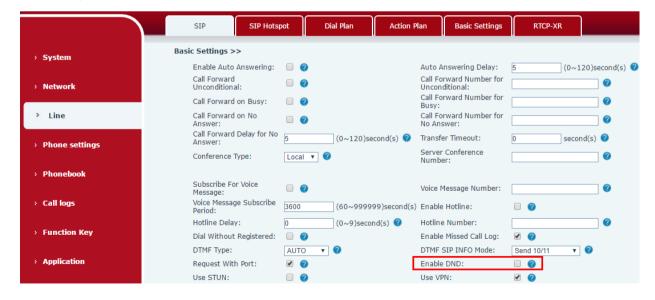

Picture 33 - Line DND

8.11 Call Forward

Call forward is also known as 'Call Divert' which is to divert the incoming call to a specific number based on the conditions and configurations. User can configure the call forward settings of each line.


There are three types,

- Unconditional Call Forward Forward any incoming call to the configured number.
- Call Forward on Busy When user is busy, the incoming call will be forwarded to the configured number.
- Call Forward on No Answer When user does not answer the incoming call after the configured delay time, the incoming call will be forwarded to the configured number.
- Phone interface: Default standby mode
 - 1) Press [Menu] >> [Features] >> [Call Forward] button, select the line by up/down navigation key, press [OK] button to set call forward.



Picture 34 - Select the line to set up call forwarding

2) Select the call forward type by pressing the up/down navigation button. Click [**OK**] to configure call forwarding and delay time.

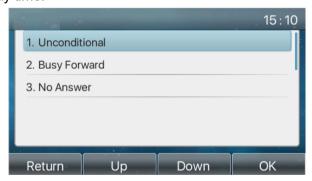


Picture 35 - Select call forward type

3) Select enable/disable by pressing the left/right navigation button.



Picture 36 - Enable call forwarding and configure the call forwarding number

- 4) Browse the parameters set by the up/down navigation key and enter the required information. When finished, press the [**OK**] button to save the changes.
- WEB interface: Enter [Line] >> [SIP], Select a [Line] >> [Basic settings], and set the type, number and time of forward forwarding.

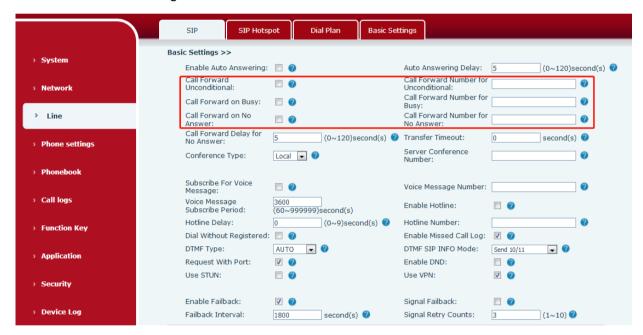

Picture 37 - Set call forward

8.12 Call Transfer

When the user is talking with a remote party and wish to transfer the call to another remote party, there are three way to transfer the call, blind transfer, attended transfer and Semi-Attended transfer.


- Blind transfer: No need to negotiate with the other side, directly transfer the call to the other side.
- Semi-Attended transfer: When you hear the ring back, transfer the call to the other party.
- Attended transfer: When the caller answers the call, transfer the call to the other party.

Note! For more transfer Settings, please refer to 12.6 Line >> Dial Plan

8.12.1 Blind transfer

During the call, the user presses the function menu button [**Transfer**] or the transfer button on the phone ... Enter the number to transfer or press the contact button or the history button to select the number, press the

transfer key again or blind transfer to a third party. After the third party rings, the phone will show that the transfer is successful and hang up.

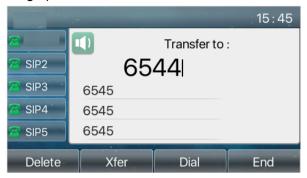

Picture 38 - Transfer interface

8.12.2 Semi-Attended transfer

During the call, the user presses the function menu button [transfer] or the transfer button—on the phone to input the number to be transferred or press the contact button or the historical record button to select the number, and then press the call button. When the third party is not answered, press the transfer on the call interface to make the semi-attendance transfer or press the end button to cancel the semi-attendance transfer.




Picture 39 - Semi-Attended transfer

8.12.3 Attended transfer

Attendance transfer is also known as "courtesy mode", which is to transfer the call by calling the other party and waiting for the other party to answer the call.


The same procedure to calling. In dual call mode, press the "transfer" button to transfer the first call to the second call.

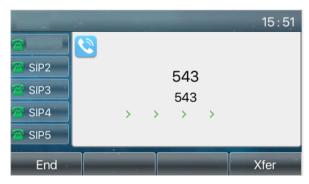

Picture 40 - Attended transfer

8.13 Call Waiting

- Enable call waiting: new calls can be accepted during a call.
- Disable call waiting: new calls will be automatically rejected and a busy tone will be prompted.
- Enable call waiting tone: when you receive a new call on the line, the tone will beep.
- The user can enable/disable the call waiting function in the phone interface and the web interface.
- Phone interface: Press [Menu] >> [Features] >> [Call waiting], the navigation key and left/right button enable/disable call waiting and call waiting tone. Press [Menu] >> [Features] >> [Call waiting], the navigation key and left/right button enable/disable call waiting and call waiting tone.

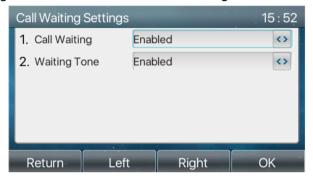


Picture 41 - Call waiting setting

WEB interface: Enter [Phone Settings] >> [Features] >> [Basic Settings], enable/disable call waiting and call waiting tone.



Picture 42 - Web call waiting setting

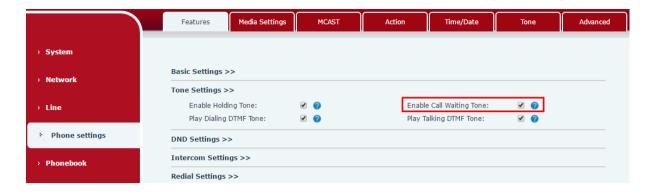

Picture 43 - Web call waiting tone setting

8.14 Conference

8.14.1 Local Conference


To conduct local conference, the user needs to log in the webpage and enter [Line] >> [SIP] >> [Basic settings]. The meeting mode is set as local (the default is local mode), as shown in the figure:



Picture 44 - Local conference setting

Two ways to create a local conference:

1) The device has two channels of communication. Press the conference button on the call interface. When selecting the conference number, select the other number that already exists.

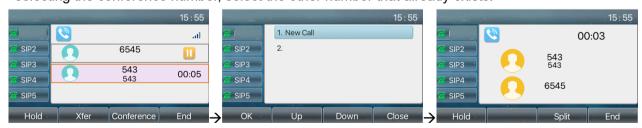

Picture 45 - Local conference (1)

2) If the device has a call all the way, press the conference key in the call interface, enter the number to join the meeting and press the call; After the opposite end is answered, press the conference button again to set up the local tripartite conference:

Picture 46 - Local conference (2)

Note: During the conference, press the split button to split the conference and press the end button to end the call.

8.14.2 Network Conference

Users need server support for network conference.

Log in the web page, enter [Line] >> [SIP] >> [Basic settings], set the conference mode as server mode (default is local mode), set the server conference room number (please consult your system administrator), as shown in the figure:



Picture 47 - Network conference

Method to join a network conference:

- Multi-party call number of network conference room and enter the password then all enter the conference room.
- The two phones have established common calls. Press the conference button to invite new members to the conference. Follow the voice prompt to operate.

Note: the upper limit of the number of participants in the network conference varies according to the server.

8.15 Call Park


Call park requires server support. Consult your system administrator for support.

When you are on the call, if it is not convenient to answer the phone at this time, you can press the configured park button to hold the call; After a successful park, you can resume the call by pressing the configured park button on other devices.


Set the call park button:

Phone interface: long press a function key to enter the function key Settings interface, or through the [Menu] >> [Basic Settings] >> [Keyboard Settings] enter the settings interface of function keys, and set the key function type as memory and subtypes as call park, reside values for the server calls park number, set up corresponding SIP lines.

WEB interface: log in the phone page, enter the [Function Key] >> [Function Key] page, select a
DSSkey, set the function key type as memory key, the subtype as call park, and the value as the call park
number of the server, and set the corresponding SIP line.

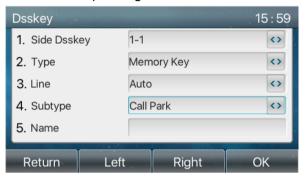

Picture 48 - Phone set call park

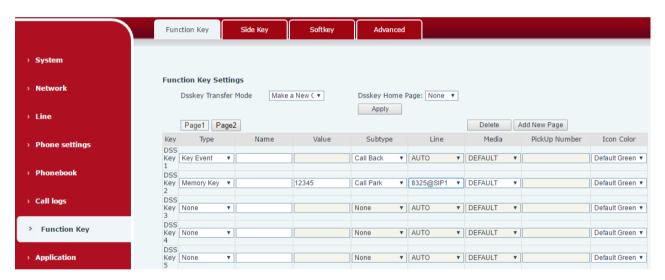

Picture 49 - WEB set call park

8.16 Pick Up

Pick up requires server support. Consult your system administrator for support.


You can use the Pick Up function to answer incoming calls from other users. The phone can pick up incoming calls by configuring DSSkey for BLF and setting the Pick Up code.

Phone interface: press [Menu] >> [Basic Settings] >> [Keyboard Settings] >> [DSS Key Settings], select the function key to set.


- Set the line, function key type as memory key, subtype as BLF/NEW CALL, set subscription number, and pick up code.
- Other phones call the subscription number, and the opposite end is in the incoming ring.

- Press the DSS key to pick up the phone.
- The caller picks up the call and speaks to it.

WEB interface: Log in the phone webpage, enter the [Function Key] >> [Function Key] page, select a DSSkey, set the memory key type as memory key, the subtype as BLF/NEW CALL, and set the corresponding SIP line and pick up codes.

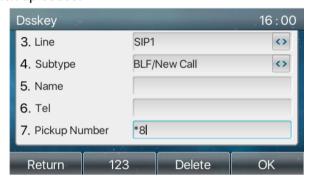

Picture 50 - Phone pick up setting

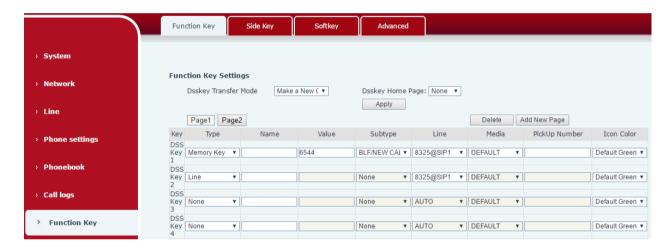

Picture 51 - WEB pick up setting

8.17 Anonymous Call

8.17.1 Anonymous Call

The phone can set up anonymous calls to hide the calling number and the calling name.

- You can see anonymity in the context of [Menu] >> [Advanced Settings] >> [Accounts] >> [Advanced].
- The default is none, which is off, and RFC3323 and RFC3325 are optional.
- Select any one to open the anonymous call.



Picture 52 - Enable anonymous call

- On the web page [Line] >> [SIP] >> [Advanced Settings] can also open the mode of anonymous calls.
- Setting to enable anonymous calls also corresponds to the SIP line. That is, the setting under the SIP1
 page can only take effect on the SIP1 line.



Picture 53 - Enable Anonymous web page call

The following is a transcript of an anonymous call received by the phone.



Picture 54 - Anonymous call log

8.17.2 Ban Anonymous Call

The device can be set to prohibit anonymous calls, that is anonymous calls to the number will be directly rejected.

- In the phone [Menu] >> [Features] >> [Ban anonymous call], click to enter and all SIP lines will be displayed.
- Click Softkey [Switch] or [<] [>] to switch the SIP line and enable anonymous call.



Picture 55 - Anonymous calls are not allowed on the phone

- On the web page [Line] >> [SIP] >> [Advanced Settings], also can disable anonymous calls.
- The setup to disable anonymous calls also corresponds to the SIP line. That is, the setting under the SIP1 page can only take effect on the SIP1 line.



Picture 56 - Page Settings blocking anonymous call

8.18 Hotline


The device supports hotline dialing. After setting up the hotline dialing, directly pick up the handset, hands-free, earphone, etc., and the phone will automatically call according to the hotline delay time.

- In the phone [Menu] >> [Features] >> [Advanced] >> [Hotline], click to enter and all SIP lines will be displayed.
- Then set the hotline for each SIP line, which is off by default.
- Open the hotline, set the hotline number, set the delay time of the hotline.



Picture 57 - Phone hotline setting interface

- On the website [Line] >> [SIP] >> [Basic Settings], can also set up a hotline.
- The setup hotline also corresponds to the SIP line. That is, the hotline set in the SIP1 webpage can only be activated in the SIP1 line.

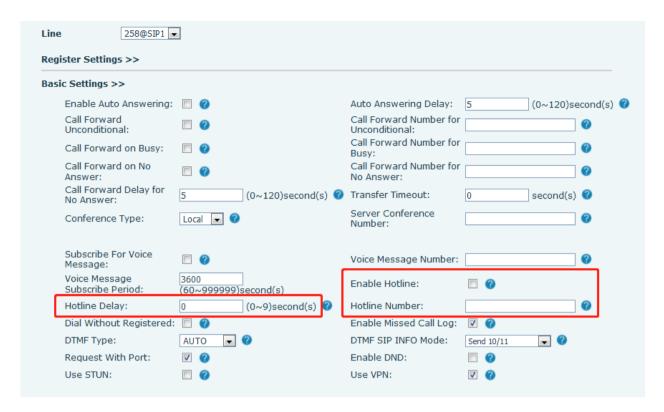


Picture 58 - Hotline set up on webpage

8.19 Emergency Call

The emergency call function is used to et the corresponding emergency call number on the phone after enabling the keypad lock. You can also call emergency services when your phone is locked.

Configure the emergency call number: log in the phone page, enter the [Phone Settings] >> [Function Settings] >> [Basic Settings] page, set up the emergency call code, if you need to set up more than one emergency call code, please use ", "to separate.

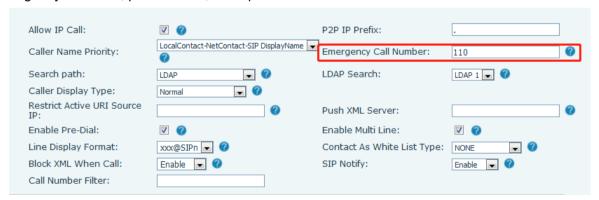

Picture 59 - Set up an emergency call number

2) When the phone set the keyboard lock, you can call the emergency call number without unlocking, as shown in the figure:



Picture 60 - Dial the emergency number

9 Advance Function

9.1 BLF (Busy Lamp Field)

9.1.1 Configure the BLF Functionality

Page interface: log in the phone page, enter the [Function key] >> [Function key] page, select a DSS key, set the function key type as memory key, choose subtype among BLF/NEW CALL, BLF/BXFER, BLF/AXFER, BLF/CONF, set BLF/DTMF value as the number to be subscribed, set the corresponding SIP line. The pickup number is provided by the server. The specific usage refers to 8.16 Pick up.



Picture 61 - Web page configuration BLF function key

• Phone interface: long press a function key to enter the function key Settings interface, or go to the [Menu] >> [Basic Settings] >> [Keyboard Settings] to enter [Soft function key] to set the settings interface, set the key function types as memory keys and a subtype of BLF/NEW CALL, BLF/BXFER, BLF/AXFER, BLF/CONF, BLF/DTMF. The values is the subscription number, and set up corresponding SIP lines.



Picture 62 - Phone configuration BLF function key

Table 10 - BLF Function key subtype parameter list

Subtype	Standby is described	Calling is described
BLF/NEW	Pressing the BLF key while standby to	When you press this BLF key while talking to
CALL	dial the subscriber number.	another user, you create a new call along with the

		subscribed number.
BLF/BXFE R	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to
		another user, you blind transfer the call to the
		subscribed number.
BLF/AXFE R	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to
		another user, you attendance transfer the call to
		the subscribed number.
PI E/Confor	Pressing the BLF key while standby to dial the subscriber number.	When you press this BLF key while talking to
BLF/Confer ence		another user, you invite the subscriber number to
		join the meeting.
BLF/DTMF	Pressing the BLF key while standby to dial the subscriber number.	When the BLF key is pressed while talking to
		another user, the phone automatically sends the
		DTMF corresponding to the BLF key number.

9.1.2 Use the BLF Function

The BLF, also known as a "busy light field," notifies the user of the status of the subscribed object and is used by the server to pick up the call. BLF helps you monitor the other person's status (idle, ringing, talking, off). BLF function:

- Monitor the status of subscribed phones.
- Call the subscribed number.
- Transfer calls/calls to the subscribed number.
- Pickup incoming calls from subscribed number.
- 1) Monitors the status of subscribed phones.

Configuration BLF function keys, when the subscription of the number of the state (idle, ringing, talking) is changed, the LED lights of function key will have corresponding change, see appendix III 6.3 LED to get to know each other under different status leds.

2) Call the subscribed number.

When the phone is in standby mode, press the configured BLF key to call out the subscribed number.

3) Transfer calls to the subscribed number.

Refer to <u>Table 9.1.1-blf function key</u> subtype parameter list, the BLF key can be used for blind rotation, attention-rotation and semi-attention-rotation of the current call, and also can invite the subscribed number to join the call and send DTMF, etc.

4) Pickup incoming calls from subscribed phones.


When configuring BLF function key, configure the pickup number.

When the subscription number telephone rings, refer to <u>appendix III 6.3, BLF LED</u> will turn red at this time. At this point, press the BLF button to answer the incoming call from the subscribed number.

9.2 BLF List

BLF List Key is to put the number to be subscribed into a group on the server side, and the phone uses the URL of this group to make unified subscription. The specific information, number, name and status of each number can be resolved based on notify sent from the server. The unoccupied Memory Key is then set as the BLF List Key. If the state of the subscription object changes later, the corresponding led light state will be changed.

Configure BLF List function: log in the phone page, enter the [Line] >> [SIP] >> [Advanced settings] page, open the BLF List, and configure the BLF List number.

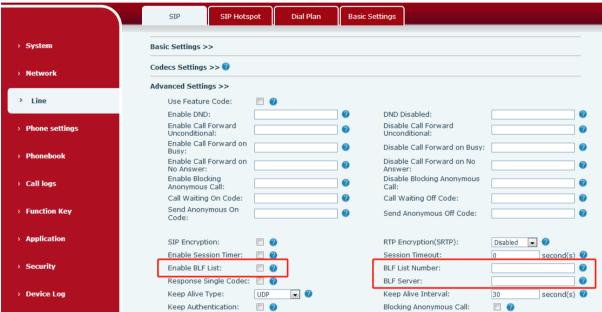

Picture 63 - Configure the BLF List functionality

Use the BLF List function: when the configuration is completed, the phone will automatically subscribe to the contents of the BLF List group. Users can monitor, call and transfer the corresponding number by pressing the BLF List key.



Picture 64 - BLF List number display

9.3 Record

The device supports recording during a call.


9.3.1 Local Record (USB flash disk)

The local recording must be mounted on a usb flash drive to support recording, so the device needs to support a usb flash drive. Please refer to 4.2 hardware description for the supported model.

When using local recording, it is necessary to start recording on the phone page

[Application] >> [Manage recording], select the local type and set the voice coding.

The webpage is as follows:

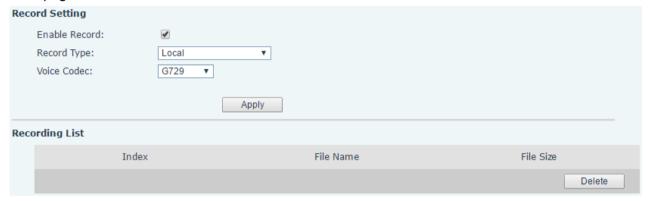

Picture 65 - Local Record

Local recording steps:

- Plug the U disk into the USB port of the phone, open the recording on the web page, and set the recording type as local recording.
- Set DSSkey type as key event and type as record in the phone/web interface.
- Set up one line call and press the recording key (set DSSkey).
- End the recording. End the call.

View local recording:


- Enter [Menu] >> [Application] >> [USB].
- Enter [USB] to view the recording file.
- Or enter the webpage [Application] under the [Manage recording] to view the recording file.

Listen to the record:

- Enter [Menu] >> [Application] >> [USB].
- Enter [USB] to view the recording file.
- Select the recording file that you want to listen to, and click the "play" button of Soft key to listen to the recording.

9.3.2 Server Record

When using the network server to record, it is necessary to open the recording in the phone web page [Application] >> [Manage recording]. The type is selected as network, and the address and port of the recording server are filled in and the voice coding is selected. The web is as follows:

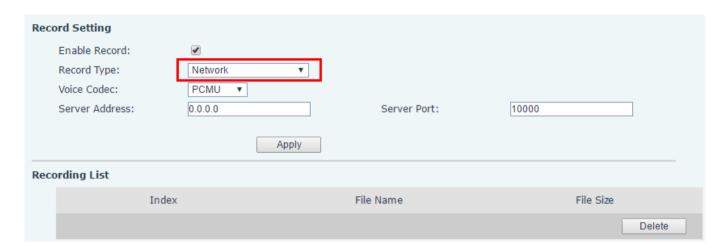


Picture 66 - Web server recording

Note: to be used with Redstone recording software.

9.3.3 SIP INFO Record

The phone is registered with a server that supports SIP INFO recording. After registering the account, check the recording module of [**Application**] >> [**Manage recording**] to open the recording, and the recording type is SIP INFO.

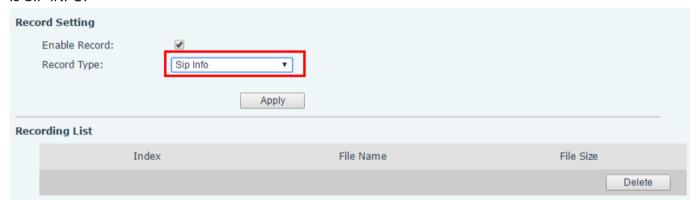

Picture 67 - Web SIP info recording

9.4 Agent

Agent (Agent function) of the phone can be realized: when multiple people use a device for Agent services at different times, he or she can quickly register his or her SIP account on the same server. The Agent functions of the phone can be divided into Normal and Hotel Guest. The Hotel Guest mode requires server support. Normal Mode:

Configure agent function: set a DSSkey as agent, press the function key or enter the [Menu] >> [Features] >> [Agent] to enter the agent page. The SIP server needs to be configured before the account can be configured.



Picture 68 - Configure the agent account in normal mode




Picture 69 - Configure the proxy account-hotel Guest mode

Table 11 - Agency mode

Parameter	Description	
Normal mode	Normal mode	
Number	Set the proxy account number.	
User	Set the proxy account number to verify the user name.	
Password	Set the proxy account number to verify the password.	
Line	Select the SIP line.	
CallLog	Users can choose to save all types, or delete.	
Hotel Guest mode		
Number	Set the proxy account number.	
Password	Set the proxy account number to verify the password.	
Line	Select the SIP line.	
CallLog	Users can choose to save all types, or delete.	

Using agent functions:

- 1) When he phone has been configured on SIP server, fill in the correct number and user name password, click login and then the phone can be registered to the SIP server;
- 2) After registration, click logout and the phone can delete the user name and password, and log out of the SIP account.
- 3) Click Unregister and the phone retains the user name and password, and logs out of the SIP account.

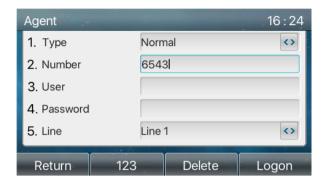

Picture 70 - Agent logon page

9.5 Intercom

When the Intercom is enabled, it can automatically receive calls from the intercom.



Picture 71 - Web Intercom configure


Table 12 - Intercom configure

Parameter	Description	
Enable Intercom	When intercom is enabled, the device will accept the incoming call request with a SIP	
Enable intercom	header of Alert-Info instruction to automatically answer the call after specific delay.	
Enable Intercom	Enable mute mode during the intercom call	
Mute	Enable mute mode during the intercom call	
Enable Intercom	If the incoming call is intercom call, the phone plays the intercom tone	
Tone		
Enable Intercom Barge	Enable Intercom Barge by selecting it, the phone auto answers the intercom call	
	during a call. If the current call is intercom call, the phone will reject the second	
	intercom call	

9.6 MCAST

This feature allows user to make some kind of broadcast call to people who are in multicast group. User can

configure a multicast DSS Key on the phone, which allows user to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address without involving SIP signaling. You can specify up to 10 multicast listening addresses.

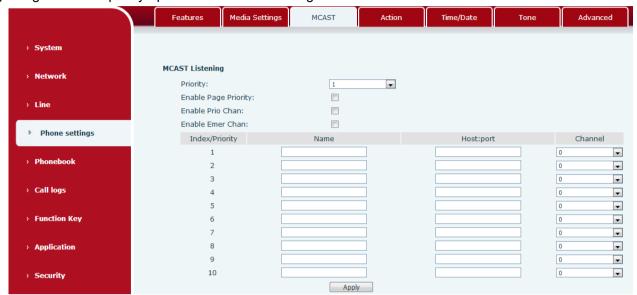

Picture 72 - Multicast Settings Page

Table 13 - MCAST Parameters on Web

Parameters	Description
Normal Call Priority	Define the priority of the active call, 1 is the highest priority, 10 is the lowest.
Enable Page Priority	The voice call in progress shall take precedence over all incoming paging calls.
Name	Listened multicast server name
Host:port	Listened multicast server's multicast IP address and port.

Multicast:

- Go to web page of [Function Key] >> [Function Key], select the type to multicast, set the multicast
 address, and select the codec.
- Click Apply.
- Set up the name, host and port of the receiving multicast on the web page of [Phone Settings] >> [MCAST].
- Press the DSSKY of Multicast Key which you set.
- Receive end will receive multicast call and play multicast automatically.


9.7 SCA (Shared Call Appearance)

- 1) Configure on Phone
- When registering with the BroadSoft server, a Redstone Phone can register the account created previously on multiple terminals.




Picture 73 - Register BroadSoft account

After the phone set registers with the BroadSoft server, a server type needs to be set. Specifically, log in
to the webpage of the phone set, choose [Line] >> [SIP] >> [Advanced Settings] and set Specific
Server Type to BroadSoft, as shown in the following figure.

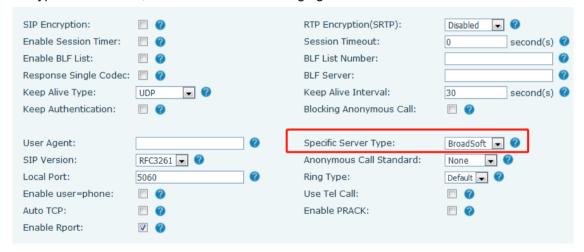

Picture 74 - Set BroadSoft server

If a Redstone phone needs to enable the SCA function. Specifically, log in to the webpage of the phone set, choose [Line] >> [SIP] >> [Advanced Settings], and select Enable SCA. If SCA is not enabled, the registered line is the private line.

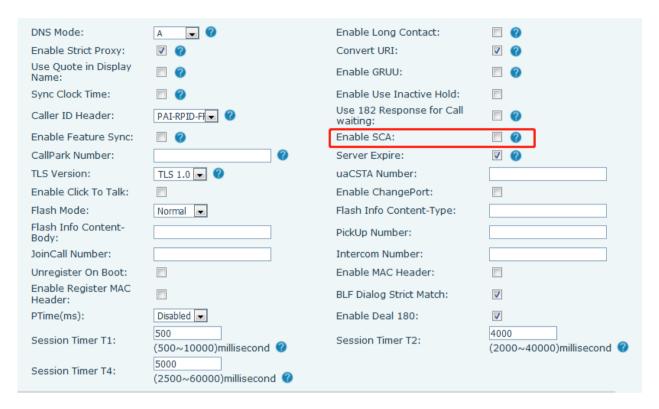

Picture 75 - Enable SCA

After an account is configured and successfully registered, you can configure lines whose DSS Key is Shared Call Appearance on the Function Key page to facilitate viewing the call status of the group. Each line key represents a call appearance. Understand the call status by referring to <u>6.3 Appendix III – LED</u>.

To facilitate private hold, configure keys whose DSS Key is Private Hold on the Function Key page. Pay attention that the public hold key is the softkey-hold key during a call.



Picture 76 - Set Private Hold Function Key

- Each phone registered with the BroadSoft server should be configured as above, then the SCA function can be used.
- 2) LED Status

To facilitate viewing the call status of a group, configure the DSS Key as SCA. The following table describes

the LEDs of lines in different states.

Table 14 - LED Status of SCA

State&Direction	Local	Remote
Idle	Off	Off
Seized	Steady green	Steady red
Progressing (outgoing call)	Steady green	Steady red
Alerting (incoming call)	Fast blinking green	Fast blinking green
Active	Steady green	Steady red
Public Held (hold)	Slow blinking green	Slow blinking red
Held-private (private hold)	Slow blinking yellow	Steady red
Bridge-active (Barge-in)	Steady green	Steady red
Bridge-held	Steady green	Steady red

3) Shared Call Appearance(SCA)

The following lists a couple of instances to facilitate understanding.

In the following scenarios, the manager and secretary register the same SCA account and the account is configured based on the preceding steps.

Scenario 1: When this account receives an incoming call, the phone sets of both the manager and the secretary will receive the call and ring. If the manager is busy, the manager can reject the call and the manager's phone set stops ringing but the secretary's phone set keeps ringing until the secretary rejects/answers the call or the call times out.

Scenario 2: When this account receives an incoming call, if the secretary answers the call first and the manager is required to answer the call, the secretary can press the Public Hold key to hold this call and notify the manager. The manager can press the line key corresponding to the SCA to answer the call.

Scenario 3: The manager is in an important call with a customer and needs to leave for a while. If the manager does not want others to retrieve this call, the manager can press the Private Hold key.

Scenario 4: The manager is in a call with a customer and requires the secretary to join the call to make records. The secretary can press the corresponding SCA line key to barge in this call.

9.8 Message

9.8.1 **SMS**

If the service of the line supports the function of the short message, when the other end sends a text message to the number, the user will receive the notification of the short message and display the icon of the new SMS on the standby screen interface.



Picture 77 - SMS icon

Send messages:

- Go to [Menu] >> [Message] >> [SMS].
- Users can create new messages, select lines and send numbers.
- After editing is completed, click Send.

View SMS:

- Use the navigation keys to select the standby icon [message]
- After selecting, press the navigation key [OK] to enter the SMS inbox interface.
- Select the unread message and press [**OK**] to read the unread message.

Reply to SMS:

- Use the navigation keys to select the standby icon [Message].
- After selecting, press the navigation key [OK] to enter the SMS inbox interface.
- Select the message you want to reply to, select Softkey's [Reply], edit it, and click Send.

9.8.2 MWI (Message Waiting Indicator)

If the service of the lines supports voice message feature, when the user is not available to answer the call, the caller can leave a voice message on the server to the user. User will receive voice message notification from the server and device will prompt a voice message waiting icon on the standby screen.



Picture 78 - New Voice Message Notification

^{□□} Voice message icon


To listen to a voice message, the user must first configure the voicemail number. After the voicemail number is configured, the user can retrieve the voicemail of the default line.

When the phone is in the default standby state,


The Side Key is pre-installed with a voice message shortcut key - [MWI] key.

 Press [MWI] to open the voice message configuration interface, and select the line to be configured by pressing the up/down navigation buttons.

- Press the [Edit] button to edit the voice message number. When finished, press the [OK] button to save the configuration.
- In the following picture, "17" in front of Redstone line brackets represents unread voice messages, and "17" represents the total number of voice messages.

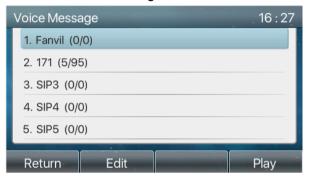

Picture 79 - Voice message interface

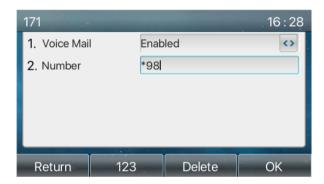


Picture 80 - Configure voicemail number

9.9 SIP Hotspot

SIP hotspot is a simple but practical function. With simple configurations, the SIP hotspot function can implement group ringing. SIP accounts can be expanded.

The users can set functions as a SIP hotspot and other phones set (B and C) function as SIP hotspot clients. When somebody calls phone set A, phone sets A, B, and C all ring at the same time. When any phone set answers the call, other phone sets stop ringing. The call can be answered by only one phone set. When B or C initiates a call, the SIP number registered by phone set A is the calling number.

To set a SIP hotspot, register at least one SIP account.

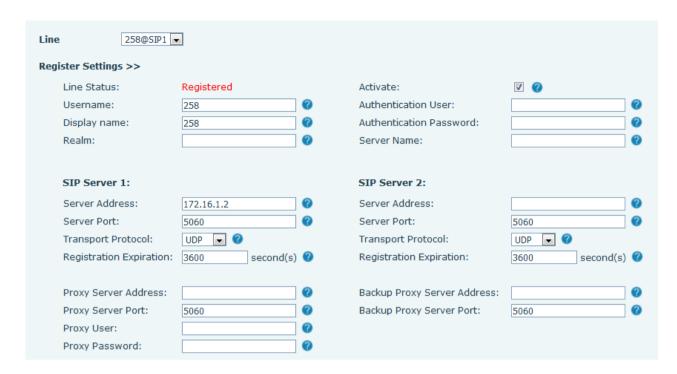

Picture 81 - Register SIP account

Table 15 - SIP hotspot Parameters

Parameters	Description
	If your phone is set to "SIP hotspot server", Device Table will display as Client
Device Table	Device Table which connected to your phone.
Bovios rabio	If your phone is set to "SIP hotspot client", Device Table will display as Server
	Device Table which you can connect to.
SIP hotspot	
Enable hotspot	Set it to be Enable to enable the feature.
Mode	Choose hotspot, phone will be a "SIP hotspot server"; Choose Client, phone will be
Wode	a "SIP hotspot Client"
	Either the Multicast or Broadcast is ok. If you want to limit the broadcast packets,
Monitor Type	you'd better use broadcast. But, if client choose broadcast, the SIP hotspot phone
	must be broadcast.
Monitor Address	The address of broadcast, hotspot server and hotspot client must be same.
Remote Port	Type the Remote port number.


Configure SIP hotspot server:



Picture 82 - SIP hotspot server configuration

Configure SIP hotspot client:

To set as a SIP hotspot client, no SIP account needs to be set. The Phone set will automatically obtain and configure a SIP account. On the SIP Hotspot tab page, set Mode to Client. The values of other options are the same as those of the hotspot.

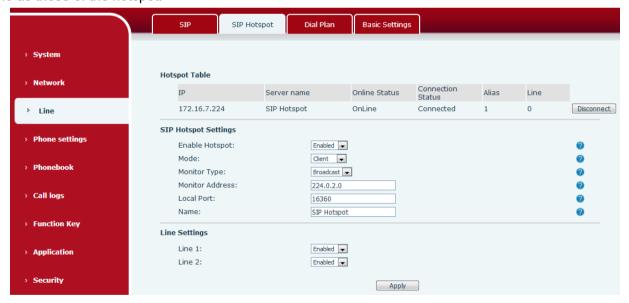

Picture 83 - SIP hotspot client configuration

As the hotspot server, the default extension number is 0. When the phone is used as the client, the extension number is increased from 1, you can view the extension number through the [SIP Hotspot] page.

Call extension number:

- The hotspot server and the client can dial each other through the extension number.
- For example, extension 1 dials extension 0.

10 Phone Settings

10.1 Basic Settings

10.1.1 Language


The user can set the phone language through the phone interface and web interface.

 Phone end: After resetting the factory settings, the user needs to set the language; when setting the language during standby, go to [Menu] >> [Basic] >> [Language] Settings, as shown in the figure.



Picture 84 - Phone language setting

• Web interface: Log in to the phone webpage and set the language in the drop-down box at the top right corner of the page, as shown in the figure:

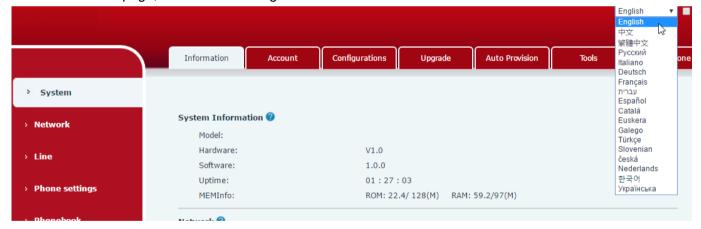

Picture 85 - Language setting on Web page

 The function box on the right side of the web interface language setting box is "Synchronize language to phone"; if selected, the phone language will be synchronized with the webpage language. If it is not selected, it will not be synchronized.

10.1.2 Time & Date


Users can set the phone time through the phone interface and web interface.

Phone end: When the phone is in the default standby state, press the [Menu] >> [Basic] >> [Time & Date], use the up/down navigation button to edit parameters, press the [OK] to save after completion, as shown in the figure:



Picture 86 - Set time & date on phone

Web end: Log in to the phone webpage and enter [Phone Settings] >> [Time/Date], as shown in the figure:

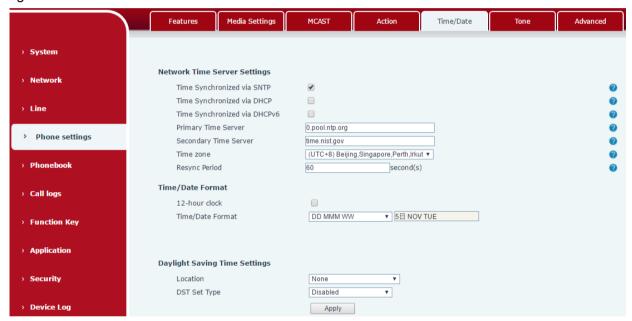

Picture 87 - Set time & date on webpage

Table 16 - Time Settings Parameters

Parameters	Description
	Auto/Manual
Mode	Auto: Enable network time synchronization via SNTP protocol, default enabled.
	Manual: User can modify data manually.
SNTP Server	SNTP server address
Time zone	Select the time zone
	Select time format from one of the followings:
	■ 1 JAN, MON
Time format	■ 1 January, Monday
	■ JAN 1, MON
	■ January 1, Monday

	■ MON, 1 JAN
	■ Monday, 1 January
	■ MON, JAN 1
	■ Monday, January 1
	■ DD-MM-YY
	■ DD-MM-YYYY
	■ MM-DD-YY
	■ MM-DD-YYYY
	■ YY-MM-DD
	■ YYYY-MM-DD
Separator	Choose the separator between year and moth and day
12-Hour Clock	Display the clock in 12-hour format
Daylight Saving Time	Enable or Disable the Daylight Saving Time

10.1.3 Screen

The user can set the phone screen parameters through both of the phone interface and web interface.

Phone: When the phone is in the default standby state, go to [Menu] >> [Basic] >> [Screen Settings] to
edit the screen parameters. After editing, click [OK] to save, as shown in the figure:




Picture 88 - Set screen parameters on phone

 Web: Go to [Phone Settings] >> [Advanced] Advanced, edit the screen parameters, and click Apply to save.

10.1.3.1 Brightness and backlight


- Set the brightness level in use from 1 to 16, [<] or [>] switch brightness level.
- Set the brightness level in the energy-saving mode from 0 to 16, [<] or [>] switch the brightness level.
- Set the backlight time to 30 seconds by default. You can turn it off or select 15 seconds /30 seconds /45 seconds /60 seconds /90 seconds /120 seconds.
- The screen saver can be turned on or off by default.
- Web interface: enter [Phone Settings] >> [Advanced], edit screen parameters, and click submit to save.

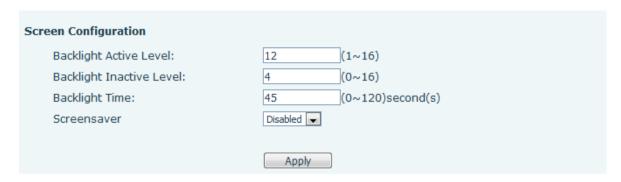

Picture 89 - Page screen Settings

10.1.3.2 Screen Saver

- Press [Screen Settings] to find the [Screen protection] button, press [left] / [right] button to open/close
 the screen protection, set the timeout time, the default is 15S, after completion, press [OK] button to
 save.
- After saving, return to standby mode and enter the screen saver after 15s, as follows:

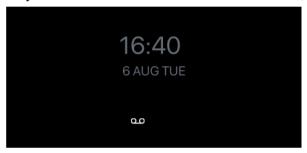

Picture 90 - Phone screen saver

10.1.4 Ring

When the device is in the default standby mode,

- Press soft-button [Menu] till you find the [Basic] item.
- Enter [Basic] item till you find [Ring] item.
- Enter [Ring] item and you will find [Headset] or [Handsfree] item, press left / right navigator keys to adjust the ring volume, save the adjustment by pressing [OK] when done.
- Enter [Ring type] item, press left / right navigator keys to change the ring type, save the adjustment by pressing [OK] when done.

10.1.5 Voice Volume

When the device is in the default standby mode,

- Press soft-button [Menu] till you find the [Basic] item.
- Enter [Basic] item till you find [Voice Volume] item.
- Enter [Voice Volume] item and you will find [Headset], [Handsfree] and [Headset] item.
- Enter [Headset] or [Handsfree] or [Headset] item, press Left / Right navigator keys to adjust the audio volume for different mode.
- Save the adjustment by pressing [OK] when done.

10.1.6 **Greeting Words**

When the device is in the default standby mode,

- Press soft-button [Menu] till you find the [Basic] item.
- Enter [Basic] item till you find [Greeting Words] item.
- Press [**OK**] to enter the setting interface to edit the Greetings Words.
- Save the adjustment by pressing [OK] when done.

NOTICE! The welcome message can only be displayed in the upper left corner of standby mode when the default option is disabled.

10.1.7 Reboot

When the device is in the default standby mode,


- Press soft-button [Menu] till you find the [Basic] item.
- Enter [Basic] item till you find [Reboot] item.
- Press [OK] a prompt message, "restart now," prompts the user.
- Press [OK] to restart the phone or [Cancel].
 The phone is in standby mode,
- The configurable [OK] key is the restart key. Press [OK], a prompt message, "restart now" prompts the
 user.
- Press [OK] to restart the phone or [Cancel] to exit.

10.2 Phone Book

10.2.1 Local Contact

User can save contacts' information in the phone book and dial the contact's phone number(s) from the phone book. To open the phone book, user should press soft-menu button [**Contact**] in the default standby screen or keypad.

By default the phone book is empty, user may add contact(s) into the phone book manually or from call logs.

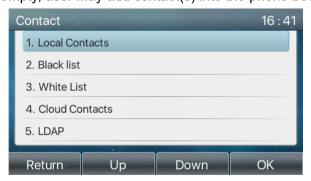

Picture 91 - Phone book screen

Note! Phone user account can store contact information, different models and specifications.



Picture 92 - Local Phone book

When there are contact records in the phone book, the contact records will be arranged in the alphabet order. User may browse the contacts with up/down navigator keys. The record indicator tells user which contact is currently focused. User may check the contact's information by pressing [**OK**] button.

10.2.1.1 Add / Edit / Delete Contact

To add a new contact, user should press [Add] button to open Add Contact screen and enter the contact information of the followings,

- Contact Name
- Tel. Number
- Mobile Number
- Other Number
- Line
- Ring Tone
- Contact Group
- Photo



Picture 93 - Add New Contact

User can edit a contact by pressing [**Option**] >> [**Edit**] button.


To delete a contact, user should move the record indicator to the position of the contact to be deleted, press [Option] >> [Delete] button and confirm with [OK].

10.2.1.2 Add / Edit / Delete Group

By default, the group list is blank. User can create his/her own groups, edit the group name, add or remove

contacts in the group, and delete a group.


- To add a group, press [Add Group] button.
- To delete a group, press [Option] >> [Delete] button.
- To edit a group, press [Edit] button.
- The Number behind the group name means the total contacts number of selected groups.

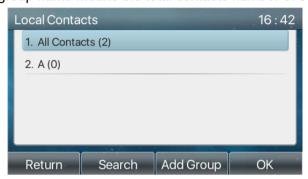

Picture 94 - Group List

10.2.1.3 Browse and Add / Remove Contacts in Group

User can browse contacts in a group by opening the group in group list with [OK] button.

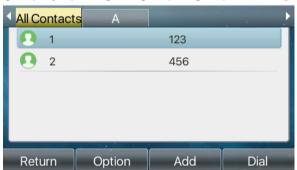

Picture 95 - Browsing Contacts in a Group

When user is browsing contacts of a group, user can also add contacts in that group by pressing [Add] button to enter the group contacts management interface, then press [OK] button to save the contact. The contact will also be added in local phonebook. User can delete contact from group by [Option] >> [Delete].



Picture 96 - Add Contacts in a Group


10.2.2 Blacklist

The device Support blacklist, such as the number added to the blacklist, the number of calls directly refused

to the end, the end of the phone shows no incoming calls. (Blacklisted Numbers can be called out normally)


There are multiple ways to add a number to Blacklist on X210 device. It can be added directly on [Menu] >> [Contact] >> [Blacklist].

- Select any number in the phone book (both local and network) for configuration addition.
- Select any number in the call log for configuration addition.

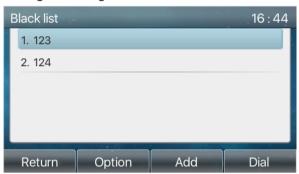

Picture 97 - Add Blacklist

- There are various ways to add number to the blacklist on web page, which can be added in the [Phone book] >> [Call list] >> [Restricted Incoming Calls].
- Select any number in the phone book (both local and network) for configuration addition.
- Select any number in the call log for configuration addition.

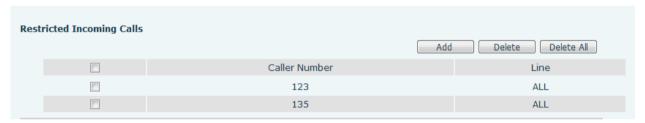

Picture 98 - Web Blacklist

10.2.3 Cloud Phone Book

10.2.3.1 Configure Cloud Phone book


Cloud phonebook allows user to configure the device by downloading a phonebook from a cloud server. This is convenient for office users to use the phonebook from a single source and save the effort to create and maintain the contact list individually. It is also a useful tool to synchronize his/her phonebook from a personal mobile phone to the device with Redstone Cloud Phonebook Service and App which is to be provided publicly soon.

NOTICE! The cloud phonebook is ONLY temporarily downloaded to the device each time when it is opened on the device to ensure the user get the latest phonebook. However, the downloading may take a couple seconds depending on the network condition. Therefore, it is highly recommended for the users to save important contacts from cloud to local phonebook for saving download time.

Open cloud phonebook list, press [Menu] >> [PhoneBook] >> [Cloud Contacts] in phonebook screen.

TIPS! The first configuration on cloud phone should be completed on Web page by selecting [PhoneBook] >> [Cloud Contacts]. The setting of addition/deletion on device could be done after the

first setting on Web page.

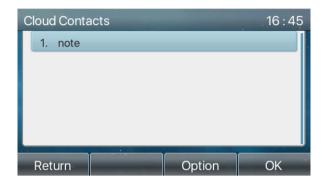


Picture 99 - Cloud phone book list

10.2.3.2 Downloading Cloud Phone book

In cloud phone book screen, user can open a cloud phone book by pressing [**OK**] / [**Enter**] button. The device will start downloading the phone book. The user will be prompted with a warning message if the download fails,

Once the cloud phone book is downloaded completely, the user can browse the contact list and dial the contact number same as in local phonebook.

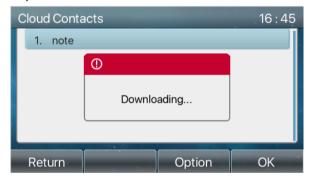

Picture 100 - Downloading Cloud Phone book



Picture 101 - Browsing Contacts in Cloud Phone book


10.3 Call Log

The phone can store the call record (the quantity of storage varies according to different specifications). The user can press [CallLog] to open the call record and check the records of all incoming calls, outgoing calls and missed calls.

In the call logs interface, user may browse the call logs with up/down navigator keys.

Each call log record is presented with 'call type' and 'call party number / name'. User can check further call log detail by pressing **[OK]** button and dial the number with **[Dial]** button, or add the call log number to phonebook with pressing **[Option]** >> **[Add to Contact]**.

User can delete a call log by pressing [Delete] button and clear all call logs by pressing [Delete All] button.

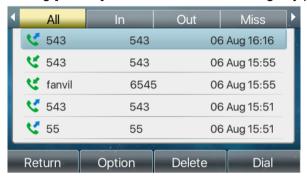

Picture 102 - Call Log

Users can also filter the call records of specific call types to narrow down the scope of search records, and select a call record type by left and right navigation keys.

- Missed Call Log
- Incoming Call Log
- Outgoing Call Log
- Forward Call Log



Picture 103 - Filter call record types

10.4 Function Key

Users can use the page switch key to switch DSS display pages quickly. In addition, the user can also long press each DSS key to modify the corresponding key Settings.



Picture 104 - DSS LCD key Page Configuration Screen

The DSS Key could be configured as followings,

- Memory Key
 - Speed Dial/Intercom/BLF/Presence/Call Park/Call Forward (to someone)
- ◆ Line
- Key Event
 - MWI/DND/Hold/Transfer/Phonebook/Redial/Pickup/Call Forward (to specified line)/Headset/ SMS/Release
- DTMF
- Action URL
- ♦ BLF List Key
- ♦ Multicast
- Action URL
- ♦ XML Browser

Webpage interface: [Function key] >> [Function key].



Picture 105 - DSS settings

Moreover, user also can add the user-defined title for the DSS Keys, which is configured as Memory Key / Line / URL / Multicast / Prefix.

More detailed information refers to 12.23 Function Key and 6.3 Appendix III - LED Definition .

10.5 Wi-Fi

The device supports wireless Internet access and requires the use of a USB wi-fi adapter specified by location; Therefore, the device needs to support U disk. Please refer to <u>4.2 hardware description</u> for the supported model.

When the device is in the default standby mode,

- Press soft-button [Menu] till you find the [Basic] item.
- Press [WLAN] to enter the setting interface.
- Select the wireless network and use the left and right keys to activate it. Enable the device to search the current wireless network automatically.
- Select to the available network, enter the user name and password to connect successfully.

Tip: if no wireless USB dongle is inserted, the prompt "wireless adapter has been removed" will appear. If a USB dongle is plugged in, the wireless network will be priority network even if the network cable is plugged in.




Picture 106 - WIFI settings

10.6 Headset

10.6.1 Wired Headset


- The device supports wired earphone with RJ9 interface, which can play incoming call sound and talk with earphone.
- After the phone is connected to the headset, the default DSS key of headset will be green light which
 indicating that the headset can be used normally.
- On the webpage [Phone settings] >> [Features], you can set the headset answering function, and the
 ring tone for headset.

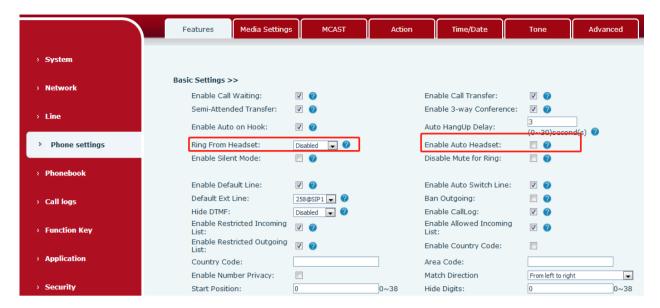

Picture 107 - Headset function settings

10.6.2 EHS Headset

Phone into [Menu] >> [Function] >> [Advanced], Select [EHS Headset], can open EHS Headset (default closed EHS Headset).

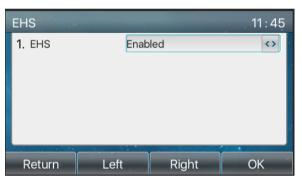

Picture 108 - EHS Headset setting

10.6.3 Bluetooth Headset

The device supports bluetooth application and can be compatible with bluetooth headset with CSR 4.0 chip. It needs to use USB bluetooth adapter specified by location. Therefore, the device needs to support U disk.

Please refer to <u>4.2 hardware description</u> for the supported model.

When the device is in the default standby mode,

- Press soft-button [Menu] till you find the [Basic] item.
- Press [Bluetooth] to enter the setup interface.
- Select Bluetooth, and use the left and right keys to enable Bluetooth. Select Paired Device. If no paired is
 displayed, press [Scan] key to search and select the scanned device to connect.





Picture 109 - Bluetooth Settings Screen

The use of Bluetooth headset can be divided into three types: call answering; Hang up; Bluetooth redial.

call answering

When the Bluetooth headset is connected to the phone, the incoming call can be answered by pressing the Bluetooth answer button.

- Hang up
- 1) When talking with Bluetooth headset, you can hang up the phone by pressing the button on Bluetooth headset.
- 2) When there is an incoming call, double-click the answer button to reject the call.
- 3) When the caller is in the ringing state, press the answer button of the headset to cancel the call.
- Bluetooth redial

When the Bluetooth headset is connected, double-click the answer button to redial the number dialed last time.

NOTICE! some models do not support double - click redial function. Whether this function is supported or not, you can check the instruction of the headset, or connect the Bluetooth headset to the phone, and double-click the answer button to see whether it will redial.

10.7 Advanced

10.7.1 Line Configurations



Picture 110 - SIP address and account information

Save the adjustment by pressing [OK] when done.

Users who want to configure more options should use web management portal to modify or Advanced Settings in accounts on the individual line to configure those options.



Picture 111 - Configure Advanced Line Options


10.7.2 Network Settings

10.7.2.1 Network Settings

■ IP Mode

There are 3 network protocol mode options, IPv4, IPv6 and IPv4 & IPv6.


User could select available mode via "<" or ">". The selected IP mode will be activated after pressing [OK] button.

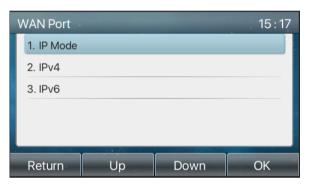

Picture 112 - Network mode Settings

■ IPv4

In IPv4 mode, there are 3 connection mode options: DHCP, PPPoE and Static IP.

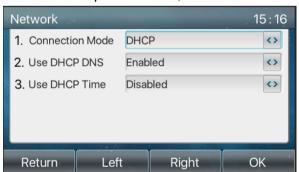

Picture 113 - DHCP network mode

When using DHCP mode, phone will get the IP address from DHCP server (router).

- Use DHCP DNS: It is enabled as default. "Enable" means phone will get DNS address from DHCP server and "disable" means not.
- Use DHCP time: It is disabled as default. "Enable" to manage the time of get DNS address from

DHCP server and "disable" means not.




Picture 114 - PPPoE network mode

When using PPPoE, phone will get the IP address from PPPoE server.

Username: PPPoE user name.

Password: PPPoE password.

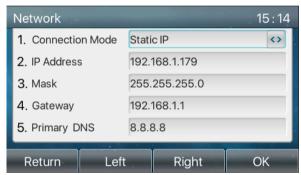

Picture 115 - Static IP network mode

When using Static IP mode, user must configure the IP address manually.

- IP Address: Phone IP address.
- Mask: sub mask of your LAN.
- Gateway: The gateway IP address. Phone could access the other network via it.
- Primary DNS: Primary DNS address. The default is 8.8.8.8, Google DNS server address.
- Secondary DNS: When primary DNS is not available, Secondary DNS will work.

■ IPv6

In IPv6, there are 2 connection mode options, DHCP and Static IP.

- DHCP configuration refers to IPv4 introduction in last page.
- Static IP configuration is almost same as IPv4's, except the IPv6 Prefix.
- IPv6 Prefix: IPv6 prefix, it is similar with mask of IPv4.



Picture 116 - IPv6 Static IP network mode

10.7.2.2 QoS & VLAN

■ LLDP

Link Layer Discovery Protocol. LLDP is a vendor independent link layer protocol used by network devices for advertising their identity, capabilities to neighbors on a LAN segment.

Phone could use LLDP to find the VLAN switch or other VLAN devices and use LLDP learn feature to apply the VLAN ID from VLAN switch to phone its self.

■ CDP

Cisco Discovery Protocol. CDP is a not-for-profit charity that runs the global disclosure system for investors, companies, cities, states and regions to manage their environmental impacts. According to the CDP, Cisco devices could share the OS version, IP address, hardware version and so on.

Parameters	Description		
LLDP setting			
Report	Enable LLDP		
Interval	LLDP requests interval time		
Learning	apply the learned VLAN ID to the phone configuration		
QoS			
QoS Mode	configure SIP DSCP and audio DSCP		
WAN VLAN	WAN VLAN		
WAN VLAN	WAN port VLAN configuration		
LAN VLAN	LAN VLAN		
LAN VLAN	LAN port VLAN configuration		
CDP			
CDP	CDP enable/disable ,CDP interval time		

Table 17 - QoS & VLAN

10.7.2.3 VPN

Virtual Private Network (VPN) is a technology to allow device to create a tunneling connection to a server and becomes part of the server's network. The network transmission of the device may be routed through the VPN server.

For some users, especially enterprise users, a VPN connection might be required to be established before activate a line registration. The device supports two VPN modes, Layer 2 Transportation Protocol (L2TP) and OpenVPN.

The VPN connection must be configured and started (or stopped) from the device web portal.

■ L2TP

NOTICE! The device only supports non-encrypted basic authentication and non-encrypted data tunneling. For users who need data encryption, please use OpenVPN instead.

To establish a L2TP connection, users should log in to the device web portal, open webpage [**Network**] >> [**VPN**]. In VPN Mode, check the "Enable VPN" option and select "L2TP", then fill in the L2TP server address, Authentication Username, and Authentication Password in the L2TP section. Press "Apply" then the device will try to connect to the L2TP server.

When the VPN connection established, the VPN IP Address should be displayed in the VPN status. There may be the delay of the connection establishment. User may need to refresh the page to update the status. Once the VPN is configured, the device will try to connect with the VPN automatically when the device boots up every time until user disable it. Sometimes, if the VPN connection does not establish immediately, user may try to reboot the device and check if VPN connection established after reboot.

■ OpenVPN

To establish an OpenVPN connection, user should get the following authentication and configuration files from the OpenVPN hosting provider and name them as the following,

OpenVPN Configuration file: client.ovpn

CA Root Certification: ca.crt
Client Certification: client.crt
Client Key: client.key

User then upload these files to the device in the web page [**Network**] >> [**VPN**], select OpenVPN Files. Then user should check "Enable VPN" and select "OpenVPN" in VPN Mode and click "Apply" to enable OpenVPN connection.

Same as L2TP connection, the connection will be established every time when system rebooted until user disable it manually.

10.7.2.4 Web Server Type

Configure the Web Server mode to be HTTP or HTTPS and will be activated after the reboot. Then user could use http/https protocol to access pone web page.



Picture 117 - The phone configures the web server type

10.7.3 Set The Secret Key

When the device is in the default standby mode,


- Select [Menu] >> [Advanced setting], and enter it via [Confirm] or [OK] button.
- As default, the Advance setting password is 123.
- User will see the follow page after menu Advanced setting Security.



Picture 118 - Keypad lock password

Menu password is the permission for accessing the advanced setting.

- [Current password] is the password user configured before. If no configuration before, the default password is 123.
- [New password] is the new password user to use.
- After configuring the menu password, it will work immediately.
- Keyboard password is used to unlock the phone once it's locked.

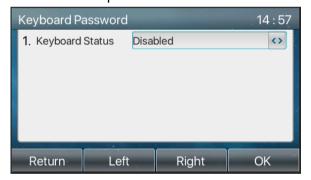


Picture 119 - Set keyboard lock password

User could only set to enable or disable the keyboard password in LCD screen.

- Enter [Keyboard password] setting by pressing [confirm] or [OK] button after password entered. If no menu password configuration before, it is 123 as default.
- If the menu password is correct, phone will go to keyboard password interface. As default, the keyboard password is disabled. When it is enabled, the keyboard will be locked after timeout.
- If user does not configure the keyboard lock time, (it is 0 as default). Long pressing "#" will lock the phone.
 There will be a lock icon in the top of LCD. Phone will reminder "Enter Password" after pressing any keys.




Picture 120 - Phone keypad lock password input interface

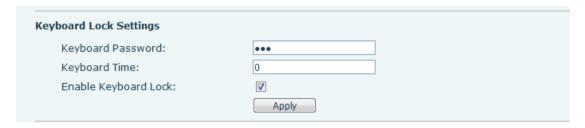

Picture 121 - Web keyboard lock password Settings

10.7.4 Maintenance

Phone Webpage: Login and go to [System] >> [Auto provision].

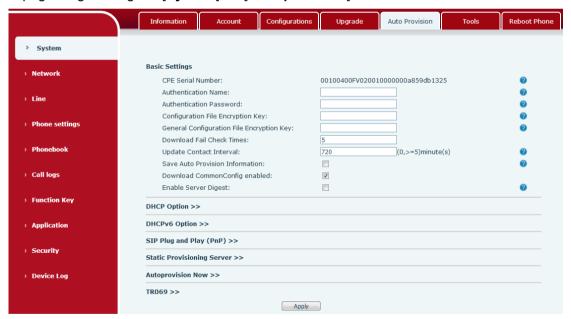

Picture 122 - Page auto provision Settings

LCD: [Menu] >> [Advanced setting] >> [Maintenance] >> [Auto Provision].



Picture 123 - Phone auto provision settings

Redstone devices support SIP PnP, DHCP options, Static provision, TR069. If all of the 4 methods are enabled, the priority from high to low as below:

PNP>DHCP>TR069> Static Provisioning

Transferring protocol: FTP, TFTP, HTTP, HTTPS

Table 18 - Auto Provision

Parameters	Description	
Basic settings		
CPE Serial Number	Display the device SN	
Authentication Name	The user name of provision server	
Authentication Password	The password of provision server	
Configuration File	If the device configuration file is encrypted , user should add the encryption	
Encryption Key	key here	
General Configuration File	If the common configuration file is encrypted, user should add the encryption	
Encryption Key	key here	
Download Fail Check	If there download is failed, phone will retry with the configured times	
Times	If there download is failed, phone will retry with the configured times.	
Update Contact Interval	Phone will update the phonebook with the configured interval time. If it is 0,	
	the feature is disabled.	
Save Auto Provision	Save the HTTP/HTTPS/FTP user name and password. If the provision URL	
Information	is kept, the information will be kept.	
Download Common	Whether phone will download the common configuration file.	
Config enabled	Whether priorie will download the common configuration file.	
Enable Server Digest	When the feature is enable, if the configuration of server is changed, phone	
Enable Server Digest	will download and update.	
DHCP Option		
	Conflugre DHCP option, DHCP option supports DHCP custom option	
Option Value	DHCP option 66 DHCP option 43, 3 methods to get the provision URL. The	
	default is Option 66.	

Custom Option Value	Custom Option value is allowed from 128 to 254. The option value must be same as server define.
Enable DHCP Option 120	Use Option120 to get the SIP server address from DHCP server.
SIP Plug and Play (PnP)	
E 010 0 0	Whether enable PnP or not. If PnP is enable, phone will send a SIP
	SUBSCRIBE message with broadcast method. Any server can support the
Enable SIP PnP	feature will respond and send a Notify with URL to phone. Phone could get
	the configuration file with the URL.
Server Address	Broadcast address. As default, it is 224.0.0.0.
Server Port	PnP port
Transport Protocol	PnP protocol, TCP or UDP.
Update Interval	PnP message interval.
Static Provisioning Serve	r
Server Address	Provisioning server address. Support both IP address and domain address.
	The configuration file name. If it is empty, phone will request the common file
O 6 (1 F1 N	and device file which is named as its MAC address.
Configuration File Name	The file name could be a common name, \$mac.cfg, \$input.cfg. The file
	format supports CFG/TXT/XML.
Protocol Type	Transferring protocol type , supports FTP、TFTP、HTTP and HTTPS
Undata Intanval	Configuration file update interval time. As default it is 1, means phone will
Update Interval	check the update every 1 hour.
	Provision Mode.
Lindata Mada	1. Disabled.
Update Mode	2. Update after reboot.
	3. Update after interval.
TR069	
Enable TR069	Enable TR069 after selection
ACS Server Type	There are 2 options Serve type, common and CTC.
ACS Server URL	ACS server address
ACS User	ACS server username (up to is 59 character)
ACS Password	ACS server password (up to is 59 character)
Enable TR069 Warning	If TD060 is enabled, there will be a prompt tang when connecting
Tone	If TR069 is enabled, there will be a prompt tone when connecting.
TLS Version	TLS version (TLS 1.0, TLS 1.1, TLS 1.2)
INFORM Sending Period	INFORM signal interval time. It ranges from 1s to 999s
STUN Server Address	Configure STUN server address
STUN Enable	To enable STUN server for TR069
	<u> </u>

10.7.5 Firmware Upgrade

Web page: Login phone web page, go to [System] >> [Upgrade].



Picture 124 - Web page firmware upgrade

LCD interface: go to [Menu] >> [Advanced setting] >> [Firmware Upgrade] .



Picture 125 - Firmware upgrade information display

Table 19 - Firmware upgrade

Parameter	Description	
Upgrade server		
	Enable automatic upgrade, If there is a new version txt and new	
Enable Auto Upgrade	software firmware on the server, phone will show a prompt upgrade	
	message after Update Interval.	
Upgrade Server Address1	Set available upgrade server address.	
Upgrade Server Address2	Set available upgrade server address.	
Update Interval	Set Update Interval.	
Firmware Information		
Current Software Version	It will show Current Software Version.	
Server Firmware Version	It will show Server Firmware Version.	

	If there is a new version txt and new software firmware on the server,
[Lingrada] button	the page will display version information and upgrade button will
[Upgrade] button	become available; Click [Upgrade] button to upgrade the new
	firmware.
Now version description	When there is a corresponding TXT file and version on the server
New version description	side, the TXT and version information will be displayed under the
information	new version description information.

- The file requested from the server is a TXT file called vendor_model_hw10.txt.Hw followed by the hardware version number, it will be written as hw10 if no difference on hardware. All Spaces in the filename are replaced by underline.
- The URL requested by the phone is HTTP:// server address/vendor_Model_hw10
 .txt: The new version and the requested file should be placed in the download directory of the HTTP server, as shown in the figure:



- TXT file format must be UTF-8
- vendor model hw10.TXT The file format is as follows:

Version=1.6.3 #Firmware

Firmware=xxx/xxx.z #URL, Relative paths are supported and absolute paths are possible, distinguished by the presence of protocol headers.

BuildTime=2018.09.11 20:00

Info=TXT|XML

Xxxxx

Xxxxx

Xxxxx

Xxxxx

After the interval of update cycle arrives, if the server has available files and versions, the phone will
prompt as shown below. Click [view] to check the version information and upgrade.



Picture 126 - Firmware upgrade

10.7.6 Factory Reset

- 1) The phone is in default standby mode.
- Press [Menu] to find [Advanced Settings], and press [OK].
- Press [Advanced Settings] to enter the password (default password is 123) to enter the interface.
- Press the [Restore factory Settings] button to select the file to be cleared.
- Press [OK] to clear after completion. When you select clear configuration file and clear all, the phone will
 restart automatically after clearing.
- 2) In standby, press and hold the **[OK]** button for 6S to perform the reset operation

11 Web Configurations

11.1 Web Page Authentication

The user can log into the web page of the phone to manage the user's phone information and operate the phone. Users must provide the correct user name and password to log in.

11.2 System >> Information

User can get the system information of the device in this page including,

- Model
- Hardware Version
- Software Version
- Uptime

And summarization of network status,

- Network Mode
- MAC Address
- IP
- Subnet Mask
- Default Gateway

Besides, summarization of SIP account status.

- SIP User
- SIP account status (Registered / Unapplied / Trying / Timeout)

11.3 System >> Account

On this page the user can change the password for the login page.

Users with administrator rights can also add or delete users, manage users, and set permissions and passwords for new users.

11.4 System >> Configurations

On this page, users with administrator privileges can view, export, or import the phone configuration, or restore the phone to factory Settings.

■ Clear Configurations

Select the module in the configuration file to clear.

SIP: account configuration.

AUTOPROVISION: automatically upgrades the configuration

TR069:TR069 related configuration

MMI: MMI module, including authentication user information, web access protocol, etc.

DSS Key: DSS Key configuration

■ Clear Data Tables

Select the local data table to be cleared, all selected by default.

Reset Phone

The phone data will be cleared, including configuration and database tables.

11.5 System >> Upgrade

Upgrade the phone software version, customized ringtone, background, DSS Key icon, etc., can also be upgraded to delete the file. Ring tone support ".wav" format.

11.6 System >> Auto Provision

The Auto Provision settings help IT manager or service provider to easily deploy and manage the devices in mass volume. For the detail of Auto Provision, please refer to this link Auto Provision Description.

11.7 System >> Tools

Tools provided in this page help users to identify issues at trouble shooting. Please refer to <u>13 Trouble</u> <u>Shooting</u> for more detail.

11.8 System >> Reboot Phone


This page can restart the phone.

12 Network >> Basic

This page allows users to configure network connection types and parameters.

12.1 Network >> Service Port

This page provides settings for Web page login protocol, protocol port settings and RTP port.

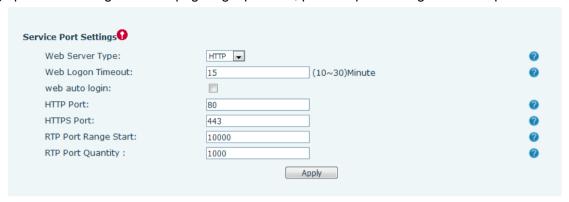

Picture 127 - Service Port Settings

Table 20 - Service port

Parameter	Description
Web Server Type	Reboot to take effect after settings. Optionally, the web page login is
	HTTP/HTTPS.
Web Logen Timeout	Default as 15 minutes, the timeout will automatically exit the login page,
Web Logon Timeout	need to login again.
Web oute legin	After the timeout does not need to enter a user name password, will
Web auto login	automatically login to the web page.
	The default is 80. If you want system security, you can set ports other than
HTTP Port	80.
	Such as :8080, webpage login: HTTP://ip:8080
HTTPS Port	The default is 443, the same as the HTTP port.
RTP Port Range Start	The value range is 1025 to 65535. The value of RTP port starts from the
	initial value set. For each call, the value of voice and video port is added 2.
RTP Port Quantity	Number of calls.

12.2 Network >> VPN

Users can configure a VPN connection on this page. See <u>10.7.2.3 VPN</u> for more details.

12.3 Network >> Advanced

Advanced network Settings are typically configured by the IT administrator to improve the quality of the phone service. For configuration, query the <u>10.7 advanced</u> Settings.

12.4 Line >> SIP

Configure the Line service configuration on this page.

Table 21 - Line configuration on the web page

Parameters	Description	
Register Settings		
Line Status	Display the current line status at page loading. To get the up to date line	
	status, user has to refresh the page manually.	
Activate	Whether the service of the line is activated	
Username	Enter the username of the service account.	
Authentication User	Enter the authentication user of the service account	
Display Name	Enter the display name to be sent in a call request.	
Authentication Password	Enter the authentication password of the service account	
Realm	Enter the SIP domain if requested by the service provider	
Server Name	Input server name.	
SIP Server 1		
Server Address	Enter the IP or FQDN address of the SIP server	
Server Port	Enter the SIP server port, default is 5060	
Transport Protocol	Set up the SIP transport line using TCP or UDP or TLS.	
Registration Expiration	Set SIP expiration date.	
SIP Server 2		
Server Address	Enter the IP or FQDN address of the SIP server	
Server Port	Enter the SIP server port, default is 5060	
Transport Protocol	Set up the SIP transport line using TCP or UDP or TLS.	
Registration Expiration	Set SIP expiration date.	
SIP Proxy Server Address	Enter the IP or FQDN address of the SIP proxy server.	
Proxy Server Port	Enter the SIP proxy server port, default is 5060.	
Proxy User	Enter the SIP proxy user.	
Proxy Password	Enter the SIP proxy password.	
Backup Proxy Server	Enter the ID or EODN address of the health provisionary	
Address	Enter the IP or FQDN address of the backup proxy server.	
Backup Proxy Server Port	Enter the backup proxy server port, default is 5060.	
Basic Settings		

Enable Auto Answering	Enable auto-answering, the incoming calls will be answered automatically after the delay time
Auto Answering Delay	Set the delay for incoming call before the system automatically answered it
Call Forward	Enable unconditional call forward, all incoming calls will be forwarded to the
Unconditional	number specified in the next field
Call Forward Number for	
Unconditional	Set the number of unconditional call forward
	Enable call forward on busy, when the phone is busy, any incoming call will
Call Forward on Busy	be forwarded to the number specified in the next field.
Call Forward Number for Busy	Set the number of call forward on busy .
Call Forward on No	Enable call forward on no answer, when an incoming call is not answered
	within the configured delay time, the call will be forwarded to the number
Answer	specified in the next field.
Call Forward Number for	
No Answer	Set the number of call forward on no answer.
Call Forward Delay for No	
Answer	Set the delay time of not answered call before being forwarded.
Transfer Timeout	Set the timeout of call transfer process.
	Set the type of call conference, Local=set up call conference by the device
Conference Type	itself, maximum supports two remote parties, Server=set up call
	conference by dialing to a conference room on the server
Server Conference Number	Set the conference room number when conference type is set to be Server
Cubacuiba Fan Vaisa	Enable the device to subscribe a voice message waiting notification, if
Subscribe For Voice	enabled, the device will receive notification from the server if there is voice
Message	message waiting on the server
Voice Message Number	Set the number for retrieving voice message
Voice Message Subscribe	Set the interval of voice macross netification as be existing
Period	Set the interval of voice message notification subscription
	Enabling hotline configuration, the device will dial to the specific number
Enable Hotline	immediately at audio channel opened by off-hook handset or turn on
	hands-free speaker or headphone
Hotline Delay	Set the delay for hotline before the system automatically dialed it
Hotline Number	Set the hotline dialing number
Dial Without Registered	Set call out by proxy without registration
Enable Missed Call Log	If enabled, the phone will save missed calls into the call history record.
<u> </u>	·

DTMF Type	Set the DTMF type to be used for the line
DTMF SIP INFO Mode	Set the SIP INFO mode to send '*' and '#' or '10' and '11'
Enable DND	Enable Do-not-disturb, any incoming call to this line will be rejected
	automatically
Subscribe For Voice	Enable the device to subscribe a voice message waiting notification, if
	enabled, the device will receive notification from the server if there is voice
Message	message waiting on the server
Use VPN	Set the line to use VPN restrict route
Use STUN	Set the line to use STUN for NAT traversal
Enable Failback	Whether to switch to the primary server when it is available.
Failback Interval	A Register message is used to periodically detect the time interval for the
Faliback interval	availability of the main Proxy.
O:	Multiple proxy cases, whether to allow the invite/register request to also
Signal Failback	execute failback.
Cian al Datas Cassata	The number of attempts that the SIP Request considers proxy unavailable
Signal Retry Counts	under multiple proxy scenarios.
0.40.46	Set the priority and availability of the codecs by adding or remove them
Codecs Settings	from the list.
Video Codecs	Select video code to preview video.
Advanced Settings	
	When this setting is enabled, the features in this section will not be handled
Use Feature Code	by the device itself but by the server instead. In order to control the
Use realure Code	enabling of the features, the device will send feature code to the server by
	dialing the number specified in each feature code field.
Enable DND	Set the feature code to dial to the server
Disable DND	Set the feature code to dial to the server
Enable Call Forward	Cat the feature and to dial to the conver
Unconditional	Set the feature code to dial to the server
Disable Call Forward	Cat the feature and to dial to the conver
Unconditional	Set the feature code to dial to the server
F	
Enable Call Forward on	Sat the feature code to dial to the correct
Busy	Set the feature code to dial to the server
Busy	Set the feature code to dial to the server Set the feature code to dial to the server
Busy Disable Call Forward on	Set the feature code to dial to the server
Busy Disable Call Forward on Busy	
Busy Disable Call Forward on Busy Enable Call Forward on	Set the feature code to dial to the server

Enable Blocking	
Anonymous Call	Set the feature code to dial to the server
Disable Blocking	Set the feature code to dial to the server
Anonymous Call	Set the leature code to dial to the server
Call Waiting On Code	Set the feature code to dial to the server
Call Waiting Off Code	Set the feature code to dial to the server
Send Anonymous On	Set the feature code to dial to the server
Code	Set the leature code to diar to the server
Send Anonymous Off	Set the feature code to dial to the server
Code	det the leature code to diar to the server
SIP Encryption	Enable SIP encryption such that SIP transmission will be encrypted
RTP Encryption	Enable RTP encryption such that RTP transmission will be encrypted
	Set the line to enable call ending by session timer refreshment. The call
Enable Session Timer	session will be ended if there is not new session timer event update
	received after the timeout period
Session Timeout	Set the session timer timeout period
Enable BLF List	Enable/Disable BLF List
BLF List Number	BLF List allows one BLF key to monitor the status of a group. Multiple BLF
DEI EIST Nullibei	lists are supported.
Response Single Codec	If setting enabled, the device will use single codec in response to an
Tresponse Single Codec	incoming call request
	The registered server will receive the subscription package from ordinary
BLF Server	application of BLF phone.
DEI GCIVCI	Please enter the BLF server, if the sever does not support subscription
	package, the registered server and subscription server will be separated.
Keep Alive Type	Set the line to use dummy UDP or SIP OPTION packet to keep NAT
receptaive type	pinhole opened
Keep Alive Interval	Set the keep alive packet transmitting interval
Keep Authentication	Keep the authentication parameters from previous authentication
Blocking Anonymous Call	Reject any incoming call without presenting caller ID
User Agent	Set the user agent, the default is Model with Software Version.
Specific Server Type	Set the line to collaborate with specific server type
SIP Version	Set the SIP version
Anonymous Call Standard	Set the standard to be used for anonymous
Local Port	Set the local port
Ring Type	Set the ring tone type for the line
Enable user=phone	Sets user=phone in SIP messages.
Use Tel Call	Set use tel call

I Auto TCP	Using TCP protocol to guarantee usability of transport for SIP messages
	above 1500 bytes
Enable Rport S	Set the line to add rport in SIP headers
Enable PRACK S	Set the line to support PRACK SIP message
DNS Mode S	Select DNS mode, A, SRV, NAPTR
Enable Long Contact A	Allow more parameters in contact field per RFC 3840
Enghis Christ Draws	Enables the use of strict routing. When the phone receives packets from
Enable Strict Proxy	the server, it will use the source IP address, not the address in via field.
Convert URI C	Convert not digit and alphabet characters to %hh hex code
Use Quote in Display Name	Whether to add quote in display name
Enable GRUU S	Support Globally Routable User-Agent URI (GRUU)
Sync Clock Time 1	Time Sync with server
\	With the post-call hold capture package enabled, you can see that in the
Enable Inactive Hold	INVITE package, SDP is inactive.
Caller ID Header	Set the Caller ID Header
Use 182 Response for	0-446
Call waiting	Set the device to use 182 response code at call waiting response
Enable Feature Sync F	Feature Sync with server
Enable SCA E	Enable/Disable SCA (Shared Call Appearance)
CallPark Number S	Set the CallPark number.
Server Expire S	Set the timeout to use the server.
TLS Version (Choose TLS Version.
uaCSTA Number	Set uaCSTA Number.
Enable Click To Talk	With the use of special server, click to call out directly after enabling.
Flash mode (Chose Flash mode, normal or SIP info.
Flash Info Content-Type S	Set the SIP info content type.
Flash Info Content-Body S	Set the SIP info content body.
PickUp Number S	Set the scramble number when the Pickup is enabled.
JoinCall Number S	Set JoinCall Number.
Intercom Number S	Set Intercom Number.
Unregister On Boot V	Whether to enable logout function.
Enable MAC Header V	When opening the registration, are IP package and user agent with MAC.
Enable Register MAC Header	When opening the registration, is user agent with MAC.
BLF Dialog Strict Match	Whether to enable accurate matching of BLF sessions.
PTime(ms)	Set whether to bring ptime field, default no.

SIP Global Settings	
Strict Branch	Set up to strictly match the Branch field.
Enable Group	Set open group.
Enable RFC4475	Set to enable RFC4475.
Enable Strict UA Match	Enable strict UA matching.
Registration Failure Retry	Cat the registration failure ratmy time
Time	Set the registration failure retry time.
Local SIP Port	Modify the phone SIP port.

12.5 Line >> SIP Hotspot

Please refer to 9.9 SIP Hotspot.

12.6 Line >> Dial Plan




Picture 128 - Dial plan settings

Table 22 - Phone 7 dialing methods

Parameters	Description
Drago # to involve dialing	The user dials the other party's number and then adds the # number
Press # to invoke dialing	to dial out;
Dial Fixed Langth	The number entered by the user is automatically dialed out when it
Dial Fixed Length	reaches a fixed length
Timeout dial	The system dials automatically after timeout
Press # to Do Blind Transfer	The user enters the number to be transferred and then presses the
Press # to Do Blind Transier	"#" key to transfer the current call to a third party
Plind Transfer on Onbook	After the user enters the number, hang up the handle or turn off the
Blind Transfer on Onhook	hands-free function to transfer the current call to a third party.

Attended Transfer on Onhook	Hang up the handle or press the hands-free button to realize the
	function of attention-transfer, which can transfer the current call to a
	third party.
Attended Transfer on	During a three-way call, hang up the handle and the remaining two
Conference Onhook	parties remain on the call.
Enable E.164	Please refer to e. 164 standard specification

Add dialing rules:

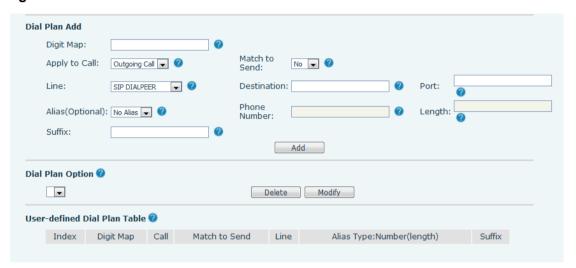

Picture 129 - Custom setting of dial - up rules


Table 23 - Dial - up rule configuration table

Parameters	Description		
	There are two types of matching: Full Matching or Prefix Matching. In Full		
	matching, the entire phone number is entered and then mapped per the Dial		
Dial rule	Peer rules.		
Diai Tule	In prefix matching, only part of the number is entered followed by T. The		
	mapping with then take place whenever these digits are dialed. Prefix mode		
	supports a maximum of 30 digits.		
Note: Two different special characters are used.			
x Matches	■ x Matches any single digit that is dialed.		
■ [] Specifies	■ [] Specifies a range of numbers to be matched. It may be a range, a list of ranges separated		
by commas, or a list of digits.			
Destination	Set Destination address. This is for IP direct.		
Port	Set the Signal port, and the default is 5060 for SIP.		
Alica	Set the Alias. This is the text to be added, replaced or deleted. It is an optional		
Alias	item.		
Note: There are four types of aliases.			

■ all: xxx – xxx	all: xxx – xxx will replace the phone number.	
■ add: xxx – xx	■ add: xxx – xxx will be dialed before any phone number.	
■ del –The char	■ del –The characters will be deleted from the phone number.	
■ rep: xxx – xxx will be substituted for the specified characters.		
Suffix	Characters to be added at the end of the phone number. It is an optional item.	
Lavath	Set the number of characters to be deleted. For example, if this is set to 3, the	
Length	phone will delete the first 3 digits of the phone number. It is an optional item.	


This feature allows the user to create rules to make dialing easier. There are several different options for dial rules. The examples below will show how this can be used.

 Example 1: All Substitution -- Assume that it can make a direct IP call to IP address 172.168.2.208. Using this feature. 123 can be substituted for 172.168.2.208.



Picture 130 - Dial rules table (1)

 Example 2: Partial Substitution -- To dial a long distance call to Beijing requires dialing area code 010 before the local phone number. Using this feature 1 can be substituted for 010. For example, to call 62213123 would only require dialing 162213123 instead of 01062213123.



Picture 131 - Dial rules table (2)

Example 3: Addition -- Two examples are shown. In the first case, it is assumed that 0 must be dialed before any 11 digit number beginning with 13. In the second case, it is assumed that 0 must be dialed before any 11 digit number beginning with 135, 136, 137, 138, or 139. Two different special characters are used.

- x -- Matches any single digit that is dialed.
- [] -- Specifies a range of numbers to be matched. It may be a range, a list of ranges separated by commas, or a list of digits.

12.7 Line >> Action Plan

1. When SIP calls, multicast calls or intercom calls are made, the device converts calls that conform to the number rules into group calls.

Table 24 - IP camera

Parameter	Description

Number	Auxiliary phone number (support video)
Туре	Support video display on call.
Direction	For call mode, incoming/outgoing call displays video
Line	Set up outgoing lines.
Username	Bind the user name of the IP camera.
Password	Bind IP camera password.
URL	Video streaming information;Mcast Address
	(mcast://IP:port)
User Agent	Set user agent information

12.8 Line >> Basic Settings

Set up the register global configuration.

Table 25 - Set the line global configuration on the web page

Parameters	Description	
STUN Settings		
Server Address	Set the STUN server address	
Server Port	Set the STUN server port, default is 3478	
Binding Period	Set the STUN binding period which can be used to keep the NAT pinhole	
	opened.	
SIP Waiting Time	Set the timeout of STUN binding before sending SIP messages	
The TLS authentication		
TLS Certification File	Upload or delete the TLS certification file used for encrypted SIP	
	transmission.	

12.9 Phone settings >> Features

Configuration phone features.

Table 26 - General function Settings

Parameters	Description
Basic Settings	
Enable Call Waiting	Enable this setting to allow user to take second incoming call during an
	established call. Default enabled.
Enable Call Transfer	Enable Call Transfer.
Semi-Attended Transfer	Enable Semi-Attended Transfer by selecting it
Enable 3-Way Conference	Enable 3-way conference by selecting it

Enable Auto Onhook	The phone will hang up and return to the idle automatically at hands-free mode
Auto Onhook Time	Specify Auto Onhook time, the phone will hang up and return to the idle
	automatically after Auto Hand down time at hands-free mode, and play
	dial tone Auto Onhook time at handset mode
	Enable Ring for Handset by selecting it, the phone plays ring tone from
Ring for Headset	handset.
	Enable this feature, headset plugged in the phone, user press 'answer'
Auto Headset	key or line key to answer a call with the headset automatically.
Enable Silent Mode	When enabled, the phone is muted, there is no ringing when calls, you
Disable Mate for Direct	can use the volume keys and mute key to unmute.
Disable Mute for Ring	When it is enabled, you can't mute the phone
Enable Default Line	If enabled, user can assign default SIP line for dialing out rather than
	SIP1.
Enable Auto Switch Line	Enable phone to select an available SIP line as default automatically
Default Ext Line	Select the default line to use for outgoing calls
Ban Outgoing	If you select Ban Outgoing to enable it, and you cannot dial out any
Dan Odigoling	number.
Hide DTMF	Configure the hide DTMF mode.
Enable CallLog	Select whether to save the call log.
Enable Restricted Incoming	NAME OF THE PARTY
List	Whether to enable restricted call list.
Enable Allowed Incoming	
List	Whether to enable the allowed call list.
Enable Restricted Outgoing	
List	Whether to enable the restricted allocation list.
Enable Country Code	Whether the country code is enabled.
Country Code	Fill in the country code.
Area Code	Fill in the area code.
Enable Number Privacy	Whether to enable number privacy.
Litable Hamber Filled	Matching direction, there are two kinds of rules from right to left and from
Match Direction	left to right.
Start Position	Open number privacy after the start of the hidden location.
Hide Digits	Turn on number privacy to hide the number of digits.
Allow IP Call	If enabled, user can dial out with IP address
P2P IP Prefix	Prefix a point-to-point IP call.
Caller Name Priority	Change caller ID display priority.
Emergency Call Number	Set Emergency Call Number

Search path	Select the search path.
LDAP Search	Select from with one LDAP for search
Emergency Call Number	Configure the Emergency Call Number. Despite the keyboard is locked,
	you can dial the emergency call number
Restrict Active URI Source	Set the device to accept Active URI command from specific IP address.
IP	More details please refer to this link
	Configure the Push XML Server, when phone receives request, it will
Push XML Server	determine whether to display corresponding content on the phone which
	sent by the specified server or not.
	Disable this feature, user enter number will open audio channel
Enable Pre-Dial	automatically.
	Enable the feature, user enter the number without opening audio channel.
Enable Multi Line	If enabled, up to 10 simultaneous calls can exist on the phone, and if
Enable Main Eine	disabled, up to 2 simultaneous calls can exist on the phone.
Line Display Format	Custom line format: SIPn/SIPn: xxx/xxx@SIPn
Contact As White List Type	NONE/BOTH/DND White List/FWD White List
Block XML When Call	Disable XML push on call.
SIP notify	When enabled, the phone displays the information when it receives the
SIF Hothly	relevant notify content.
Tone Settings	
Enable Holding Tone	When turned on, a tone plays when the call is held
Enable Holding Tolle	When tarned on, a tone plays when the came here
Enable Call Waiting Tone	When turned on, a tone plays when call waiting
Enable Call Waiting Tone	
-	When turned on, a tone plays when call waiting
Enable Call Waiting Tone Play Dialing DTMF Tone	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at
Enable Call Waiting Tone	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled.
Enable Call Waiting Tone Play Dialing DTMF Tone	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled.
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close.
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time.
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer DND Start Time	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time. Set DND Start Time
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer DND Start Time DND End Time	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time. Set DND Start Time
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer DND Start Time DND End Time	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time. Set DND Start Time Set DND End Time
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer DND Start Time DND End Time Intercom Settings	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time. Set DND Start Time Set DND End Time When intercom is enabled, the device will accept the incoming call
Enable Call Waiting Tone Play Dialing DTMF Tone Play Talking DTMF Tone DND Settings DND Option Enable DND Timer DND Start Time DND End Time Intercom Settings	When turned on, a tone plays when call waiting Play DTMF tone on the device when user pressed a phone digits at dialing, default enabled. Play DTMF tone on the device when user pressed a phone digits during taking, default enabled. Select to take effect on the line or on the phone or close. Enable DND Timer, If enabled, the DND is automatically turned on from the start time to the off time. Set DND Start Time Set DND End Time When intercom is enabled, the device will accept the incoming call request with a SIP header of Alert-Info instruction to automatically answer

	E 11.14 B 1 1 C 20 1 1 1 1	
Enable Intercom Barge	Enable Intercom Barge by selecting it, the phone auto answers the	
	intercom call during a call. If the current call is intercom call, the phone will	
	reject the second intercom call	
Response Code Settings		
DND Response Code	Set the SIP response code on call rejection on DND	
Busy Response Code	Set the SIP response code on line busy	
Reject Response Code	Set the SIP response code on call rejection	
Password Dial Settings		
	Enable Password Dial by selecting it, When number entered is beginning	
	with the password prefix, the following N numbers after the password	
Enable Password Dial	prefix will be hidden as *, N stand for the value which you enter in the	
Eliable Password Diai	Password Length field. For example: you set the password prefix is 3,	
	enter the Password Length is 2, then you enter the number 34567, it will	
	display 3**67 on the phone.	
Encryption Number Length	Configure the Encryption Number length	
Password Dial Prefix	Configure the prefix of the password call number	
Power LED		
	Standby power lamp state, off when off, open is always bright red. Off by	
Common	default.	
	The status of power lamp when there is unread short message/voice	
SMS/MWI	message, including off/on/slow flash/quick flash, default slow flash.	
	The state of the power lamp when there is a missed call, including	
Missed	off/on/slow flash/quick flash, the default slow flash.	
T II /D: 1	In the talk/dial state, the power lamp state, off is off, on is always red	
Talk/Dial	bright, the default is off.	
	Power lamp status when there is an incoming call, including off/on/slow	
Ringing	flash/quick flash, default flash.	
	Power lamp status in mute mode, including off/on/slow flash/quick flash,	
Mute	off by default.	
	The power lamp state, including off/on/slow flash/quick flash, is turned off	
Hold/Held	by default when left/retained.	
Notification Popups		
	No incoming call popup prompt after opening, no popup prompt when	
Display Missed Call Popup	closing, open by default.	
	Voice message popup prompt is not answered after opening, and it is	
Display MWI Popup	opened by default if there is no popup prompt when closing.	
Display Device Connect	There is a popup prompt when the WIFI adapter is connected. There is no	
Popup	popup prompt when the WIFI adapter is closed. It is on by default.	
IF THE	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	

Display SMS Popup	There is popup prompt for unread messages after opening, and there is
	no popup prompt when closing. It is opened by default.
Display Other Popup	When the handle is not hung back after opening, registration fails, IP
	acquisition fails, Tr069 connection fails and other abnormalities, there will
	be popup prompt when it is opened; otherwise, there will be no prompt
	when it is closed, and it will be opened by default.

12.10 Phone settings >> Media Settings

Change voice Settings.

Table 27 - Voice settings

Parameters	Description
Codecs Settings	Select enable or disable voice encoding:
	G.711A/U,G.722,G.729, G.726-16,G726-24,G726-32,G.726-40,
	ILBC, Opus
Audio Settings	
Handset Volume	Set the Handset volume, the value must be 1~9
Default Ring Type	Configure default ringtones. If no special ringtone is set for the phone
	number, the default ringtone will be used.
Speakerphone Volume	Set the hands-free volume to 1-9.
Headset Ring Volume	Set the volume of the earphone ringtone to 1~9.
Headset Volume	Set the volume of the headset to 1~9.
Speakerphone Ring Volume	Set the volume of hands-free ringtone to 1~9.
G.723.1 Bit Rate	5.3kb/s or 6.3kb/s is available.
DTMF Payload Type	Enter the DTMF payload type, the value must be 96~127.
AMR Payload Type	Set AMR load type, range 96~127.
Headset Mic Gain	Set the earphone's radio volume gain to fit different models of earphones.
Opus playload type	Set Opus load type, range 96~127.
OPUS Sample Rate	Set Opus sampling rate, including opus-nb (8KHz) and opus-wb (16KHz).
ILBC Payload Type	Set the ILBC Payload Type, the value must be 96~127.
ILBC Payload Length	Set the ILBC Payload Length
Enable MWI Tone	When there is a new voice message message, the phone will start a
	special dial tone.
Enable VAD	Whether voice activity detection is enabled.
Onhook Time	Configure a minimum response time, which defaults to 200ms
EHS Type	EHS headset is available after enabling.
RTP Control Protocol(RTCP) Settings	

CNAME user	Set CNAME user
CNAME host	Set CNAME host
RTP Settings	
RTP keep alive	Hold the call and send the packet after 30s
Alert Info Ring Settings	
Value	Set the value to specify the ring type.
Ring Type	Type1-Type9

12.11 Phone settings >> MCAST

This feature allows user to make some kind of broadcast call to people who are in multicast group. User can configure a multicast DSS Key on the phone, which allows user to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Table 28 - Multicast parameters

Parameters	Description
Normal Call Priority	Define the priority of the active call, 1 is the highest priority, 10 is the lowest.
Enable Page Priority	The voice call in progress shall take precedence over all incoming paging calls.
Name	Listened multicast server name
Host: port	Listened multicast server's multicast IP address and port.

12.12 Phone settings >> Action

Action URL

12.13 Phone settings >> Time/Date

The user can configure the time Settings of the phone on this page.

Table 29 - Time&Date settings


Parameters	Description	
Network Time Server Settings		
Time Synchronized via SNTP	Enable time-sync through SNTP protocol	
Time Synchronized via DHCP	Enable time-sync through DHCP protocol	
Primary Time Server	Set primary time server address	
Secondary Time Server	Set secondary time server address, when primary server is not	

reachable, the device will try to connect to secondary time server to
get time synchronization.
Select the time zone
Time of re-synchronization with time server
Set the time display in 12-hour mode
Select the time/date display format
Choose your local, phone will set daylight saving time automatically
based on the local
Choose DST Set Type, if Manual, you need to set the start time and
end time.
Daylight saving time rules are based on specific dates or relative
rule dates for conversion. Display in read-only mode in automatic
mode.
The offset minutes when DST started
The DST start month
The DST start week
The DST start weekday
The DST start hour
The DST start minute
The DST end month
The DST end week
The DST end weekday
The DST end hour
The DST end minute
You can set your time manually

12.14 Phone settings >> Tone

This page allows users to configure a phone prompt.

You can either select the country area or customize the area. If the area is selected, it will bring out the following information directly. If you choose to customize the area, you can modify the button tone, call back tone and other information.

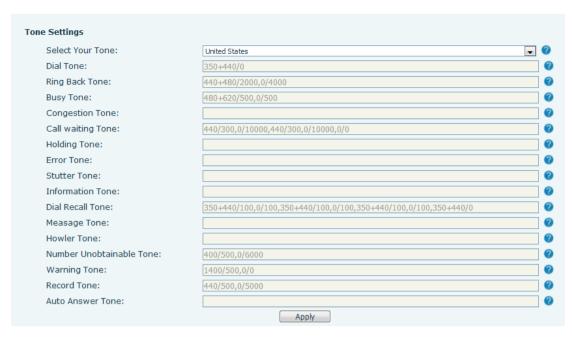

Picture 132 - Tone settings on the web

12.15 Phone settings >> Advanced

User can configure the advanced configuration settings in this page.

- Screen Configuration.
 - Enable Energy Saving
 - Backlight Time
- LCD Menu Password Settings.

The password is 123 by default.

- Keyboard Lock Settings.
- Configure Greeting Words

The greeting message will display on the top left corner of the LCD when the device is idle, which is limited to 16 characters. The default chars are 'VOIP PHONE'.

12.16 Phonebook >> Contact

User can add, delete, or edit contacts in the phonebook in this page. User can browse the phonebook and sorting it by name, phones, or filter them out by group.

To add a new contact, user should enter contact's information and press "Add" button to add it.

To edit a contact, click on the checkbox in front of the contact, the contact information will be copied to the contact edit boxes, press "Modify" button after finished editing.

To delete one or multiple contacts, check on the checkbox in front of the contacts wished to be deleted and click the "Delete" button, or click the "Clear" button with selecting any contacts to clear the phonebook.

User can also add multiple contacts into a group by selecting the group in the dropdown options in front of "Add to Group" button at the bottom of the contact list, selecting contacts with checkbox and click "Add to Group" to add selected contacts into the group.

Similarly, user can select multiple users and add them into blacklist by click "Add to Blacklist" button.

12.17 Phonebook >> Cloud phonebook

Cloud Phonebook

User can configure up to 8 cloud phonebooks. Each cloud phonebook must be configured with an URL where an XML phonebook is stored. The URL may be based on HTTP/HTTPs or FTP protocol with or without authentication. If authentication is required, user must configure the username and password.

To configure a cloud phonebook, the following information should be entered,

Phonebook name (must)

Phonebook URL (must)

Access username (optional)

Access password (optional)

LDAP Settings

The cloud phonebook allows user to retrieve contact list from a LDAP Server through LDAP protocols.

User must configure the LDAP Server information and Search Base to be able to use it on the device. If the LDAP server requests an authentication, user should also provide username and password.

To configure a LDAP phonebook, the following information should be entered,

Display Title (must)

LDAP Server Address (must)

LDAP Server Port (must)

Search Base (must)

Access username (optional)

Access password (optional)

Note! Refer to the LDAP technical documentation before creating the LDAP phonebook and phonebook server.

Web page preview

Phone page supports preview of Internet phone directory and contacts

- After setting up the XML Voip directory or LDAP,
- Select [Phone book] >> [Cloud phone book] >> [Cloud phone book] to select the type.
- Click the set XML/LDAP to download the contact for browsing.



Picture 133 - Web cloud phone book Settings

12.18 Phonebook >> Call List

Restricted Incoming Calls:

It is similar like a blacklist. Add the number to the blacklist, and the user will no longer receive calls from the stored number until the user removes it from the list.

Users can add specific Numbers to the blacklist or add specific prefixes to the blacklist to block calls with all Numbers with this prefix.

Allowed Incoming Calls:

When DND is enabled, the incoming call number can still be called.

■ Restricted Outgoing Calls:

Adds a number that restricts outgoing calls and cannot be called until the number is removed from the table.

12.19 Phonebook >> Web Dial

Use web pages for call, reply, and hang up operations.

12.20 Phonebook >> Advanced

Users can export the local phone book in XML, CSV, and VCF format and save it on the local computer. Users can also import contacts into the phone book in XML, CSV, and VCF formats.

Attention! If the user imports the same phone book repeatedly, the same contact will be ignored. If the name is the same but the number is different, the contact is created again.

Users can delete groups or add new groups on this page. Deleting a contact group does not delete contacts in that group.

12.21 Call Log

The user can browse the complete call record in this page. The call record can be sorted by time. Call number, contact name or line, and the call record can be screened by call record type (incoming call, outgoing call,

missed call, forward call).

The user can also save the number in the call record to his/her phone book or add it to the blacklist/whitelist. Users can also dial the web page by clicking on the number in the call log.

Users can also download call records conditionally and save them locally.

12.22 Function Key >> Function Key

One-key transfer Settings: establish new call, blind transfer, attention-transfer, one-key three-party, Play DTMF.

The device provides 2 user-defined shortcuts that users can configure on a web page.

Table 30 - Function Key configuration

Parameters	Description	
	BLF (New Call/BXFE /AXFER): It is used to prompt user the state of the subscribe	
	extension, and it can also pick up the subscribed number, which help user monitor the	
	state of subscribe extension (idle, ringing, a call). There are 3 types for one-touch BLF	
	transfer method.	
	p.s. User should enter the pick-up number for specific BLF key to fulfill the pick-up	
	operation.	
Memory Key	Presence: Compared to BLF, the Presence is also able to view whether the user is	
	online.	
	Note: You cannot subscribe the same number for BLF and Presence at the same time	
	Speed Dial: You can call the number directly which you set. This feature is convenient	
	for you to dial the number which you frequently dialed.	
	Intercom: This feature allows the operator or the secretary to connect the phone	
	quickly; it is widely used in office environments.	
Line	It can be configured as a Line Key. User is able to make a call by pressing Line Key.	
Koy Event	User can select a key event as a shortcut to trigger.	
Key Event	For example: MWI / DND / Release / Headset / Hold / etc.	
DTMF	It allows user to dial or edit dial number easily.	
URL	Open the specific URL directly.	
Multipoet	Configure the multicast address and audio codec. User presses the key to initiate the	
Multicast	multicast.	
Action URL	The user can use a specific URL to make basic calls to the phone.	
XML browser	Users can set the DSS Key for specific URL download and other operations.	

12.23 Function Key >> Side Key

Side Key is a Key on both sides of the screen that functions as a shortcut Key. The default configuration is

line Key, which can be customized in the webpage. For Side Key function and Settings, please refer to 12.23 Function Key Settings.

12.24 Function Key >> Softkey

The User Settings mode and display style, display page.

Table 31 - Softkey configuration

Parameter	Description	
Softkey Mode		
Softkey mode	Disabled and More, Default is Disabled	
Softkey Style		
Softkey display style	Softkey Exit on Left or Right	
Screen		
	Redial/2aB/Delete/Exit/Call Back/Dial/Join/MWI/Local Contacts/Pickup/Call	
Call Dialer	Log/Missed/Clear/In/Dialed/Pause/ Next line/Prev	
	line/Headset/Audio/Video/Remote XML/DSS Key	
Conference	Hold/Split/End/Release/Mute/DSS Key/Headset	
	Call Log/Menu/Local Contacts/DND/Prev Account/Next Account/Blacklist/Call	
Doolston	Back/Call Forward/Locked/Memo/	
Desktop	Missed/MWI/Dialed/Reboot/Redial/Remote XML/SMS/	
	Headset/Status/DSS Key/ln	
	Redial/2aB/Delete/Exit/Forward/Local Contacts/Call Log	
Divert Dialed	/Clear/Missed/Dialed/Headset/Video/Audio/Remote XML	
	/DSS Key	
Ending	Redial/End/Headset/Release/DSS Key	
	Dial/2aB/Delete/Exit/Call Back/Local Contacts/Redial	
Predictive Dialer	/Pickup/MWI/Join/Call Log/Release/Missed/Pause/Dialed/	
Predictive Dialei	Headset/Video/Audio/Remote XML/DSS Key/In/Next line	
	/Prev line	
Ringing	Answer/Forward/Reject/Mute/Release/Headset/Video/Audio/DSS key	
Talking	Hold/Transfer/Conference/End/Mute/Release/New Call/	
	Local Contacts/Listen/Call Log/Next call/Prev call/	
	Private/Headset/Video/Audio/DSS Key	
Transfer Alerting	End/Transfer/Headset/Release/DSS Key	
Transfer Dialer	Redial/Delete/Exit/2aB/Dial/Local Contacts/Transfer/	
	Call Log/Clear/Missed/Dialed/Pause/Headset/Video/Audio/Remote XML/DSS	
	Key	
Trying	End/Release/Headset/DSS Key	

	Hold/Transfer/Conference/End/Answer/Forward/Mute/Next call/New call/Prev
Waiting	call/Reject/Release/Headset/Listen/
	Video/Audio/DSS Key

12.25 Function Key >> Advanced

One key transfer: for example, set the memory key 4370. Press the memory key when talking with 4374 to decide whether to call 4370 or transfer 4374 to 4370.

Select memory key function: for example, the phone set the memory key value to 4370. When 4370 calls, press this key to hold the call or hang up.

■ Global Key Settings



Picture 134 - Global Key Settings

■ Programmable key Settings


Please refer to the Table 25 Softkey configuration

12.26 Application >> Manage Recording

See <u>9.3 Record</u> for details of recording.

12.27 Security >> Web Filter

The user can set up a configuration management phone that allows only machines with a certain network segment IP access.

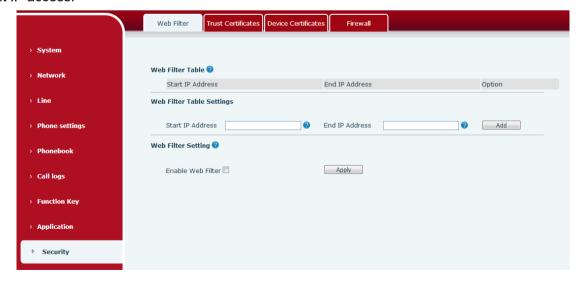

Picture 135 - Web Filter settings




Picture 136 - Web Filter Table

Adding and removing IP segments are accessible. Configure the starting IP address within the start IP, end the IP address within the end IP, and click [Add] to submit to take effect. A large network segment can be set, or it can be divided into several network segments to add. If the user wants to delete, select the initial IP of the network segment to be deleted from the drop-down menu, and then click [Delete] to take effect. Enable web page filtering: configure enable/disable web page access filtering; Click the "apply" button to take effect.

Note: if the device you are accessing is in the same network segment as the phone, please do not configure the filter segment of the web page to be outside your own network segment, otherwise you will not be able to log in the web page.

12.28 Security >> Trust Certificates

Set whether to open license certificate and general name validation, select certificate module. You can upload and delete uploaded certificates.

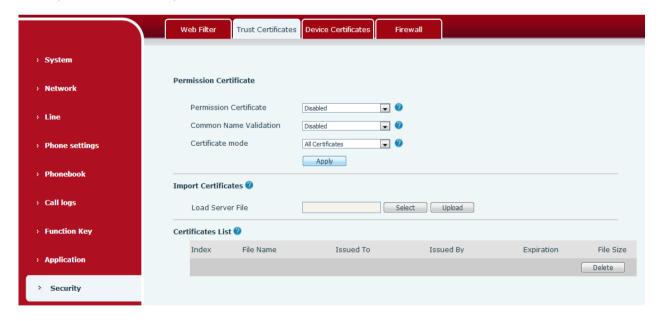

Picture 137 - Certificate of settings

12.29 Security >> Device Certificates


Select the device certificate as the default and custom certificate.

You can upload and delete uploaded certificates.



Picture 138 - Device certificate setting

12.30 Security >> Firewall

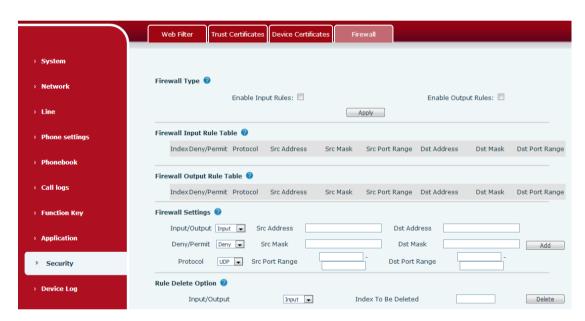

Picture 139 - Network firewall Settings

The user can set whether to enable the input through this page, output firewall and set the firewall input and output rules. Using these Settings can prevent some malicious network access, or restrict internal users access to some resources of the external network, which can improve security.

Firewall rule set is a simple firewall module. This feature supports two types of rules: input rules and output rules. Each rule is assigned an ordinal number, allowing up to 10 for each rule.


Considering the complexity of firewall Settings, the following is an example to illustrate:

ParameterDescriptionEnable Input RulesIndicates that the input rule application is enabled.Enable Output RulesIndicates that the output rule application is enabled.

Table 32 - Network Firewall

Input/Output	To select whether the currently added rule is an input or output rule.
Deny/Permit	To select whether the current rule configuration is disabled or allowed;
Protocol	There are four types of filtering protocols: TCP UDP ICMP IP.
Src Port Range	Filter port range
	Source address can be host address, network address, or all addresses
Src Address	0.0.0.0; It can also be a network address similar to *.*.*.0, such as:
	192.168.1.0.
	The destination address can be either the specific IP address or the full
Dst Address	address 0.0.0.0; It can also be a network address similar to *.*.*.0, such as:
	192.168.1.0.
	Is the source address mask. When configured as 255.255.255.255, it
Src Mask	means that the host is specific. When set as 255.255.255.0, it means that a
	network segment is filtered.
	Is the destination address mask. When configured as 255.255.255.255, it
Dst Mask	means the specific host. When set as 255.255.255.0, it means that a
	network segment is filtered.

 After setting, click [Add] and a new item will be added in the firewall input rule, as shown in the figure below:



Picture 140 - Firewall Input rule table

Then select and click the button [Apply].

In this way, when the device is running: ping 192.168.1.118, the packet cannot be sent to 192.168.1.118 because the output rule is forbidden. However, the other IP of the ping 192.168.1.0 network segment can still receive the response packet from the destination host normally.



Picture 141 - Delete firewall rules

Select the list you want to delete and click [Delete] to delete the selected list.

12.31 Device Log >> Device Log

You can grab the device log, and when you encounter an abnormal problem, you can send the log to the technician to locate the problem. See <u>13.6 Get log information</u>.

13 Trouble Shooting

When the phone is not in normal use, the user can try the following methods to restore normal operation of the phone or collect relevant information and send a problem report to Redstone technical support mailbox.

13.1 Get Device System Information

Users can get information by pressing the [Menu] >> [Status] option in the phone. The following information will be provided:

The network information

Equipment information (model, software and hardware version), etc.

13.2 Reboot Device

Users can reboot the device from soft-menu, [Menu] >> [Basic] >> [Reboot System], and confirm the action by [OK]. Or, simply remove the power supply and restore it again.


13.3 Reset Device to Factory Default

Resetting Device to Factory Default will erase all the user's configuration, preference, database and profiles on the device and restore the device back to the state as factory default.

To perform a factory default reset, user should press [Menu] >> [Advanced], and then input the password to enter the interface. Then choose [Factory Reset] and press [Enter], and confirm the action by [OK]. The device will be rebooted into a clean factory default state.

13.4 Screenshot


If there is a problem with the phone, the screenshot can help the technician locate the function and identify the problem. In order to obtain screen shots, log in the phone webpage [System] >> [Tools], and you can capture the pictures of the main screen and the secondary screen (you can capture them in the interface with problems).

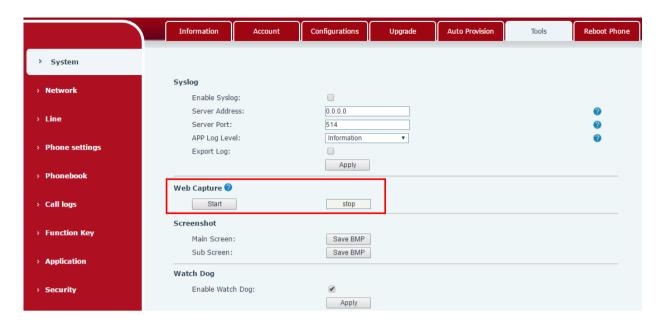

Picture 142 - Screenshot

13.5 Network Packets Capture

Sometimes it is helpful to dump the network packets of the device for issue identification. To get the packets dump of the device, user needs to log in the device web portal, open page [System] >> [Tools] and click [Start] in "Network Packets Capture" section. A pop-up message will be prompt to ask user to save the capture file. User then should perform the relevant operations such as activating/deactivating line or making phone calls and click [Stop] button in the web page when operation finished. The network packets of the device during the period have been dumped to the saved file.

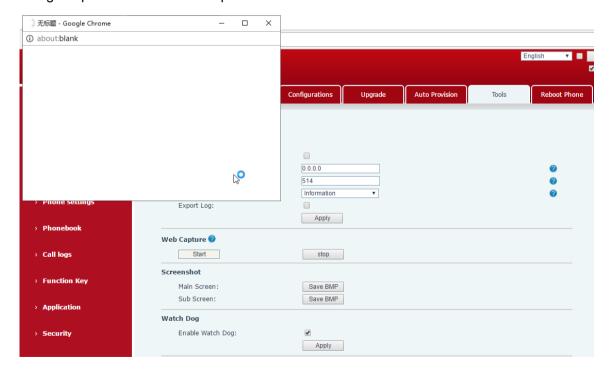

Picture 143 - Web capture

User may examine the packets with a packet analyzer or send it to Redstone support mailbox.

13.6 Get Log Information

Log information is helpful when encountering an exception problem. In order to get the log information of the phone, the user can log in the phone web page, open the page [**Device log**], click the [**Start**] button, follow the steps of the problem until the problem appears, and then click the [**End**] button, [**Save**] to local analysis or send the log to the technician to locate the problem.

13.7 Common Trouble Cases

Table 33 - Trouble Cases

Trouble Case	So	lution
	1.	The device is powered by external power supply via power adapter or
		PoE switch. Please use standard power adapter provided
		by manufacturer or PoE switch met with the specification requirements
Device could not boot up		and check if device is well connected to power source.
	2.	If you saw "POST MODE" on the device screen, the device system
		image has been damaged. Please contact location technical support to
		help you restore the phone system.
	1.	Please check if device is well connected to the network. The network
		Ethernet cable should be connected to the [Network] port NOT
		the PC] port. If the cable is not well connected to the network icon
		[WAN disconnected] will be flashing in the middle of the screen.
	2.	Please check if the device has an IP address. Check the system
Device could not register to a		information, if the IP displays "Negotiating", the device does not have
service provider		an IP address. Please check if the network configurations is correct.
	3.	If network connection is fine, please check again your line
		configurations. If all configurations are correct, please kindly contact
		your service provider to get support, or follow the instructions in "13.5
		Network Packet Capture" to get the network packet capture of
		registration process and send it to manufacturer support to
		analy manufacturer ze the issue.
	1.	Please check if Handset is connected to the correct Handset () port
No Audio or Poor Audio in		NOT Headphone () port.
Handset	2.	The network bandwidth and delay may be not suitable for audio call at
		the moment.
Poor Audio or Low Volume in	1.	There are two Headphone wire sequence in the market. Please use the

Headphone	Headphone provided by manufacturer, or consult manufacturer the wire
	sequence if you wish to use a third-party headphone.
	2. The network bandwidth and delay may be not suitable for audio call at
	the moment.
Audio is chopping at far-end in Hands-free speaker mode	This is usually due to loud volume feedback from speaker to microphone.
	Please lower down the speaker volume a little bit, the chopping will be
	gone.