## Redstone Systems, Inc

## **REP Series IP Phone**

## REP1100/REP1100P

## **User Manual**

Document Version: 01

Release Date: 2025-06-16





# **Table of Content**

Figures	,4
Tables	6
1. Safety Instruction	7
2. Overview	8
3. Installation	9
3.1. Use PoE or external Power Adapter	9
3.2. Installation method	
3.2.1. Bracket installation	10
3.2.2. Device to connect	10
4. Introduction to the Phone User Interface	11
4.1. Keypad	11
4.2. Using Handset / Hands-free Speaker / Headphone	
4.3. Screen User Interface	
4.4. Web Portal	13
5. Setting Up	15
5.1. Network Configuration	15
5.2. Line Configurations	
6. Using the Phone	20
6.1. Making Phone Calls	20
6.1.1. Make / Receive Second Call	22
6.1.2. Join / Split Two Calls (3-way Local Conference)	24
6.1.3. Call Transfer	24
6.2. Using Phonebook	24
6.2.1. Add / Edit / Delete Contact	25
6.2.2. Add / Edit / Delete Group	26
6.2.3. Browse and Add / Remove Contacts in Group	26
6.3. Using Cloud Phonebook	27
6.3.1. Open Cloud Phonebook	27
6.4. Call Logs	
6.5. Voice Message	
6.6. Do-Not-Disturb	
6.7. Auto-Answering	
6.8. Call Forward	
7. Phone Settings	33
7.1. Adjust Audio Volume	33
7.2. Set Ring Tone Volume and Type	33

7.3. Adjust LCD Energy Saving	33
7.4. Set Device Time/Date	34
7.5. Set Device Language	35
7.6. Reboot the Device	35
7.7. Reset to Factory Default	35
8. Web Portal	36
8.1. Web Portal Authentication	36
8.2. Web Call	36
8.3. System / Information	37
8.4. System / Account	37
8.5. System / Configurations	37
8.6. System / Upgrade	38
8.7. System / Auto Provision	38
8.8. System / Tools	38
8.9. Network / Basic	38
8.10. Network / Advanced	38
8.11. Network / VPN	38
8.12. Line / SIP	38
8.13. Line / Dial Plan	43
8.13.1. Line / Dial Plan / Basic Settings	43
8.13.2. Line / Dial Plan / Dail Peer	43
8.14. Line / Basic Settings	46
8.15. LINE / RTCP-XR	47
8.16. Line / SIP Hotspot	47
8.17. Phone Settings/ Features	48
8.17.1. Phone Settings/ Features / Common Settings	48
8.17.2. Phone Settings/ Features / Power Led Settings	50
8.17.3. Phone Settings/ Features / Action URL	50
8.18. Phone / Audio	50
8.19. Phone / MCAST	52
8.20. Phone / Time/Date	52
8.21. Phone / Advanced	53
8.22. Phonebook / Contacts	53
8.23. Phonebook / Cloud Phonebook	54
8.24. Phonebook / Blacklist	54
8.25. Phonebook / Advanced	54
8.26. Call logs	55
8.27. Function key / Function Key	55
8.28. Function key / Softkey	55
9. Advanced Features	56

Appendix II – Text Input from Keypad .......61

## **Figures**

Figure 1	- Desktop Installation	10
Figure 2	- Connecting to the Device	10
Figure 3	- Keypad	11
Figure 4	- Screen Layout / Default Standby Screen	12
Figure 5	- Vertical Scroll Bar	13
Figure 6	- Check the Device's IP Address	13
Figure 7	- Web Portal Login Page	14
Figure 8	- Configure SIP Proxy Server Address	16
Figure 9	- Configure SIP Proxy Server Port	16
Figure 10	- Configure SIP Username	16
Figure 11	- Configure Authentication Name	17
Figure 12	- Configure SIP Authentication Password	17
Figure 13	- Configure Display Name	17
Figure 14	- Enable / Disable Outbound Proxy	17
Figure 15	- Enable / Disable Sip Line	17
Figure 16	- Configure Advanced Line Options	18
Figure 17	- Configure SIP Realm/Domain	18
Figure 18	- Configure Unregistered Dial	18
Figure 19	- Enable / Disable Anonymous	18
Figure 20	- Configure DTMF Mode	18
Figure 21	- Enable / Disable STUN	18
Figure 22	- Configure Local Port	18
Figure 23	- configure Ring Type	18
Figure 24	- Configure MWI Number	18
Figure 25	- Configure Pickup Number	19
Figure 26	- Configure Park Number	19
Figure 27	- Configure Join Call Number	19
Figure 28	- Enable / Disable Missed Call	19
Figure 29	- Enable / Disable Feature Sync	19
Figure 30	- Enable / Disable SCA	19
Figure 31	- Default Line	20
Figure 32	- Dialing a Number before Audio Channel Opened	20
Figure 33	- Dial a Number after Audio Channel Opened	21
Figure 34	- Calling Remote Party	21
Figure 35	- Incoming Call Screen	21
Figure 36	- Talking Mode Screen	22
Figure 37	- Call Holding Screen	22

Figure 38	- Second Incoming Call Screen	23
Figure 39	- Dual Calls	23
Figure 40	- Conference Call	24
Figure 41	- Phonebook screen	25
Figure 42	- Phonebook is Empty	25
Figure 43	- Browsing Phonebook	25
Figure 44	- Add New Contact	26
Figure 45	- Group List	26
Figure 46	- Browsing Contacts in a Group	26
Figure 47	- Add/Remove Contacts in a Group	27
Figure 48	- Cloud Phonebook List	27
Figure 49	- Downloading Cloud Phonebook	27
Figure 50	- Browsing Contacts in Cloud Phonebook	28
Figure 51	- Call Logs	28
Figure 52	- Filter Call Log Type	28
Figure 53	- New Voice Message Notification	29
Figure 54	- Voice Message Screen	29
Figure 55	- Configure the Voice Message Number	29
Figure 56	- DND Enabled on All Lines	30
Figure 57	- Configure DND on Line	30
Figure 58	- Configure Auto-answering on Line1	31
Figure 59	- Auto-answering Enabled on Line1	31
Figure 60	- Select Line for Call Forward Configuration	32
Figure 61	- Select Call Forward Type	32
Figure 62	- Activate Call Forward and configure Call Forward Number	32
Figure 63	- Set Delay Time for Call Forward on No Answer	32
Figure 64	- Web Call Controls	36
Figure 65	- Web Call, Entering Number and Select Line	36
Figure 66	- Dial Plan Configuration	43
Figure 67	- Global Substitution Configuration	45
Figure 68	- Local Substitution Configuration	45
Figure 69	- Add Prefixes Configuration	45
Figure 70	- Add Suffixes Configuration	46
Figure 71	- Deletion Configuration	46
Figure 72	- Softkey Configuration	55

## **Tables**

Table 1	- Time Settings Parameters	34
Table 2	- SIP Settings for Lines on Web	39
Table 3	- Dial Peer Settings for Lines on Web	44
Table 4	- Basic Settings for Lines on Web	46
Table 5	- RTCP-XR for Lines on Web	47
Table 6	- SIP Hotspot settings for Lines on Web	47
Table 7	- Common Phone Feature Settings on Web	48
Table 8	- Power Led Settings on Web	50
Table 9	- Audio Settings on Web	50
Table 10	- MCAST Parameters on Web	52
Table 11	- Time/Date Setting Parameters on Web	52
Table 12	- Function Key Setting Parameters on Web	55
Table 13	- Trouble Cases	59
Table 14	- Keypad Icons	60
Table 15	- Status Prompt and Notification Icons	60
Table 16	- Look-up Table of Characters	61

## 1. Safety Instruction

Please read the following safety notices before installing or using this unit. They are crucial for the safe and reliable operation of the device.

- Please use the external power supply that is included in the package. Other power supply may cause damage to the phone, affect the behavior or induce noise.
- Before using the external power supply in the package, please check the home power voltage.
   Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it, it may cause fire
  or electric shock.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- This phone is design for indoor use. Do not install the device in places where there is direct sunlight. Also do not put the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposure the phone to high temperature or below 0°C or high humidity.
- Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place. You are in a situation that could cause bodily injury.
   Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

## 2. Overview

The new REP1100&REP1100P color screen IP Phone is a high-end enterprise desktop phone which comes with intelligent LCD to increase enterprise users' productivity at a cost-effective price.

REP1100&REP1100P inherits all features from enterprise phones, such as headset, and full-duplex speakerphone modes, PoE, Fast Ethernet, QoS, secure transmission, auto-provisioning, and more.

In order to help some users who are interested to read every detail of the product, this user manual is provided as a user's reference guide. Still, the document might not be up to date with the newly release software, so please kindly download updated the latest user manual from website, or contact with support if you have any question using REP1100&REP1100P.

## 3. Installation

## 3.1. Use PoE or external Power Adapter

REP1100P, called as 'the device' hereafter, supports two power supply modes, power supply from external power adapter and REP1100P supports 802.3af Class 1 Power over Ethernet (PoE) complied switch. (PoE standard does not apply to REP1100 model)

PoE power supply saves the space and cost of providing the device additional power outlet. With a PoE switch, the device can be powered through a single Ethernet cable which is also used for data transmission. By attaching UPS system to PoE switch, the device can keep working at power outage just like traditional PSTN telephone which is powered by the telephone line.

For users who do not have PoE equipment, the traditional power adapter should be used. If the device is connected to a PoE switch and power adapter at the same time, the power adapter will be used in priority and will switch to PoE power supply at power failure on the power adapter.

Please use the power adapter supplied and the PoE switch met the specifications to ensure the device worked properly.

#### 3.2. Installation method

#### 3.2.1. Bracket installation

Please follow the instructions in below picture to install the device.

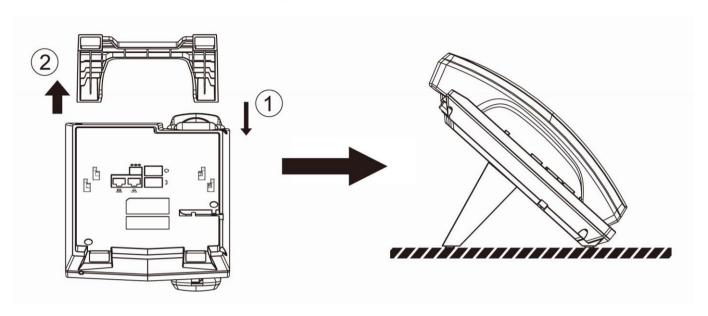


Figure 1 - Desktop Installation

#### 3.2.2. Device to connect

Please connect power adapter, network, PC, handset, and headphone to the corresponding ports as described in below picture.

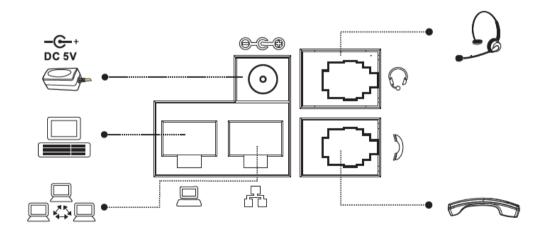


Figure 2 - Connecting to the Device

NOTICE! Power adapter is optional for both REP1100 and REP1100P model

### 4. Introduction to the Phone User Interface

## 4.1. Keypad

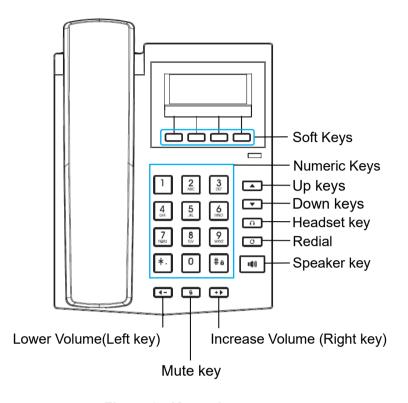


Figure 3 - Keypad

The above picture shows the keypad layout of the device. Each key provides its own specific function. User should refer to the illustration in this section about the usage of each key and the description in this document about each function.

Some keys support long-pressing function. User can press and hold the key for 1.5 seconds to trigger the long-pressed function.

- Soft Keys These four buttons provide different functions corresponding to the soft-menu displayed on the screen.
- Numeric Keys The 12 standard telephone keys provide the same function as standard telephones, but further to the standard function, some keys also provide special function by long-pressing the key.
  - Key # Long-pressed to lock the phone. (Default disable)
- Up/Down Navigation Keys User can press up/down navigation keys to change line focus in talking screen or move cursor in a screen with list items
- Headset key When you pressed the key, you could make a call using the headset.
- Redial By pressing 'Redial' button, user can redial the last dialed number.
- Speaker key By pressing this button once, user can turn on the audio channel of hands-free speaker
- Mute key Mute you phone. You can also mute the microphone with this button during talking mode.
- Lower(Left) / Increase(Right) Volume In standby, ringing, ring configuration screen, user can press 2
   Document Version 01 Copyright © Redstone Systems, Inc

buttons to lower/increase the ringtone volume, in talking and audio volume adjustment screen, user can press this button to lower/increase the audio volume. (in some configuration or text editor screen, user can press 2 buttons to switch option or move cursor to the left / right.)

## 4.2. Using Handset / Hands-free Speaker / Headphone

#### Using Handset

To talk over handset, user should lift the handset off the device and dial the number, or dial the number first, then lift the handset and the number will be dialed. User can switch audio channel to handset by lifting the handset when audio channel is opened in speaker or headphone.

#### ■ Using Hands-free Speaker

To talk over hands-free speaker, user should press the hands-free button then dial the number, or dial the number first then press the hands-free button. User can switch audio channel to the speaker from handset by pressing the hands-free button when audio channel is opened in handset.

#### ■ Using Headphone

To use headphone, by default, user should headset button which is defined by DSS key to turn on the headphone. Same as handset and hands-free speaker, user can dial the number before or after headphone turned on.

#### 4.3. Screen User Interface



Figure 4 - Screen Layout / Default Standby Screen

The screen user interface is mostly presented in the above layout except some prompt messages. The upper area is the main screen to display the device's status and information or data for viewing or editing. The lower area is the software menu (soft-menu) buttons which will change against user's action or device's status.

The above picture shows the default standby screen which is also the root of the soft-menu. The default standby screen shows the greeting words and effective feature indications like voice message, missed call, auto-answering, do-not-disturb, call forward, lock state, and the network connectivity. User can get back to the default standby screen mostly by lifting and putting by the handset.

The icon illustration is described in **Appendix I - Icon Illustration**.

In some screens, there are more items or long text to be displayed which could not fit into the screen. They will be arranged in a list or multiple lines with a scroll bar. If user sees a scroll bar, user can use up/down navigation buttons to scroll the list. By long-pressed the navigation keys, user can scroll the list or items in a faster speed.



Figure 5 - Vertical Scroll Bar

#### 4.4. Web Portal

User can also use the device's web portal to manage or operate the device. User should open the device's web portal page by entering the device's IP address in a browser. To get the device IP address, user could press the soft-menu button [Menu] -> [Status] or by pressing [Down] navigation key.

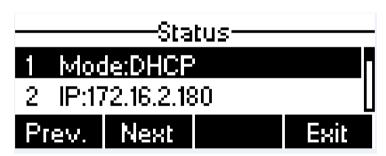


Figure 6 - Check the Device's IP Address

The first screen of the device's web portal is the login page.

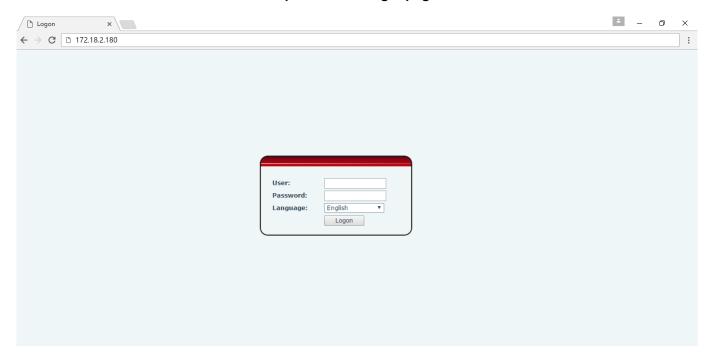


Figure 7 - Web Portal Login Page

User must enter the username and password to log in to the web portal. **The default username and password are both 'admin'**.

## 5. Setting Up

In order to get the device ready for making and receiving phone calls, the device must be configured with correct network configurations and at least one of the lines must be configured with an SIP telephony service.

## 5.1. Network Configuration

The device relies on IP network connection to provide service. Unlike traditional phone system based on a circuit switched wire technology, IP devices are connected to each other over the network and exchange data in packet basis based on the devices' IP address.

To enable the device, the network parameters must be configured properly first. To configure network parameters, user should open the network configuration screen through soft-menu [Menu] -> [Settings] -> [Advanced Settings] -> [Network] -> [Network Settings] from standby screen.

NOTICE! If user saw a 'Network Disconnected' icon flashing in the middle of screen, it means the network cable was not correctly connected to the device's network port. Please check the cable is connected correctly to the device and to the network switch, router, or modem.

There are three common IP configuration modes.

- Dynamic Host Configuration Protocol (DHCP) This is the automatic configuration mode by getting
  network configurations from a DHCP server. Users need not to configure any parameters manually. All
  configuration parameters will be getting from DHCP server and applied to the device. This is
  recommended for most users.
- Static IP Configuration This option allows user to configure each IP parameters manually, including IP Address, Subnet Mask, Default Gateway, and DNS servers. This is usually used in an office environment or by power users.
- PPPoE This option is often used by users who connect the device to a broadband modem or router. To
  establish a PPPoE connection, user should configure username and password provided by the service
  provider.

The device is default configured in DHCP mode.

### 5.2. Line Configurations

A line must be configured properly to be able to provide telephony service. The line configuration is like a virtualized SIM card. Just like a SIM card on a mobile phone, it stores the service provider and the account information used for registration and authentication. When the device is applied with the configuration, it will register the device to the service provider with the server's address and user's authentication as stored in the configurations.

To configure a line manually, user may open the line configuration screen through soft-menu button [Menu] -> [Settings] -> [Advanced Settings] -> [Accounts] -> [SIP1] / [SIP2] -> [Basic Settings] from the standby screen.

NOTICE! User must enter correct PIN code to be able to enter advanced settings to edit line configuration. (The default PIN is 123)

The parameters and screens are listed in below pictures.

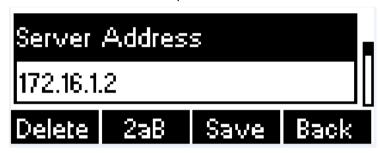


Figure 8 - Configure SIP Proxy Server Address



Figure 9 - Configure SIP Proxy Server Port



Figure 10 - Configure SIP Username



**Figure 11 - Configure Authentication Name** 



Figure 12 - Configure SIP Authentication Password



Figure 13 - Configure Display Name



Figure 14 - Enable / Disable Outbound Proxy



Figure 15 - Enable / Disable Sip Line

Save the adjustment by pressing [Save] button when done.

For users who want to configure more options, user should use web management portal to modify or Advanced Settings in accounts on the individual line to configure those options.



Figure 16 - Configure Advanced Line Options



Figure 17 - Configure SIP Realm/Domain



Figure 18 - Configure Unregistered Dial

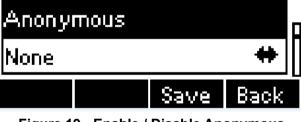


Figure 19 - Enable / Disable Anonymous

 


Figure 20 - Configure DTMF Mode



Figure 21 - Enable / Disable STUN



Figure 22 - Configure Local Port

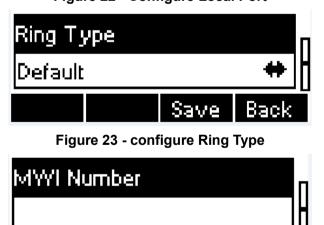


Figure 24 - Configure MWI Number

Save

123

Delete

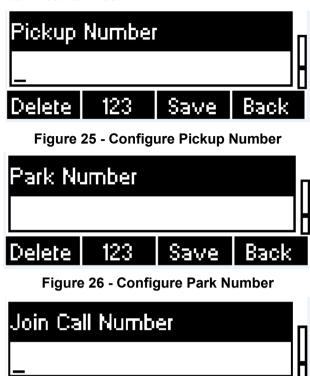


Figure 27 - Configure Join Call Number

Save

Back

123

Delete



Figure 28 - Enable / Disable Missed Call



Figure 29 - Enable / Disable Feature Sync



Figure 30 - Enable / Disable SCA

NOTICE! On the device, user can only configure whether STUN / Outbound Proxy is enabled, to change the STUN / Outbound Proxy server address, user must edit in the device web portal. (Refer to 8.12)

## 6. Using the Phone

## 6.1. Making Phone Calls

#### ■ Default Line

The device provides 2 line services. If all lines are configured, user can make or receive phone calls on any line. If default line is configured by user, there will be a default line to be used for making outgoing call which is indicated on the top left corner. To change the default line, user can press up/down navigation buttons to switch between all lines. Enable or disable default line, user can press [Menu] - > [Features] -> [Default Line] or configure from Web Interface (Web / Phone settings / Features).



Figure 31 - Default Line

#### Dialing Methods

User can dial a number by

- Entering the number directly
- Selecting a phone number from phonebook contacts (Refer to **6.2 Using Phonebook**)
- Selecting a phone number from cloud phonebook contacts (Refer to **6.3 Using Cloud Phonebook**)
- Selecting a phone number from call logs (Refer to 6.4 Call Logs)
- Redialing the last dialed number

#### Dialing Number then Opening Audio

To make a phone call, user can firstly dial a number by one of the above methods. When the dialed number is completed, user can press [Dial] button on the soft-menu, or press hand-free button to turn on the speaker or headphone, or lift the handset to call out with the current line.



Figure 32 - Dialing a Number before Audio Channel Opened

#### Opening Audio then Dialing the Number

Another alternative is the traditional way to firstly open the audio channel by lifting the handset, turning on the hands-free speaker or headphone by pressing hands-free button, or line key, and then dial the number with one of the above methods. When number dialed completed, user can press [Dial] button to call out, or the number will be dialed out automatically after timeout.



Figure 33 - Dial a Number after Audio Channel Opened

NOTICE! For some users who get used to dial a number immediately by pressing #key, the user must login to the web to enable 'Press "#" to invoke dialing' option in page [Line] -> [Dial Plan] -> "Basic Settings" and apply it.

#### ■ Cancel Call

While calling the number, user can press [End] button or close the audio channel by put back the handset or press the hands-free button to drop the call.



Figure 34 - Calling Remote Party

#### Answering Incoming Call

When there is an incoming call while the device is idle, user will see the following incoming call alerting screen



Figure 35 - Incoming Call Screen

User can answer the call by lifting the handset, open headphone or speaker phone by pressing the hands-free button, or the [Answer] button. To divert the incoming call, user should press [Divert] button. To

reject the incoming call, user should press [Reject] button.

#### ■ Talking

When the call is connected, user will see a talking mode screen as the following figure.



Figure 36 - Talking Mode Screen

- 1. Audio Channel The icon reflects the current audio channel being used.
- 2. Current Line The line is being used on the call.
- 3. Remote Party The name or number of the remote party.
- 4. Talking time The time passed since the call established.
- 5. Screen Pages The number of screen pages. User can press up/down navigation buttons to switch screen page.

#### Call Holding /Resuming

User can hold the remote party by pressing [Hold] button and the button will be changed to [Resume] icon. User can press the [Resume] button to resume the call.



Figure 37 - Call Holding Screen

#### ■ Call Ended

When user finished the call, user can put the handset back to the device to hang up the call or press the hands-free button to close the audio channel to hang up.

NOTICE! When the call is held or in holding state, the user must press [Resume] button to back to call mode, or putting the handset back to the device or pressing Speaker-free button to hang up is not available.

#### 6.1.1. Make / Receive Second Call

The device can support up to multichannel concurrent calls. When there is already a call established, user can still answer another incoming call on either lines or make a second call on either lines.

#### ■ Second Incoming Call

When there is another incoming call during talking a phone call, this call will be waiting for user to answer it. User will see the call message in the middle of current screen. The device will not be ringing but playing call waiting tone in the audio channel of the current call and the LED will be flashing in green. User can accept or reject the call same as normal incoming call. When the waiting call is answered, the first call will be put on hold automatically.



Figure 38 - Second Incoming Call Screen

#### ■ Second Outgoing Call

To make a second call, user may press [XFER] / [Conf] button to make a new call on the default line. Then dial the number the same way as making a phone call. When user is making a second call with the above methods, the first call could be place on hold manually first or will be put on hold automatically at second dial.

#### ■ Switching between Two Calls

When there are two calls established, user will see a dual calls screen as the following picture

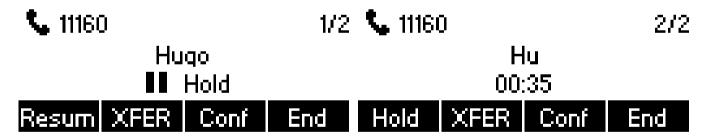


Figure 39 - Dual Calls

User can press up/down navigation buttons to switch screen page, and switch call focus by pressing [Hold] / [Resume] button.

#### ■ Ending One Call

User may hang up the current talking call by closing the audio channel or press [End] button. The device will return to single call mode in holding state.

#### 6.1.2. Join / Split Two Calls (3-way Local Conference)

User may hang up the current talking call by closing the audio channel or press [End] button. The device will return to single call mode in holding state.

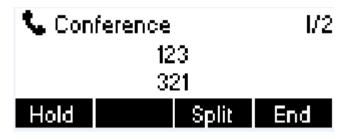


Figure 40 - Conference Call

#### 6.1.3. Call Transfer

When the user is talking with a remote party and wish to transfer the call to another remote party, there are two way to transfer the call, attended and unattended.

#### ■ Attended Transfer

The attended call transfer is also known as the 'polite mode' which is to dial through the other remote party, wait for the remote party to answer the call and then transfer the call.

This is the same procedure as making two concurrent calls. In the dual call mode, press the [XFER] button to transfer the first party to the second one.

#### Unattended / Blind Transfer

Unattended transfer is also known as 'Fire and Forget' mode. Instead of connecting to the second party first and confirming the second call is established, user press [XFER] button first then dial the second party number. When the number is dialed, user can press[XFER] button again and the first party will be transfer to the second.

This is like helping the first party to dial to the second one. However, the transfer could be successful if the second party answered it, or could be failed if the second party is busy or rejected it.

NOTICE! More advanced transfer configuration, please refer to 8.13.

## 6.2. Using Phonebook

User can save contacts' information in the phonebook and dial the contact's phone number(s) from the phonebook. To open the phonebook, user can press soft-menu button [Dir] in the default standby screen or keypad.

By default the phonebook is empty, user may add contact(s) into the phonebook manually or from call logs.



Figure 41 - Phonebook screen

NOTICE! The device can save up to total 500 contact records.



Figure 42 - Phonebook is Empty

When there are contact records in the phonebook, the contact records will be arranged in the alphabet order. User may browse the contacts with up/down navigation keys. User may fast scroll the contact list by holding the up/down navigation keys. The record indicator tells user which contact is currently focused. User may check the contact's information by pressing [Option] >[Detail] button.



Figure 43 - Browsing Phonebook

#### 6.2.1. Add / Edit / Delete Contact

To add a new contact, user should press [Add] button to open Add Contact screen and enter the contact information of the followings.

- Contact Name
- Tel. Number
- Mobile Number
- Other Number
- Ring Tone
- Contact Group



Figure 44 - Add New Contact

User can edit a contact by pressing [Option] -> [Edit] button.

To delete a contact, user should move the record indicator to the position of the contact to be deleted, press [Option] -> [Delete] button and confirm with [Yes].

### 6.2.2. Add / Edit / Delete Group

User can open the group list by pressing [Groups] button in phonebook screen.

By default, the group list is blank. User can create his/her own groups, edit the group name, add or remove contacts in the group, and delete a group.

To add a group, press [Add] button.

To delete a group, press [Option] -> [Delete] button.

To edit a group, press [Edit] button.



Figure 45 - Group List

#### 6.2.3. Browse and Add / Remove Contacts in Group

User can browse contacts in a group by opening the group in group list with [Enter] button.

 


Figure 46 - Browsing Contacts in a Group

When user is browsing contacts of a group, user can also add or remove contacts in that group by pressing [Add] button to enter the group contacts management screen. Press [Add] button to create a new contact for the group; press [Option] button to remove the contact from the group.

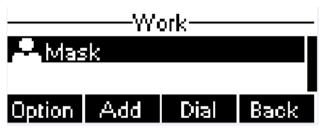


Figure 47 - Add/Remove Contacts in a Group

### 6.3. Using Cloud Phonebook

Cloud phonebook allows user to configure the device to download a phonebook from a cloud server. This is very useful for office users to use the phonebook from a single source and save the effort to create and maintain the contact list individually. It is also a useful tool for user to synchronize his/her phonebook from a personal mobile phone to the device with Cloud Phonebook Service and App which is to be provided publicly soon.

NOTICE! The cloud phonebook is ONLY temporarily downloaded to the device each time it is opened on the device to ensure the user get the most up to date phonebook. However, the downloading may take a couple seconds depending on the network condition. Therefore, it is highly recommended to the users to save important contacts from cloud to local phonebook to save the time of waiting for downloading.

To open cloud phonebook list, press [Cloud Phonebook] in phonebook screen.

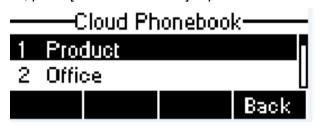


Figure 48 - Cloud Phonebook List

#### 6.3.1. Open Cloud Phonebook

In cloud phonebook screen, user can open a cloud phonebook by pressing [Enter] button. The device will start downloading the phonebook. If downloading failed, user will be prompted with a warning message.

Once the cloud phonebook is downloaded completed, user may browse the contact list and dial the contact number same as in local phonebook.



Figure 49 - Downloading Cloud Phonebook



Figure 50 - Browsing Contacts in Cloud Phonebook

### 6.4. Call Logs

The device can store up to 500 call log records and user can open the call logs to check all incoming, outgoing, and missed call records by pressing soft-menu button [History]

In the call logs screen, user may browse the call logs with up/down navigation keys.

Each call log record is presented with 'call type' and 'call party number / name'. User can check further call log detail by pressing [Dial] button to dial the number, or add the call log number to phonebook with pressing [Option] -> [Add to Contact].

User can delete a call log by pressing [Delete] button and can clear all call logs by pressing [Clear] button.



Figure 51 - Call Logs

User can also filter call logs with specific call log type to narrow down the call log records by pressing the left/right navigation button and select one of the call log types in the soft-menu buttons.

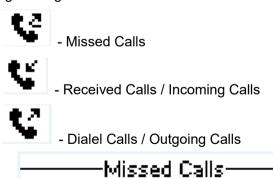




Figure 52 - Filter Call Log Type

### 6.5. Voice Message

If the service of the lines supports voice message feature, when the user is not available to answer the call, the caller can leave a voice message on the server to the user. User will receive voice message notification from the server and device will prompt a voice message waiting icon on the standby screen.



Figure 53 - New Voice Message Notification

To retrieve the voice messages, user must configure the voice message number first. Once the voice message number is configured, user can retrieve the voice message of a line by pressing the [Dial] button in the voice message screen.

When the device is in the default standby mode.

- You can also press [Menu] / [Applications] / [Voice Massage] to enter MWI interface
- When you opened voice message configuration interface, select the line to be configured with up/down navigation keys.
- Press [Edit] button to enable and edit the voice message number, when done, press [Save] button to save the configuration.



Figure 54 - Voice Message Screen



Figure 55 - Configure the Voice Message Number

#### 6.6. Do-Not-Disturb

User may enable Do-Not-Disturb (DND) feature on the device to reject incoming calls (including call waiting). The DND can be enabled on line basis.

To quickly enable or disable the DND on all lines.

When the device is in the default standby mode.

- Press [DND] button to enable DND on all line and icon 
   will be displayed on the screen.



Figure 56 - DND Enabled on All Lines

If user wishes to enable or disable DND on a specific line, user could change the DND mode in DND configurations.

- Press soft-button [Menu] till you find the [Features] item.
- Enter [Features] item till you find the [DND] item.
- Enter [DND] item till you find [DND item.
- Press left/right navigation key to change the DND mode or DND state on specific line. When done, press [Save] button to save the changes.
- User will see icon O 'Do Not Disturb' against the enabled line.



Figure 57 - Configure DND on Line

## 6.7. Auto-Answering

User may enable auto-answering feature on the device and any incoming call will be automatically answered (not including call waiting). The auto-answering can be enabled on line basis.

When the device is in the default standby mode, if user wishes to enable or disable auto-answering on a specific line or change the auto-answering delay time, user could change the auto-answering configuration adopt following steps.

- Press soft-button [Menu] till you find the [Features] item.
- Enter [Features] item till you find the [Auto Answer] item.
- Enter [Auto Answer] item to change the auto-answering configuration on a specific line
- Press left/right navigation button to select the auto-answering option. When done, press [Save] button to save the changes.
- The default auto-answering delay is 5 seconds.

 


Figure 58 - Configure Auto-answering on Line1



Figure 59 - Auto-answering Enabled on Line1

#### 6.8. Call Forward

Call forward is also known as 'Call Divert' which is to divert the incoming call to a specific number based on the conditions and configurations. User can configure the call forward settings of each line.

There are three types.

- Unconditional Call Forward Forward any incoming call to the configured number.
- Call Forward on Busy When user is busy, the incoming call will be forwarded to the configured number.
- Call Forward on No Answer When user does not answer the incoming call after the configured delay time, the incoming call will be forwarded to the configured number.

To configure call forward, when the device is in the default standby mode

- Press soft-button [Menu] till you find the [Features] item.
- Enter [Features] item till you find the [Call Forward] item.
- Press [Call Forward] button to open call forward configuration screen, select the line to be configured with up/down navigation keys.
- Press [Enter] button to edit the call forward settings.
- Select the call forward type with up/down navigation keys. Click [Enter] button to configure the call forward number and delay time, if applicable.
- Enable or Disable call forward with left/right navigation buttons against specific lines and types.
- If select 'Enable', browse the setting parameters with up/down navigation keys and enter required information. When done, press [Save] button to save the changes.



Figure 60 - Select Line for Call Forward Configuration

 


Figure 61 - Select Call Forward Type

 


Figure 62 - Activate Call Forward and configure Call Forward Number

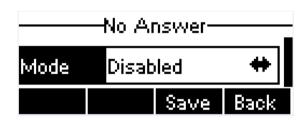


Figure 63 - Set Delay Time for Call Forward on No Answer

## 7. Phone Settings

## 7.1. Adjust Audio Volume

When the device is in the default standby mode

- Press soft-button [Menu] till you find the [Settings] item.
- Enter [Settings] item till you find the [Basic Settings] item.
- Enter [Basic Settings] item till you find [Voice Volume] item.
- Enter [Voice Volume] item and you will find [Handset Volume], [Handsfree Volume] and [Headset Volume] item.
- Enter [Handset Volume] or [Handsfree Volume] or [Headset Volume] item, press Left / Right navigation keys to adjust the audio volume for different mode.
- Save the adjustment by pressing [Save] button when done.

## 7.2. Set Ring Tone Volume and Type

When the device is in the default standby mode

- Press soft-button [Menu] till you find the [Settings] item.
- Enter [Settings] item till you find the [Basic Settings] item.
- Enter [Basic Settings] item till you find [Ring Settings] item.
- Enter [Ring Settings] item and you will find [Ring Volume] and [Ring Type] item.
  - Enter [Ring Volume] item and you find [Headset Volume] and [Handsfree Volume] item.
    - ◆ Enter [Headset Volume] or [Handsfree Volume] item, press left / right navigation keys to adjust the ring volume.
    - ◆ Save the adjustment by pressing [Save] button when done.
  - Enter [Ring Type] item, press left / right navigation keys to change the ring type.
    - ◆ Save the adjustment by pressing [Save] button when done.

## 7.3. Adjust LCD Energy Saving

When the device is in the default standby mode.

- Press soft-button [Menu] till you find the [Settings] item.
- Enter [Settings] item till you find the [Basic Settings] item.
- Enter [Basic Settings] item till you find [Screen Settings] item.
- Enter [Screen Settings] item till you find [Energysaving] item.
- Enter [Energysaving] item, press Left / Right navigation keys to adjust the LCD Energysaving mode.
- If select 'Enabled', browse the setting parameters with up/down navigation keys and enter required information. When done, press [Save] button to save the changes.
- The default Energysaving time is 30 seconds.

#### 7.4. Set Device Time/Date

When the device is in the default standby mode

- Press soft-button [Menu] till you find the [Settings] item.
- Enter [Settings] item till you find the [Basic Settings] item.
- Enter [Basic Settings] item till you find [Time & Date] item.
- Enter [Time & Date] item, use up/down navigation keys to edit the time/date parameters and save the settings by pressing [Save] button when done.

**Table 1 - Time Settings Parameters** 

Parameters	Description
	Auto/Manual
Mode	Auto: Enable network time synchronization via SNTP protocol,
	default enabled.
	Manual: User can modify data manually.
SNTP Server	SNTP server address
Time zone	Select the time zone
Location	
Daylight Saving Time	Enable or Disable the Daylight Saving Time
12-Hour Clock	Display the clock in 12-hour format
	Select time format from one of the followings:
	■ 1 JAN, MON
	■ 1 January, Monday
	■ JAN 1, MON
	■ January 1, Monday
	■ MON, 1 JAN
	■ Monday, 1 January
Time format	■ MON, JAN 1
	■ Monday, January 1
	■ DD-MM-YY
	■ DD-MM-YYYY
	■ MM-DD-YY
	■ MM-DD-YYYY
	■ YY-MM-DD
	■ YYYY-MM-DD
Date(Only Mode=Manual)	Edit the date of the device in the format of yyyy/mm/dd.
Time(Only Mode=Manual)	Edit the time of the device in the format of hh:mm:ss. Hh=00~23,
	mm=00~59, ss=00~59

### 7.5. Set Device Language

When the device is in the default standby mode.

- Press soft-button [Menu] till you find the [Settings] item.
- Enter [Settings] item till you find the [Basic Settings] item.
- Enter [Basic Settings] item till you find [Language] item.
- User can change the language by using the navigation keys.

#### 7.6. Reboot the Device

When the device is in the default standby mode

- Press soft-button [Menu] till you find the [Reboot System] item.
- Press [Enter] button, a warning message "Reboot Now?" will be prompt to user.
- Press [Yes] button to execute the reset command, or [No] to exit.

## 7.7. Reset to Factory Default

When the device is in the default standby mode

- Press soft-button [Menu] till you find the [Settings] item, and press [Enter] button.
- Enter [Advanced Settings] item, then input the device PIN (Default PIN is 123) to enter the interface.
- Enter [Reset to Default] item, then a warning message "Factory Reset, Continues?" will be prompt to user.
- Press [Yes] button to execute the reset command, or [No] to exit.

#### 8. Web Portal

#### 8.1. Web Portal Authentication

User can log in onto the device web portal to manage the device or user's profile. User must provide correct username and password to be able to log in.

#### 8.2. Web Call

Besides making and receiving phone calls by operating the device directly, user could also making and receiving phone calls by operating the controls in the web portal.

The web call is particularly suitable for users who use headphone. User can dial out a number by click the [Dial] button on top of the title of the web portal page, or click a contact in the phonebook, or click a number in the call logs, to make phone call and press [Answer] button to answer incoming call. When call ended, user can click [Hang up] button to end the call. All these operation can be done from the web portal without touching the phone.

NOTICE! The web call is limited to make a single call. To make or answer a second call is not allowed.



Figure 64 - Web Call Controls



Figure 65 - Web Call, Entering Number and Select Line

## 8.3. System / Information

User can get the system information of the device in this page including.

- Model
- Hardware Version
- Software Version
- Uptime
- Last uptime
- MEMInfo

And also summarization of network status,

- Network Mode
- MAC
- IP
- Subnet Mask
- Default Gateway

Besides, summarization of SIP account status,

- SIP User
- SIP account status (Registered / Unapplied / Trying / Timeout)

## 8.4. System / Account

User may change his/her web authentication password in this page.

For users with Administrators privilege, the user can also manage user accounts by adding or deleting user account and assign privilege and password to new account.

There are two types of user privilege, Administrators and Users. If a user account is created as Users privilege, this account will have limited accessibility to the device and cannot change some device settings.

The user account can be used to operate the device or access the device web portal by login to the device or its web. User should log in to device web portal with his/her username and web password.

NOTICE! The device is shipped with a default Administrators user account. The username and password for the default account is 'admin' which has been printed on the brand and model label, at the bottom side of the device.

# 8.5. System / Configurations

Users with administrators privilege can export or import the device configuration in this page and reset the device to factory default.

## 8.6. System / Upgrade

The device supports online upgrade by periodically checking the software release version on the cloud server. Meanwhile, user can download the software and upgrade the device manually when there is trouble for the device to connect to the cloud server.

## 8.7. System / Auto Provision

The Auto Provision settings help IT manager or service provider to easily deploy and manage the devices in mass volume.

## 8.8. System / Tools

Tools provided in this page help users to identify issues at trouble shooting. Please refer to **10 Trouble Shooting** for more detail.

Besides, the device also provided the screenshot feature to user.(LCD Page)

## 8.9. Network / Basic

User can configure the network connection type and parameters in this page.

#### 8.10. Network / Advanced

The network advanced settings is often configured by IT manager to enhance the quality of service of the device.

#### 8.11. Network / VPN

User may configure a VPN connection in this page. Please refer to 9.1 VPN for more detail.

#### 8.12. Line / SIP

The service of the line is configured in this page, choose the sip line to configured (SIP 1 - SIP 4). Click the dropdown arrow to adjust configuration accounting on each line.

Table 2 - SIP Settings for Lines on Web

Parameters	Description
Basic Settings	
	Display the current line status at page loading. To get the up to
Line Status	date line status, user has to refresh the page manually.
Username	Enter the username of the service account.
Display Name	Enter the display name to be sent in a call request.
Authentication Name	Enter the authentication name of the service account
Authentication Password	Enter the authentication password of the service account
Server Name	It configures the server name for account X.
Activate	Whether the service of the line should be activated
SIP Proxy Server Address	Enter the IP or FQDN address of the SIP proxy server
SIP Proxy Server Port	Enter the SIP proxy server port, default is 5060
Packup Provis Corson Address	It configures the IP address (or domain name) of the outbound
Backup Proxy Server Address	proxy server 1 for account X.
Rackup Provy Sorver Port	It configures the port of the outbound proxy server 1 for
Backup Proxy Server Port	account X.
Outhound Provis Address	Enter the IP or FQDN address of outbound proxy server
Outbound Proxy Address	provided by the service provider
Outbound Proxy Port	Enter the outbound proxy port, default is 5060
Realm	Enter the SIP domain if requested by the service provider
Codec Settings	Set the priority and availability of the codecs by adding or
Codec Settings	remove them from the list.
Advanced Settings	
Call Forward Unconditional	Enable unconditional call forward, all incoming calls will be
Call Forward Unconditional	forwarded to the number specified in the next field
Call Forward Number for Unconditional	Set the number of unconditional call forward
	Enable call forward on busy, when the phone is busy, any
Call Forward on Busy	incoming call will be forwarded to the number specified in the
	next field
Call Forward Number for Busy	Set the number of call forward on busy
Call Forward on No Answer	Enable call forward on no answer, when an incoming call is not
	answered within the configured delay time, the call will be
	forwarded to the number specified in the next field
Call Forward Number for No	Set the number of call forward on no answer
Answer	Set the number of call forward off no allswer
Call Forward Delay for No	Set the delay time of not answered call before being forwarded
Answer	Set the dolay time of het driewered can before being forwarded

Hotline Delay   it	110071(21 11001	2 - 2 - 1 - 1 - 1
Enable Hotline  Inumber immediately at audio channel opened by off-hook handset or turn on hands-free speaker or headphone  Bott the hotline dialing number  Enable Auto Answering  Auto Answering Delay  Enable auto-answering, the incoming calls will be answered automatically after the delay time  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  Waiting  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the user agent, the default is Model with Software Version.  Whether to add quote in display name  Set the ting tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Hotline Delay	Set the delay for hotline before the system automatically dialed it
Enable Hotline  Inumber immediately at audio channel opened by off-hook handset or turn on hands-free speaker or headphone  Bott the hotline dialing number  Enable Auto Answering  Auto Answering Delay  Enable auto-answering, the incoming calls will be answered automatically after the delay time  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  Waiting  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the user agent, the default is Model with Software Version.  Whether to add quote in display name  Set the ting tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec		Enable hotline configuration, the device will dial to the specific
Hotline Number  Enable Auto Answering  Enable auto-answering, the incoming calls will be answered automatically after the delay time  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server Woice Message Number  Voice Message Subscribe Period  Enable DND  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  waiting  Anonymous Call Standard  Dial Without Registered  Set the standard to be used for anonymous  Dial Without Registered  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response	Enable Hotline	
Enable Auto Answering  Enable auto-answering, the incoming calls will be answered automatically after the delay time  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Voice Message Subscribe Period  Enable DND  Enable Donot-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  Waiting  Reject any incoming call without presenting caller ID  Use 182 Response For Call  Waiting  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response		handset or turn on hands-free speaker or headphone
Enable Auto Answering  Auto Answering Delay  Auto Answering Delay  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the pype of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Missed Call Log  If setting enabled, the device will use single codec in response	Hotline Number	
Enable Auto Answering  Auto Answering Delay  Auto Answering Delay  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the pype of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Missed Call Log  If setting enabled, the device will use single codec in response		Enable auto-answering, the incoming calls will be answered
Auto Answering Delay  Set the delay for incoming call before the system automatically answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Set the number for retrieving voice message  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  Waiting  Anonymous Call Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the line of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Missed Call Log  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response	Enable Auto Answering	
Auto Answering Delay  answered it  Enable the device to subscribe a voice message waiting notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server  Voice Message Number  Set the number for retrieving voice message  Voice Message Subscribe Period  Set the interval of voice message notification subscription  Enable DND  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Use 182 Response for Call  Waiting  Anonymous Call Standard  Dial Without Registered  Set the standard to be used for anonymous  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set theyo fo call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Wissed Call Log  If setting enabled, the device will use single codec in response  Response Single Codec		Set the delay for incoming call before the system automatically
Subscribe For Voice Message notification, if enabled, the device will receive notification from the server if there is voice message waiting on the server Voice Message Subscribe Period Set the number for retrieving voice message  Voice Message Subscribe Period Set the interval of voice message notification subscription  Enable DND Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call Reject any incoming call without presenting caller ID  Use 182 Response for Call Set the device to use 182 response code at call waiting response  Anonymous Call Standard Set the standard to be used for anonymous  Dial Without Registered Set call out by proxy without registration  Click To Talk Enable click to dial which is a SIP application.  User Agent Set the user agent, the default is Model with Software Version.  Use Quote in Display Name Whether to add quote in display name  Ring Type Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number Set the conference room number when conference type is set to be Server  Transfer Timeout Set the timeout of call transfer process  Enable Long Contact Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Auto Answering Delay	
the server if there is voice message waiting on the server  Voice Message Number  Set the number for retrieving voice message  Voice Message Subscribe Period  Set the interval of voice message notification subscription  Enable DND  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties,  Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response		Enable the device to subscribe a voice message waiting
Voice Message Number  Voice Message Subscribe Period  Set the number for retrieving voice message  Voice Message Subscribe Period  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call  Waiting  Anonymous Call Standard  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties,  Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response	Subscribe For Voice Message	notification, if enabled, the device will receive notification from
Voice Message Subscribe Period  Enable DND  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call  waiting  Anonymous Call Standard  Dial Without Registered  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the timeout of call transfer process  Enable Long Contact  Enable Missed Call Log  Response Single Codec  Allow more parameters in contact field per RFC 3840  If setting enabled, the device will use single codec in response		the server if there is voice message waiting on the server
Enable DND  Enable Do-not-disturb, any incoming call to this line will be rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Set the device to use 182 response code at call waiting waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Voice Message Number	Set the number for retrieving voice message
Enable DND  rejected automatically  Reject any incoming call without presenting caller ID  Use 182 Response for Call waiting  Reject any incoming call without presenting caller ID  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Voice Message Subscribe Period	Set the interval of voice message notification subscription
rejected automatically  Blocking Anonymous Call  Reject any incoming call without presenting caller ID  Use 182 Response for Call waiting  Anonymous Call Standard  Set the device to use 182 response code at call waiting response  Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  User Agent  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec		Enable Do-not-disturb, any incoming call to this line will be
Use 182 Response for Call waiting Robusting Robusting Set the device to use 182 response code at call waiting response Anonymous Call Standard Set the standard to be used for anonymous Dial Without Registered Set call out by proxy without registration Click To Talk Enable click to dial which is a SIP application. User Agent Use Quote in Display Name Ring Type Set the user agent, the default is Model with Software Version. Use Quote in Display Name Ring Type Set the ring tone type for the line Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server Set the conference room number when conference type is set to be Server Transfer Timeout Set the timeout of call transfer process Enable Long Contact Allow more parameters in contact field per RFC 3840 Enable Use Inactive Hold Use inactive mode for SIP hold negotiation If enabled, the phone will save missed calls into the call history record. Response Single Codec	Enable DND	rejected automatically
Anonymous Call Standard  Set the standard to be used for anonymous  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Blocking Anonymous Call	Reject any incoming call without presenting caller ID
Anonymous Call Standard  Dial Without Registered  Set call out by proxy without registration  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Whether to add quote in display name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response	Use 182 Response for Call	Set the device to use 182 response code at call waiting
Dial Without Registered  Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Enable Long Contact  Enable Use Inactive Hold  Response Single Codec  Set call out by proxy without registration  Enable vical which is a SIP application.  Set the device in display name  Set the line  Set the line  Set the specific registration  Set the time of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response	waiting	response
Click To Talk  Enable click to dial which is a SIP application.  User Agent  Set the user agent, the default is Model with Software Version.  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Enable Long Contact  Enable Use Inactive Hold  Enable Missed Call Log  Response Single Codec  Set the user agent, the default is Model with Software Version.  Whether to add quote in display name  Set the line  Set the line  Set the line  Set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Anonymous Call Standard	Set the standard to be used for anonymous
User Agent  Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Enable Long Contact  Enable Use Inactive Hold  Response Single Codec  Set the user agent, the default is Model with Software Version.  Whether to add quote in display name  Set the line  Set the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Dial Without Registered	Set call out by proxy without registration
Use Quote in Display Name  Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Click To Talk	Enable click to dial which is a SIP application.
Ring Type  Set the ring tone type for the line  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	User Agent	Set the user agent, the default is Model with Software Version.
Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Transfer Timeout  Enable Long Contact  Enable Use Inactive Hold  Enable Missed Call Log  Set the type of call conference, Local=set up call conference by the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec	Use Quote in Display Name	Whether to add quote in display name
the device itself, maximum supports two remote parties, Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout Set the timeout of call transfer process  Enable Long Contact Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Ring Type	Set the ring tone type for the line
Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  Enable Missed Call Log  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response		Set the type of call conference, Local=set up call conference by
Server=set up call conference by dialing to a conference room on the server  Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Conference Type	the device itself, maximum supports two remote parties,
Server Conference Number  Set the conference room number when conference type is set to be Server  Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Conference Type	Server=set up call conference by dialing to a conference room
Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Enable Use Inactive Hold  Enable Missed Call Log  Response Single Codec  to be Server  Set the timeout of call transfer process  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  If setting enabled, the device will use single codec in response		on the server
Transfer Timeout  Set the timeout of call transfer process  Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Server Conference Number	Set the conference room number when conference type is set
Enable Long Contact  Allow more parameters in contact field per RFC 3840  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response		to be Server
Enable Use Inactive Hold  Use inactive mode for SIP hold negotiation  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Transfer Timeout	Set the timeout of call transfer process
Enable Missed Call Log  If enabled, the phone will save missed calls into the call history record.  Response Single Codec  If setting enabled, the device will use single codec in response	Enable Long Contact	Allow more parameters in contact field per RFC 3840
Enable Missed Call Log  record.  If setting enabled, the device will use single codec in response Response Single Codec	Enable Use Inactive Hold	Use inactive mode for SIP hold negotiation
record.  If setting enabled, the device will use single codec in response Response Single Codec	Enable Missed Call Log	If enabled, the phone will save missed calls into the call history
Response Single Codec	Enable Missed Call Log	record.
to an incoming call request	Response Single Codec	If setting enabled, the device will use single codec in response
		to an incoming call request

	When this setting is enabled, the features in this section will not
Use Feature Code	be handled by the device itself but by the server instead. In
	order to control the enabling of the features, the device will
	send feature code to the server by dialing the number specified
	in each feature code field.
Enable DND	Set the feature code to dial to the server
DND Disabled	Set the feature code to dial to the server
Enable Call Forward	Set the feature code to dial to the server
Unconditional	Set the leature code to dian to the server
Disable Call Forward	Set the feature code to dial to the server
Unconditional	Set the leature code to dial to the server
Enable Call Forward on Busy	Set the feature code to dial to the server
Disable Call Forward on Busy	Set the feature code to dial to the server
Enable Call Forward on No	Set the feature code to dial to the server
Answer	Set the leature code to dial to the server
Disable Call Forward on No	Set the feature code to dial to the server
Answer	Set the leature code to dial to the server
Enable Blocking Anonymous Call	Set the feature code to dial to the server
Disable Blocking Anonymous Call	Set the feature code to dial to the server
Enable Send Anonymous	Set the feature code to dial to the server
Disable Send Anonymous	Set the feature code to dial to the server
Enable Call Waiting	Set the feature code to dial to the server
Disable Call Waiting	Set the feature code to dial to the server
Specific Server Type	Set the line to collaborate with specific server type.
Registration Expiration	Set the SIP expiration interval
Use VPN	Set the line to use VPN restrict route
Use STUN	Set the line to use STUN for NAT traversal
Convert URI	Convert digit and alphabet characters to %hh hex code
DTMF Type	Set the DTMF type to be used for the line
DTMF SIP INFO Mode	Set the SIP INFO mode to send '*' and '#' or '10' and '11'
Transportation Protocol	Set the line to use TCP or UDP for SIP transmission
SIP Version	Set the SIP version
Caller ID Header	Set the Caller ID Header
	Enables the use of strict routing. When the phone receives
Enable Strict Proxy	packets from the server,it will use the source IP address, not
	the address in via field.
Enable user=phone	Sets user=phone in SIP messages.
Enable SCA	Enable/Disable SCA (Shared Call Appearance )
Enable BLF List	Enable/Disable BLF List
1	

1100/1121 11001	oser man
DNS Mode	Select the DNS mode.
Keep Alive Type	Set the line to use dummy UDP or SIP OPTION packet to keep
	NAT pinhole opened
Keep Alive Interval	Set the keep alive packet transmitting interval
Sync Clock Time	Time Sycn with server
	Set the line to enable call ending by session timer refreshment.
Enable Session Timer	The call session will be ended if there is not new session timer
	event update received after the timeout period
Session Timeout	Set the session timer timeout period
Enable Rport	Set the line to add rport in SIP headers
Enable PRACK	Set the line to support PRACK SIP message
1/ A	Keep the authentication parameters from previous
Keep Authentication	authentication
Auto TOD	Using TCP protocol to guarantee usability of transport for SIP
Auto TCP	messages above 1500 bytes
Enable Feature Sync	Feature Sycn with server
Enable GRUU	Support Globally Routable User-Agent URI (GRUU)
	The registered server will receive the subscription package
	from ordinary application of BLF phone.
BLF Server	Please enter the BLF server, if the sever does not support
	subscription package, the registered server and subscription
	server will be separated.
RI E List Number	BLF List allows one BLF key to monitor the status of a group.
BLF List Number	Multiple BLF lists are supported.
DTD Encryption	Enable RTP encryption such that RTP transmission will be
RTP Encryption	encrypted
RTP Encryption Key	Set the pass phrase for RTP encryption
VQ name	SIP voice quality monitor server's name.
VQ port	SIP voice quality monitor server's port.
<del></del>	
VQ address	SIP voice quality monitor server's address

#### 8.13. Line / Dial Plan

#### 8.13.1. Line / Dial Plan / Basic Settings

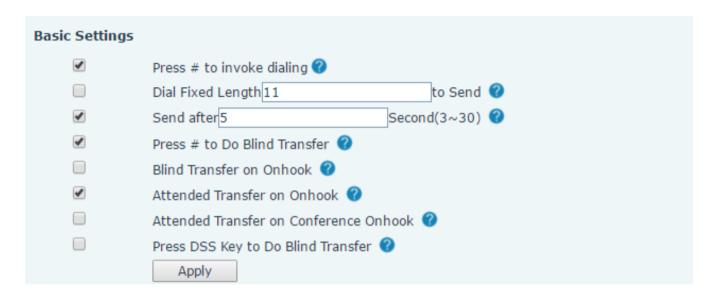


Figure 66 - Dial Plan Configuration

The device supports 8 dialing modes:

- Press # to invoke dialing Dial the desired number, and press # to send it to the server.
- Dial Fixed Length Configure the fixed length to dial out
- Send after seconds Number will be sent to the server after the specified time.
- Press # to Do Blind Transfer Press # after entering the target number for the transfer. The phone will transfer the current call to the third party.
- Blind Transfer on Onhook Hang up after entering the target number for the transfer. The phone will transfer the current call to the third party.
- Attended Transfer on Onhook Hang up after the third party answers. The phone will transfer the current call to the third party.
- Attended Transfer on Conference Onhook Hang up during a 3-way conference call, the other two ways will make a call.
- Press DSS Key to Do Blind Transfer When user is in the 'XFER' screen, user can fulfill Blind Transfer by pressing DSS Key.

#### 8.13.2. Line / Dial Plan / Dail Peer

This functionality offers you more flexible dial rule, you can refer to the following content to know how to use this dial rule.

Table 3 - Dial Peer Settings for Lines on Web

Parameters	Description	
	There are two types of matching: Full Matching or Prefix Matching. In Full	
	matching, the entire phone number is entered and then mapped per the Dial	
Phone number	Peer rules.	
Phone number	In prefix matching, only part of the number is entered followed by T. The	
	mapping with then take place whenever these digits are dialed. Prefix mode	
	supports a maximum of 30 digits.	
Note: Two differen	t special characters are used.	
■ x Matches any single digit that is dialed.		
■ [] Specifies a range of numbers to be matched. It may be a range, a list of ranges separated		
by commas, or a list of digits.		
Destination	nation Set Destination address. This is for IP direct.	
Port	Set the Signal port, and the default is 5060 for SIP.	
Alias	Set the Alias. This is the text to be added, replaced or deleted. It is an optional	
Allas	item.	
Note: There are four types of aliases.		
■ all: xxx – xxx will replace the phone number.		
■ add: xxx – xxx will be dialed before any phone number.		
■ del –The characters will be deleted from the phone number.		
■ rep: xxx – xxx will be substituted for the specified characters.		
Suffix	Characters to be added at the end of the phone number. It is an optional item.	
Doloto Longth	Set the number of characters to be deleted. For example, if this is set to 3, the	
Delete Length	phone will delete the first 3 digits of the phone number. It is an optional item.	

#### **Examples of different alias application**

This feature allows the user to create rules to make dialing easier. There are several different options for dial rules. The examples below will show how it works.

#### **Example 1: Global Substitution**

It seems like a shortcut to dial out. When user dial "32", the dialed number will be replaced of "833333". But if user dials "322", the device will still send "322" rather than "8333332". The replacement rules should be matched globally.

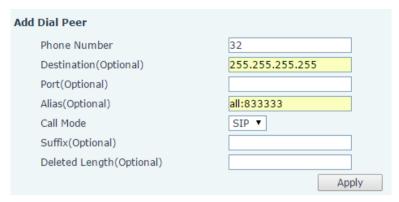


Figure 67 - Global Substitution Configuration

#### **Example 2: Local Substitution**

To dial a long distance call to Beijing requires dialing area code 010 before the local phone number. Using this feature 1 can be substituted for 010. For example, to call 62213123 would only require dialing 162213123 instead of 01062213123.

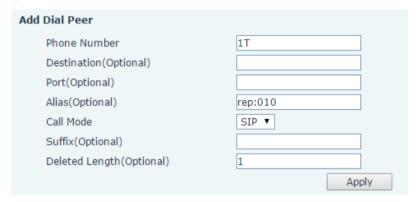


Figure 68 - Local Substitution Configuration

#### **Example 3: Add Prefixes**

If the dialed number starts with the fixed prefix number, the phone will send out your dialed phone number adding prefix number automatically.

For example, when users dial "9312", the device will send out "0079312".

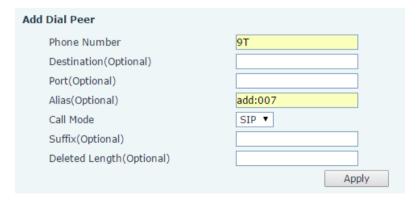


Figure 69 - Add Prefixes Configuration

#### **Example 4: Add Suffixes**

If the dialed number ends with the fixed suffix number, the phone will send out your dialed phone number adding suffix number automatically.

For example, when users dial "1383322", the device will send out "13833220088".



Figure 70 - Add Suffixes Configuration

#### **Example 5: Deletion**

If the dialed number ends with the fixed prefix number, the phone will send out your dialed phone number deleting prefix number automatically.

For example, when users dial "98322", the device will send out "8322".

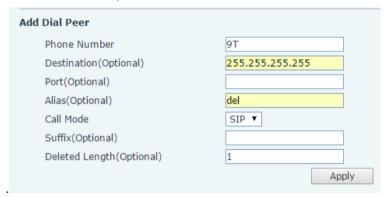


Figure 71 - Deletion Configuration

# 8.14. Line / Basic Settings

Configure basic settings for lines.

Table 4 - Basic Settings for Lines on Web

Parameters	Description
SIP Settings	
Registration Failure Retry Interval	Set the retry interval of SIP REGISTRATION when registration
	failed.
SIP Invite Restrict	Reject incoming SIP call via direct IP.
Enable SMS direct display	Enable the receive message and display

Enable Received SMS Save	Enable the receive message and save	
Enable Received SMS Ring	Enable the message after receiving, and phone will ringing	
STUN Settings		
Server Address	Set the STUN server address	
Server Port	Set the STUN server port, default is 3478	
Binding Period	Set the STUN binding period which can be used to keep the	
	NAT pinhole opened.	
SIP Waiting Time	Set the timeout of STUN binding before sending SIP messages	
TLS Certification File	Upload or delete the TLS certification file used for encrypted	
	SIP transmission.	

## 8.15. LINE / RTCP-XR

Table 5 - RTCP-XR for Lines on Web

Parameters	Description
VQ RTCP-XR Session Report	Enable/Disable RTCP-XR session report
VQ RTCP-XR Interval Report	Enable/Disable RTCP-XR interval report
Period for Interval Report(5~99)	Set the interval for RTCP-XR interval report
Warning threshold for Moslq(15~40)	Set the warning threshold for Moslq
Critical threshold for Moslq(15~40)	Set the critical threshold for Moslq
Warning threshold for Delay(10~2000)	Set the warning threshold for Delay
Critical threshold for Delay(10~2000)	Set the critical threshold for Delay
Display Report options on phone	Enable/Disable display report on phone
Display Report options on Web	Enable/Disable display report on web

# 8.16. Line / SIP Hotspot

Table 6 - SIP Hotspot settings for Lines on Web

Parameters	Description
Enable Hotspot	Enable hotspot function.
Mode	Hot types, divided into clients and hot spots.
Monitor Type	Hotspot monitor types, including group broadcast and broadcast.
Monitor Address	It shows the Hotspot listening address.
Remote Port	Set the remote port
Local Port	It shows the Hotspot listening port.
Name	It sets the name of the hot spot.

# 8.17. Phone Settings/ Features

# 8.17.1. Phone Settings/ Features / Common Settings

Table 7 - Common Phone Feature Settings on Web

Parameters	Description
	Configure the Phone DND
DND Mode	If enable Phone DND, the phone rejects any incoming call, the caller
	will automatically prompt hang up.
D 0 1 :	If you select Ban Outgoing to enable it, and you cannot dial out any
Ban Outgoing	number.
Franks Call Waiting	Enable this setting to allow user to take second incoming call during
Enable Call Waiting	an established call. Default enabled.
Enable Call Waiting Tana	Turn off this feature, and you will not hear a 'beep' sound in talking
Enable Call Waiting Tone	mode when there is another incoming call
Enable Call Transfer	Enable Call Transfer
Semi-Attended Transfer	If enabled, Semi-Attended Transfer is allowed.
Enable 3-way conference	Enable 3-way conference
	If enabled in speakerphone mode, the phone will automatically hang
Enable Auto Handdown	up and return to idle when the distant party terminates the call. In
	handset mode, it will play dial tone instead of returning to idle.
Enable Auto Redial	If enabled, the phone will automatically redial a call if a busy tone is
Enable Auto Redial	received.
Auto Redial Times	Maximum number of auto redial attempts.
Enable Call History	Enable Call History
Auto Redial Interval	Wait time between auto redial attempts in seconds.
	Specify Auto handdown time, the phone will hang up and return to the
Auto Hand up Delay	idle automatically after Auto Hand down time at hands-free mode, and
	play dial tone Auto handdown time at handset mode
Enable Call Completion	Enable Call Completion by selecting it, If the dialed line is busy, the sip
	server will inspect the dialed line status at intervals. If the dialed line is
	idle, the server will send notify message to inform the caller whether
	redial.
Hide DTMF	Configure the hide DTMF mode
Enable Pre-Dial	Disable this feature, user entering number will open audio channel
	automatically.
	Enable the feature, user enter the number without opening audio
	channel.
Enable Silent Mode	Enable Silent Mode by selecting it, the phone light will red blink to
LHADIC CHEHL WILLE	remind that there is a missed call instead of playing ring tone.

Enable Intercom When intercom is enabled, the device will accept the incoming call request with a SIP header of Alert-Info instruction to automatically answer the call after specific delay.  Enable Intercom Mute Enable mute mode during the intercom call  Enable Intercom Tone If the incoming call is intercom call, the phone plays the intercom tone Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  Auto Headset When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix Configure the prefix of the password call number  Enable Phone DND Enable Phone DND  DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Intercom Mute Enable Intercom Mute Enable Intercom Mute Enable Intercom Tone If the incoming call is intercom call, the phone plays the intercom tone Enable Intercom Barge Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  Auto Headset  When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password Dial Prefix  Configure the prefix of the password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Intercom Mute Enable mute mode during the intercom call Enable Intercom Tone  If the incoming call is intercom call, the phone plays the intercom tone Enable Intercom Barge  Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Intercom Tone  If the incoming call is intercom call, the phone plays the intercom tone  Enable Intercom Barge  Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Emergency Call Number  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Intercom Barge  Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  Auto Headset  When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Intercom Barge intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call  Auto Headset When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Ring From Headset Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix Configure the prefix of the password call number  Enable Phone DND Enable Phone DND  DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Auto Headset  Men this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Auto Headset  When this item is checked, the device will auto-answer phone calls by headset if the auto-answer or intercom is enabled.  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Set the device to accept Active URI command from specific IP
Auto Headset  Ring From Headset  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial Prefix  Password Dial Prefix  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Ring From Headset  Enable Ring From Handset by selecting it, the phone plays ring tone from handset.  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Emergency Call Number  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Emergency Call Number  Configure the Emergency Call Number. Despite the keyboard is locked, you can dial the emergency call number  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Password Dial  Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix Configure the prefix of the password call number  Enable Phone DND Enable Phone DND  DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Enable Password Dial by selecting it, When number entered is beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix Configure the prefix of the password call number  Enable Phone DND Enable Phone DND  DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
beginning with the password prefix, the following N numbers after the password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Password Dial  password prefix will be hidden as *, N stand for the value which you enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on call rejection  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
enter in the Password Length field. For example: you set the password prefix is 3, enter the Password Length is 2, then you enter the number 34567, it will display 3**67 on the phone.  Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
the number 34567, it will display 3**67 on the phone.  Password Dial Prefix Configure the prefix of the password call number  Enable Phone DND Enable Phone DND  DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Password Dial Prefix  Configure the prefix of the password call number  Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
Enable Phone DND  Enable Phone DND  DND Response Code  Set the SIP response code on call rejection on DND  Busy Response Code  Set the SIP response code on line busy  Reject Response Code  Set the SIP response code on call rejection  Encryption Number Length  Configure the Encryption Number length  Restrict Active URI Source  Set the device to accept Active URI command from specific IP
DND Response Code Set the SIP response code on call rejection on DND  Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Busy Response Code Set the SIP response code on line busy  Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Reject Response Code Set the SIP response code on call rejection  Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Encryption Number Length Configure the Encryption Number length  Restrict Active URI Source Set the device to accept Active URI command from specific IP
Restrict Active URI Source Set the device to accept Active URI command from specific IP
·
IP address.
Configure the Push XML Server, when phone receives request, it will
Push XML Server determine whether to display corresponding content on the phone
which sent by the specified server or not.
Allow IP Call If enabled, user can dial out with IP address
Enable phone to make calls for 10 lines max, or disable for 2 lines
Enable Multi Line max.
Play DTMF tone on the device when user pressed a phone digits at
Play Dialing DTMF Tone dialing, default enabled.
Enable Default Line  If enabled, user can assign default SIP line for dialing out rather than
SIP1.

Play Talking DTMF Tone	Play DTMF tone on the device when user pressed a phone digits
Thay failting DTIVII Tone	during taking, default enabled.
Enable Auto Switch Line	Enable phone to select an available SIP line as default automatically
O-llan Diamlan	Change caller ID display priority. The default priority is "Phonebook" >
Caller name Display	"SIP Display Name" > "SIP URI". User may select one of the options
Priority	to change the desired caller ID display priority.
Hotline Number	Set the Hot line Number
Hotline Delay	Set the Hot line Delay time.
Enable Number Privacy	Privacy for incoming call's caller ID.
Matching Direction	Privacy rule for incoming call's caller ID.
Starting Position	caller ID hidden postion.
Hide Digits	caller ID hidden digits length.

## 8.17.2. Phone Settings/ Features / Power Led Settings

Table 8 - Power Led Settings on Web

Parameters	Description		
Talking LED(priority level fr	Talking LED(priority level from high to low):		
Ringing	settings the power led state when the phone ring.		
Hold/Held	settings the power led state when the call hold.		
Mute	settings the power led state when talking was mute.		
Talk/Dial	settings power led state when talking.		
Common LED(priority level from high to low):			
Missed Call	settings the power led state when the phone have miss call.		
SMS/MWI	settings the power led state when the phone have mwi or sms.		
Common	the default state of power led.		

## 8.17.3. Phone Settings/ Features / Action URL

URL for various actions performed by the phone. These actions are recorded and sent as xml files to the server. Sample format is http://InternalServer /FileName.xml

#### 8.18. Phone / Audio

Change the audio settings.

Table 9 - Audio Settings on Web

Parameters	Description	
First Codec	The first preferential DSP	

1100/KLF1100F	USEI IVIAI	
	codec:G.711A/U,G.722,G.723,G.729,G.726-32,	
	ILBC,AMR,AMR-WB	
	The second preferential DSP codec:	
Second Codec	G.711A/U,G.722,G.723,G.729,G.726-32,	
	ILBC,AMR,AMR-WB,NONE	
	The third preferential DSP codec:	
Third Codec	G.711A/U,G.722,G.723,G.729,G.726-32 ,	
	ILBC,AMR,AMR-WB,NONE	
	The forth preferential DSP codec:	
Fourth Codec	G.711A/U,G.722,G.723,G.729,G.726-32 ,	
	ILBC,AMR,AMR-WB,NONE	
	The fifth preferential DSP codec:	
Fifth Codec	G.711A/U,G.722,G.723,G.729,G.726-32,	
	ILBC,AMR,AMR-WB,NONE	
	The sixth preferential DSP codec:	
Sixth Codec	G.711A/U,G.722,G.723,G.729,G.726-32,	
	ILBC,AMR,AMR-WB,NONE	
	Configure the least reflection time of Hand down, the default is	
Onhook Time	200ms.	
Handset Volume	Set the Handset volume, the value must be 1~9	
	Set the country standard of call progress tones, including dial tone,	
Tone Standard	busy tone, ring-back tone, etc.	
	Set the default ring type. If the caller ID of an incoming call was not	
Default Ring Type	configured with specific ring type, the default ring will be used.	
Speakerphone Volume	Set the speakerphone volume, the value must be 1~9	
Headset Ring Volume	Set the ring volume in the headset, the value must be 0~9	
Headset Volume	Set the Headset volume, the value must be 1~9	
Speakerphone Ring Volume	Set the ring volume in the speakerphone, the value must be 0~9	
	This is to adjust the base volume of the headset. Please note when	
Headset Volume Offset	set the volume at the maximum level it may create noise and	
	decrease the echo canceller.	
Headset Mic Offset	This is to adjust the base volume of the headset Mic.	
G.729AB Payload Length	Set G729 Payload Length.	
G.723.1 Bit Rate	5.3kb/s or 6.3kb/s is available	
G.722 Timestamps	160/20ms or 320/20ms is available	
DTMF Payload Type Enter the DTMF payload type, the value must be 96~1		
	Enable Voice Activity Detection. When enabled, the device will	
Enable VAD	suppress the audio transmission with artificial comfort noise signal	
LIGOIC VILD	to save the bandwidth.	
	to save the panawidth.	

Enable MWI Tone	The phone will play MWI tone when a new MWI Comes

#### 8.19. Phone / MCAST

This feature allows user to make some kind of broadcast call to people who are in multicast group. User can configure a multicast DSS Key on the phone, which allows user to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Table 10 - MCAST Parameters on Web

Parameters Description		
Driority	Define the priority of the active call, 1 is the highest priority, 10 is the	
Priority	lowest.	
Enghla Daga Driarity	The voice call in progress shall take precedence over all incoming	
Enable Page Priority	paging calls.	
Name Listened multicast server name		
Host:port Listened multicast server's multicast IP address and port.		

#### 8.20. Phone / Time/Date

User can configure the device time settings in this page.

Table 11 - Time/Date Setting Parameters on Web

Parameters	Description	
Network Time Server Settings		
Time Synchronized via SNTP	Enable time-sync through SNTP protocol	
Time Synchronized via DHCP	Enable time-sync through DHCP protocol	
Primary Time Server	Set primary time server address	
	Set secondary time server address, when primary server is not	
Secondary Time Server	reachable, the device will try to connect to secondary time	
	server to get time synchronization.	
Timezone	Select the time zone	
Resync Period	Time of re-synchronization with time server	
12-Hour Clock	Set the time display in 12-hour mode	
Date Format	Select the time/date display format	
Daylight Saving Time Settings		
Location	Select the user's time zone specific area	
DOT 0. 4 T	Select automatic DST according to the preset rules of DST, or	
DST Set Type	the manually input rules	

Offset	The DST offset time	
Month Start	The DST start month	
Week Start	The DST start week	
Weekday Start	The DST start weekday	
Hour Start	The DST start hour	
Minute Start	The DST start minute	
Month End	The DST end month	
Week End	The DST end week	
Weekday End	The DST end weekday	
Hour End	The DST end hour	
Manual Time Settings	Set time manually	

#### 8.21. Phone / Advanced

User can configure the advanced configuration settings in this page.

- Screen Configuration.
  - Enable Energysaving
  - Backlight Time
- LCD Menu Password Settings.

The password is 123 by default.

- Keyboard Lock Settings.
  - PIN to Lock: It is configured to quickly lock the keyboard code, in the pre-dial interface, enter this number will quickly lock the keyboard.
  - Keyboard Password: It configures the password for unlocking the phone.
  - KeyLock Timeout: default is 0 s
  - Enable Keyboard Lock: It enables or disables the phone lock feature.
- Configure Greeting Words

The greeting message will display on the top left corner of the LCD when the device is idle, which is limited to 12 characters. The default chars are 'VOIP PHONE'.

#### 8.22. Phonebook / Contacts

User can add, delete, or edit contacts in the phonebook in this page. User can browse the phonebook and sorting it by name, phones, or filter them out by group.

To add a new contact, user should enter contact's information and press "Add" button to add it.

To edit a contact, click on the checkbox in front of the contact, the contact information will be copied to the contact edit boxes, press "Modify" button after finished editing.

To delete one or multiple contacts, check on the checkbox in front of the contacts wished to be deleted and click the "Delete" button, or click the "Clear" button with selecting any contacts to clear the phonebook.

User can also add multiple contacts into a group by selecting the group in the dropdown options in front Document Version 01 Copyright © Redstone Systems, Inc 53

of "Add to Group" button at the bottom of the contact list, selecting contacts with checkbox and click "Add to Group" to add selected contacts into the group.

#### 8.23. Phonebook / Cloud Phonebook

#### **■** Cloud Phonebook

User may configure up to 8 cloud phonebooks. Each cloud phonebook must be configured with an URL where an XML phonebook is stored. The URL may be based on HTTP/HTTPs or FTP protocol with or without authentication. If authentication is required, user must configure the username and password.

To configure a cloud phonebook, the following information should be entered,

Phonebook name (must)

Phonebook URL (must)

Access username (optional)

Access password (optional)

#### ■ LDAP Settings

The cloud phonebook allows user to retrieve contact list from a LDAP Server through LDAP protocols.

User must configure the LDAP Server information and Search Base to be able to use it on the device. If the LDAP server requests an authentication, user should also provide username and password.

To configure a LDAP phonebook, the following information should be entered,

Display Title (must)

LDAP Server Address (must)

LDAP Server Port (must)

Search Base (must)

Access username (optional)

Access password (optional)

#### 8.24. Phonebook / Blacklist

By adding a number into the blacklist, user will no longer receive phone call from that number and it will be rejected automatically by the device until user delete it from the blacklist.

User can add specific number to be blocked, or a prefix where any numbers matched the prefix will all be blocked.

#### 8.25. Phonebook / Advanced

User may export current phonebook in xml, csv, or vcf format file and save it locally on a computer. User can also import contacts into phonebook from an xml, csv, or vcf file.

NOTICE! If user repeatedly imports a same phonebook, it will *not* create duplicated contacts in user's phonebook.

User can add new group in this page or delete an existing one. Deleting a contact group will not delete the contacts in that group.

## 8.26. Call logs

User can browse complete call logs in this page, order the call logs by time, caller ID, contact name, duration, or line, and can also filter the call logs by the call log types, in, out, missed, or all.

User can save a call log into his/her phonebook or add it to the blacklist.

User can also make web call by click on the number of a call log.

## 8.27. Function key / Function Key

The device provides the navigational key state programmable function, user may configure key in this webpage.

Parameters	neters Description	
Desktop	The key function of the phone in standby mode.	
Dialer	The key function of the phone in the dial-up page.	
Calling	The key function of the phone in the calling page.	
Desktop Long Pressed When standby, long press the button function.		

**Table 12 - Function Key Setting Parameters on Web** 

## 8.28. Function key / Softkey

User can configure different functions in different screens for each softkey.

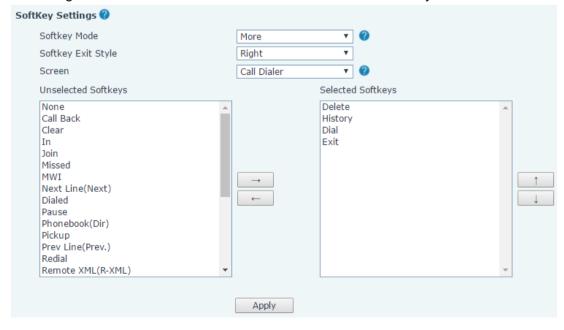


Figure 72 - Softkey Configuration

# 9. Advanced Features

#### 9.1. VPN

Virtual Private Network (VPN) is a technology to allow device to create a tunneling connection to a server and becomes part of the server's network. The network transmission of the device may be routed through the VPN server.

For some users, especially enterprise users, a VPN connection might be required to be established before activate a line registration. The device supports two VPN modes, Layer 2 Transportation Protocol (L2TP) and OpenVPN.

The VPN connection must be configured and started (or stopped) from the device web portal.

#### 9.1.1. L2TP

NOTICE! The device only supports non-encrypted basic authentication and non-encrypted data tunneling. For users who need data encryption, please use OpenVPN instead.

To establish a L2TP connection, users should log in to the device web portal, open page [Network] -> [VPN]. In VPN Mode, check the "Enable VPN" option and select "L2TP", then fill in the L2TP server address, Authentication Username, and Authentication Password in the L2TP section. Press "Apply" then the device will try to connect to the L2TP server.

When the VPN connection established, the VPN IP Address should be displayed in the VPN status. There may be some delay of the connection establishment. User may need to refresh the page to update the status.

Once the VPN is configured, the device will try to connect to the VPN automatically when the device boots up every time until user disable it. Sometimes, if the VPN connection does not established immediately, user may try to reboot the device and check if VPN connection established after reboot.

#### 9.1.2. OpenVPN

To establish an OpenVPN connection, user should get the following authentication and configuration files from the OpenVPN hosting provider and name them as the following,

OpenVPN Configuration file: client.ovpn

CA Root Certification: ca.crt
Client Certification: client.crt
Client Key: client.key

User then upload these files to the device in the web page [Network] -> [VPN], Section OpenVPN Files. Then user should check "Enable VPN" and select "OpenVPN" in VPN Mode and click "Apply" to enable OpenVPN connection.

Same as L2TP connection, the connection will be established every time when system rebooted until user disable it manually.

# 10. Trouble Shooting

When the device does not work properly, users may try the following methods to recover the device or gather relative information and send an issue report to support.

## 10.1. Get Device System Information

Users may get the device system information by pressing [Settings] -> [Status]. The following basic information will be provided:

Mode

ΙP

Software Version

More...

User can select [More] item to get more information in detail.

## 10.2. Upgrade to the latest software

Manufacturer will keep publishing software update to fix bugs and improve device features. The device will check for new software release on manufacturer cloud server automatically and periodically.

#### 10.3. Reboot Device

Users may reboot the device from soft-menu, [Menu] -> [Reboot System], and confirm the action by [Yes]. Or, simply remove the power supply and restore it again.

## 10.4. Reset Device to Factory Default

Reset Device to Factory Default will erase all user's configuration, preference, database and profiles on the device and restore the device back to the state as factory default.

To perform a factory default reset, user should [Menu] -> [Settings] -> [Advanced settings], and then input the password to enter the interface. Then choose [Reset to Default] and press [Enter], and confirm the action by [Yes]. The device will be rebooted into a clean factory default state.

## 10.5. Network Packets Capture

Sometimes it is helpful to dump the network packets of the device for issue identification. To get the packets dump of the device, user needs to log in the device web portal, open page [System] -> [Tools] and click [Start] in "Network Packets Capture" section. A pop-up message will be prompt to ask user to save the capture file. User then should perform relevant operations such as activate/deactivate line or making phone calls and click [STOP] button in the web page when operation finished. The network packets of the device during the period have been dumped to the saved file. User may examine the packets with a packet analyzer or send it to support.

## 10.6. Entering Post Mode and Recover System Image

# WARNING! PLEASE AVOID UPDATING SYSTEM IMAGE FROM POST MODE UNLESS THE SYSTEM IMAGE IS DAMAGED.

If the device could not boot up and entered into POST MODE, it is usually because of system image damaged due to power failure during software upgrade. When this occurs, users may follow below steps to restore the system image.

- **Step 1.** Download the latest device software.
- **Step 2.** Setup a FTP server on a PC and put the downloaded software in the FTP repository. (Windows users can download free FTP server software such as WFTPD32 or 3CDaemon)
- Step 3. Configure the PC with fixed IP address as 192.168.10.10
- Step 4. Connect device network with the PC.
- Step 5. Telnet from PC to device: >telnet 192.168.10.1
- **Step 6.** When telnet connection established, it will run POST maintenance tools, please select '2' FTP update image, and fill in required information to start the image update.
- Step 7. Once update finished, please select '4' to reboot the device.

## 10.7. Common Trouble Cases

**Table 13 - Trouble Cases** 

Trouble Case	Solution		
Device could not boot up	<ol> <li>The device is powered by external power supply via power adapter or PoE switch. Please use standard power adapter provided or PoE switch met with the specification requirements and check if device is well connected to power source.</li> <li>If you saw "POST MODE" on the device screen, the device system image has been damaged. Please refer to the instructions in "10.6" to restore the system image.</li> </ol>		
Device could not register to a service provider	<ol> <li>Please check if device is well connected to the network. The network         Ethernet cable should be connected to the</li></ol>		
No Audio or Poor Audio in Handset	<ol> <li>Please check if Handset is connected to the correct Handset ( ) port NOT Headphone ( ) port.</li> <li>The network bandwidth and delay may be not suitable for audio call at the moment.</li> </ol>		
Poor Audio or Low Volume in Headphone	<ol> <li>There are two Headphone wire sequence in the market. Please use the Headphone provided, or consult the wire sequence if you wish to use a third party headphone.</li> <li>The network bandwidth and delay may be not suitable for audio call at the moment.</li> </ol>		
Audio is chopping at far-end in Hands-free speaker mode	This is usually due to loud volume feedback from speaker to microphone.  Please lower down the speaker volume a little bit, the chopping will be gone.		

# Appendix I - Icon Illustration

Table 14 - Keypad Icons

Ô	Phone lock=long-pressed key(#)	
	Up	
•	Down	
$\mathbf{O}$	Hook off or call	
O	Redial	
<b>■(</b> 1))	Handsfree (HF) speaker	
\$	Mute microphone (during Call)	
┫-	Volume down (Left)	
+ ▶	Volume up (Right)	

**Table 15 - Status Prompt and Notification Icons** 

1+1	Call out
<b>.</b>	Call in
11	Call hold
	Network disconnected
8	Keypad locked
હ	Missed calls
:)	SMS
ഫ	New voice message waiting
0	Do-not-disturb activated on phone
11	Auto-answering activated
<u>⊏</u> 1	Call forward activated
•	Handsfree (HF) mode
O	Headphone (HP) mode
<b>C</b>	Handset (HS) mode
140	Microphone muted
2aB	Mixed type input
abc	Lower case input
ABC	Upper case input
123	Numeric input

# Appendix II - Text Input from Keypad

Table 16 - Look-up Table of Characters

Mode Icon	Text Mode	Key Button	Characters Of Each Press
		1	1
		2	2
		3	3
		4	4
		5	5
123	Numeric	6	6
17.0	Numenc	7	7
		8	8
		9	9
		0	0
		*	*#(space)@,.:/\$%&()<>[]"! =+-?
		#	#
		1	@/:+-%!
		2	abc
		3	d e f
		4	ghi
		5	jkl
аЬс	Lower Case	6	m n o
abc	Alphabets	7	pqrs
		8	tuv
		9	wxyz
		0	0
		*	*#(space)@,.:/\$%&()<>[]"! =+-?
		#	#

		1	@/:+-%!
ABC		<del>_</del>	
		2	ABC
		3	DEF
		4	GHI
		5	JKL
	Upper Case	6	MNO
	Alphabets	7	PQRS
		8	TUV
		9	WZYX
		0	(space)
		*	*#(space)@,.:/\$%&()<>[]"! =+-?
		#	#
2aB	Mixed type input	1	1@/:+-%!
		2	2 a b c A B C
		3	3 d e f D E F
		4	4 g h l G H l
		5	5jkIJKL
		6	6 m n o M N O
		7	7pqrsPQRS
		8	8 t u v T U V
		9	9 w z y x W Z Y X
		0	(space)
		*	*#(space)@,.:/\$%&()<>[]"! =+-?
		#	#